

SIDE WINDOW GLASS
(Fix Type)
COMPONENTS

B011X--01

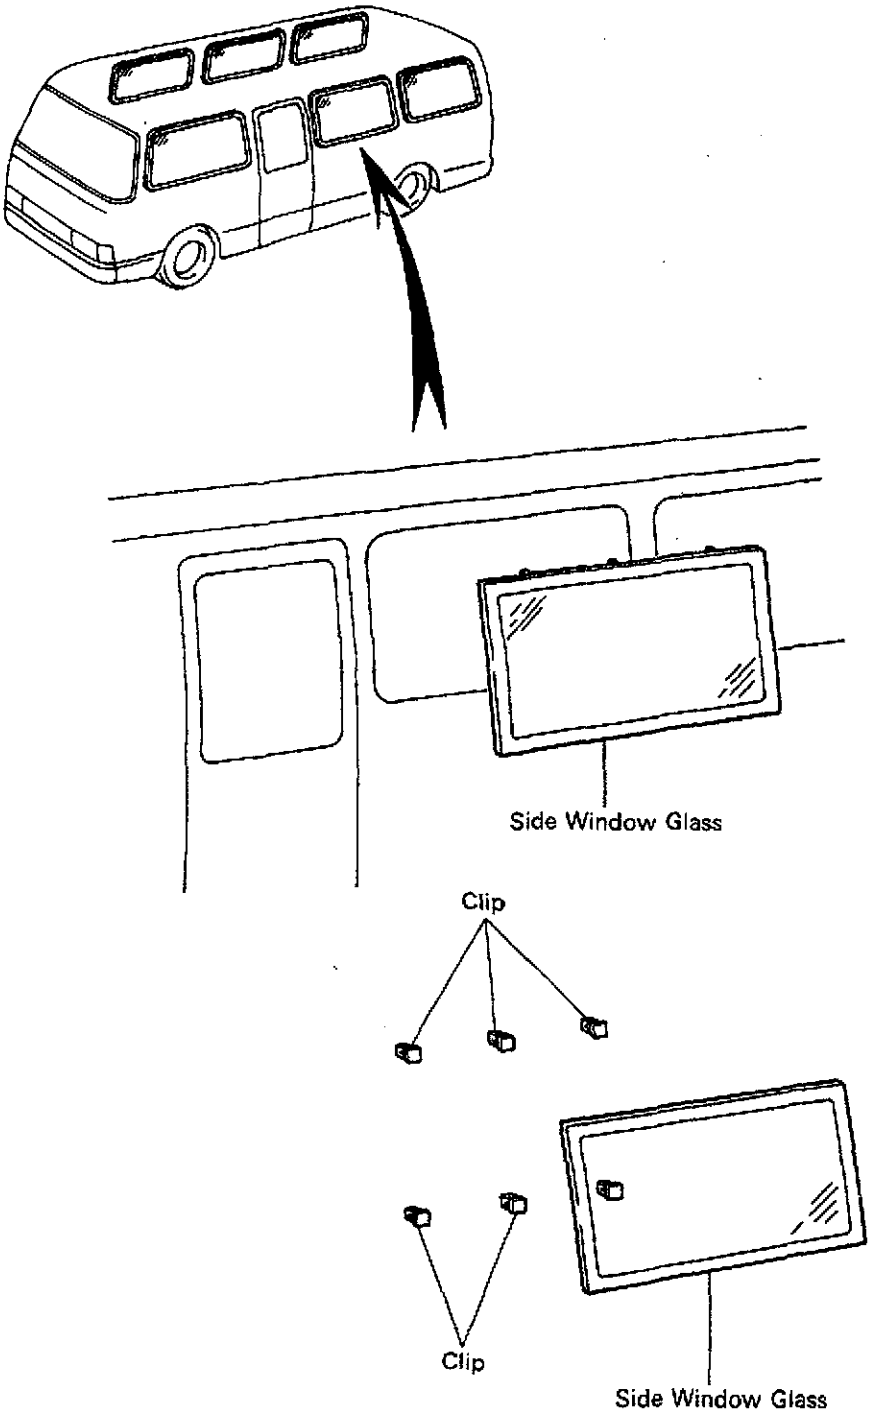

N07615

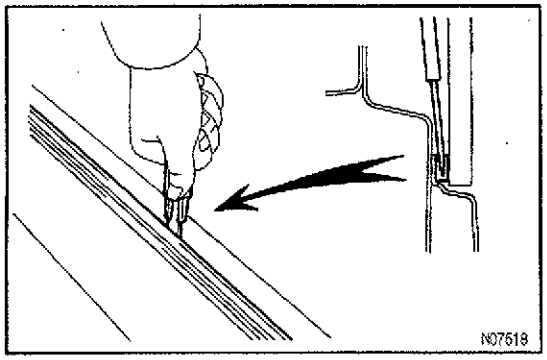


SIDE WINDOW GLASS REMOVAL


BO11Y–01

REMOVE SIDE WINDOW

(a) Using a knife, remove the side window by cutting the butyl tape.

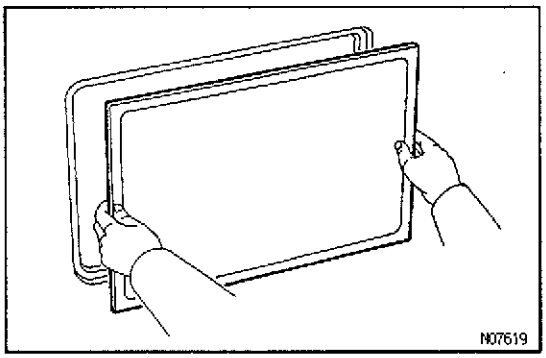

(b) Remove the side window.

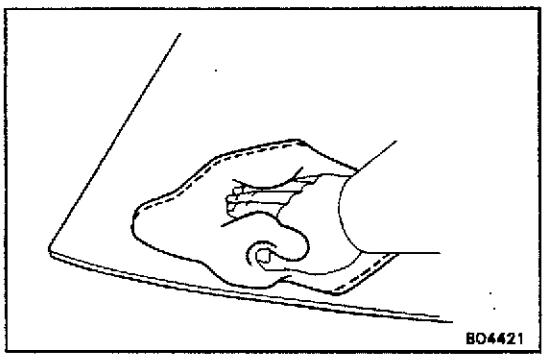


SIDE WINDOW INSTALLATION

BO11Z–01

BO


1. CLEAN BODY AND WINDOW GLASS

Using a cleaner, clean the surfaces contacting the body and glass.

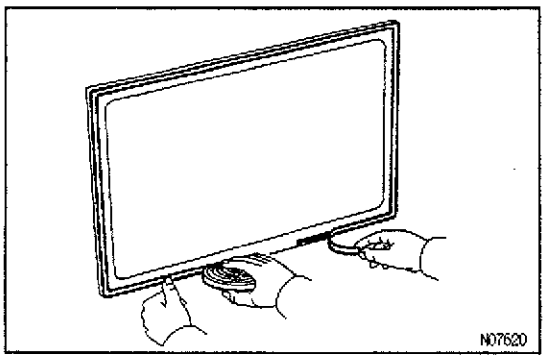

2. INSTALL SIDE WINDOW

(a) Apply butyl tape around the body surface.

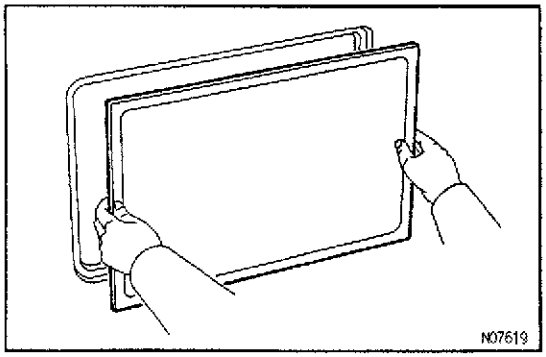

(b) Attach the side window to the body.