

BACK WINDOW GLASS (Lift–Up Type)

B012D–01

COMPONENTS

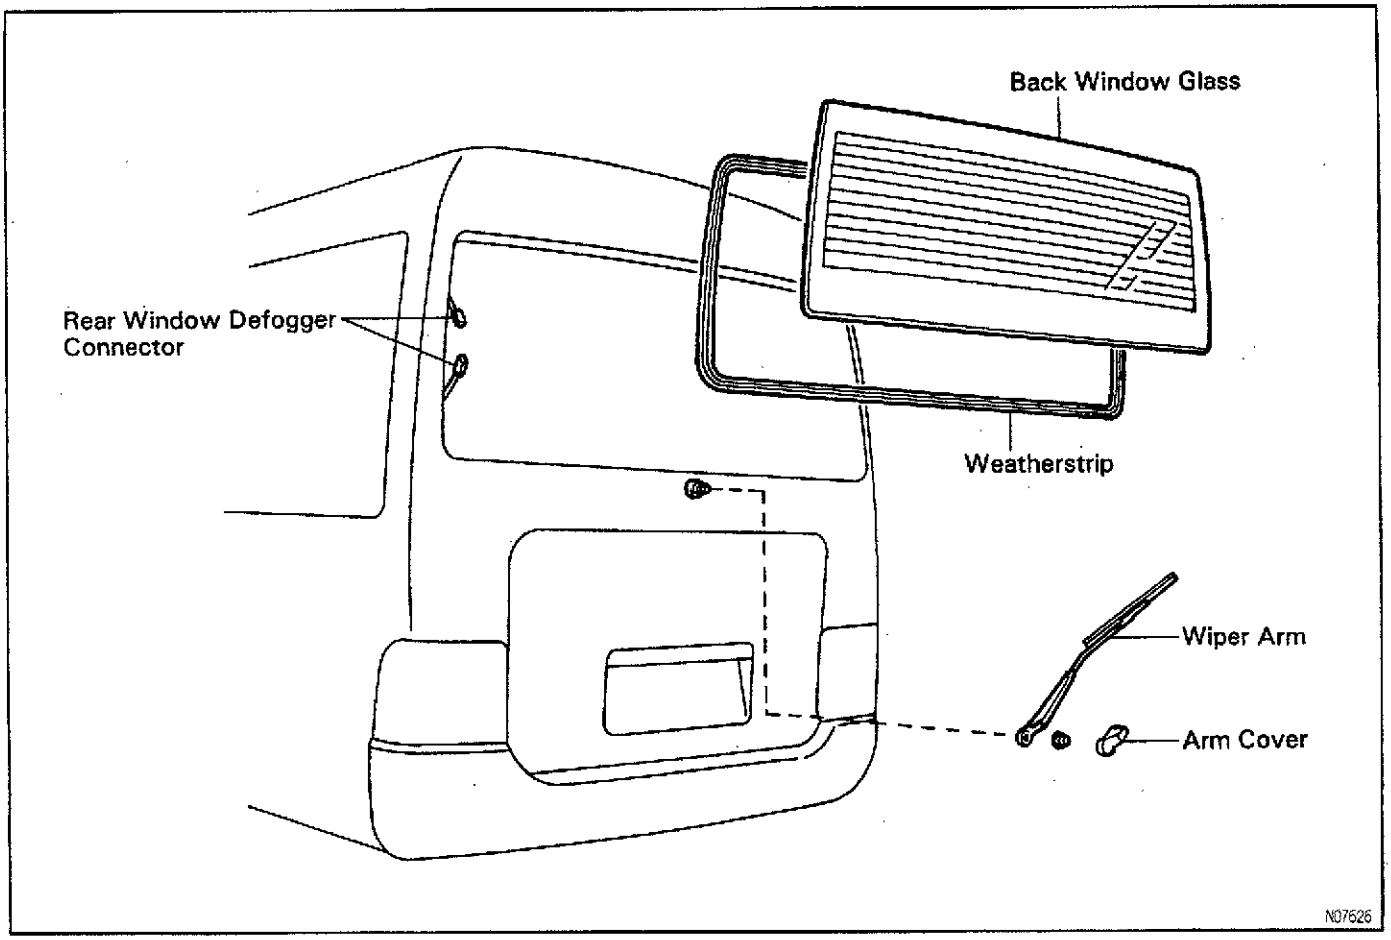


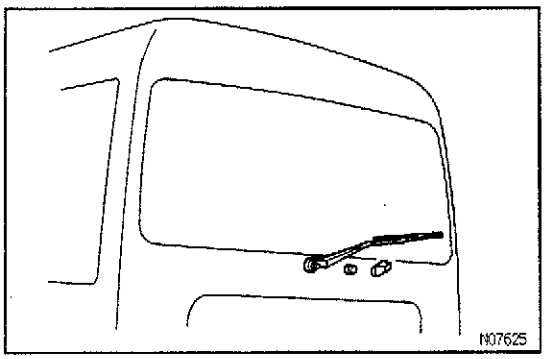

B012E–01


BACK WINDOW GLASS REMOVAL

1. **DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY**
2. **REMOVE WIPER ARM**
   Remove the arm cover, nut and wiper arm.
3. **DISCONNECT REAR WINDOW DEFOGGER CONNECTORS**

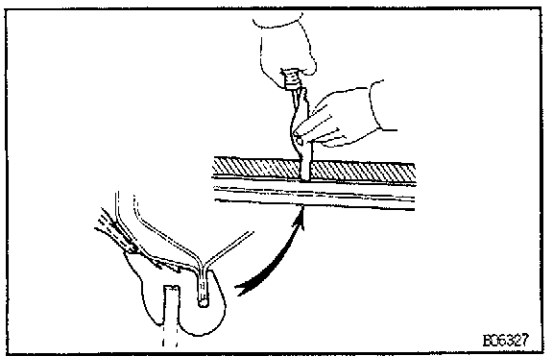


4. **REMOVE WINDOW GLASS**
   If reusing weatherstrip:

(a) Using a screwdriver, loosen the weatherstrip from the body.
NOTICE: Be careful not to damage the body.

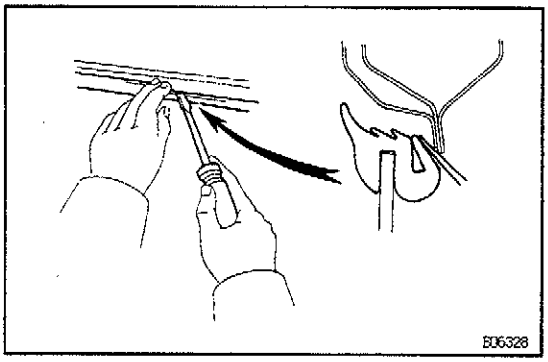


(b) Pry the weatherstrip lip outward from the interior portion of the body flange.
(c) Pull the glass outward, and remove it together with the weatherstrip.
(d) Remove the weatherstrip from the glass.

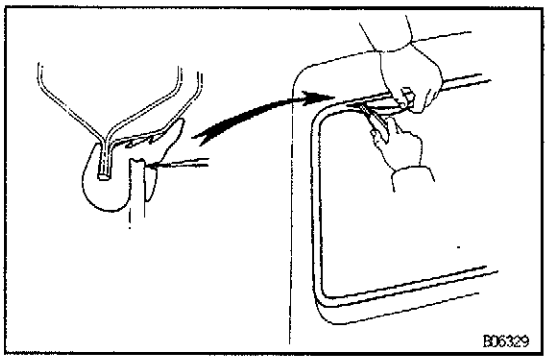


If using new weatherstrip:


(a) From the outside of the vehicle, cut off the weatherstrip lip with a knife.
NOTICE: Be careful not to damage the body.

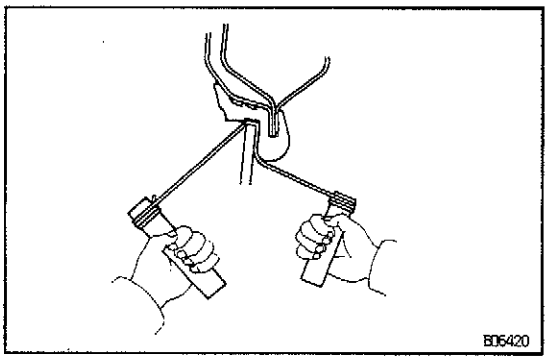

(b) Push piano wire through from the interior.
(c) Tie both wire ends to wooden blocks or equivalent.

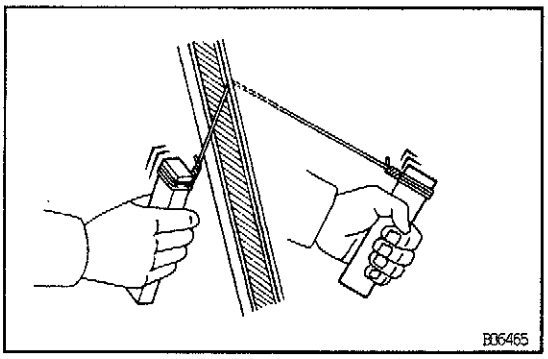

(d) Cut the adhesive by pulling the piano wire around it.
NOTICE: When separating, take care not to damage the paint and ornament.
(e) Remove the glass.
(f) Remove the weatherstrip.

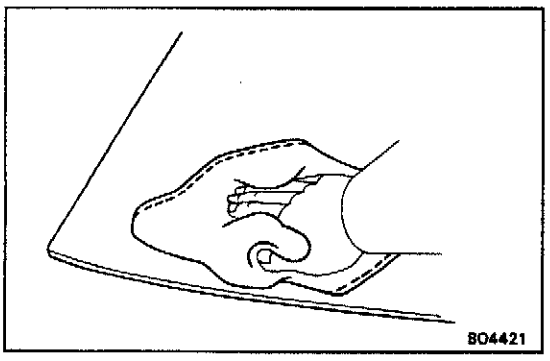


BACK WINDOW GLASS INSTALLATION

BO12F-01

1. CLEAN BODY AND WINDOW GLASS


Using a cleaner, clean the surfaces contacting the body and glass.

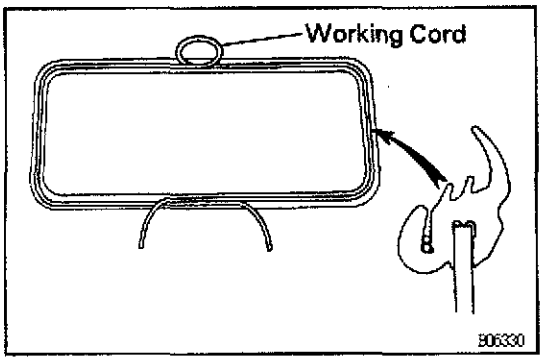

2. INSTALL WEATHERSTRIP ON WINDOW GLASS


(a) Attach the weatherstrip to the glass.

(b) Apply a working cord along the weatherstrip groove, as shown in the illustration.

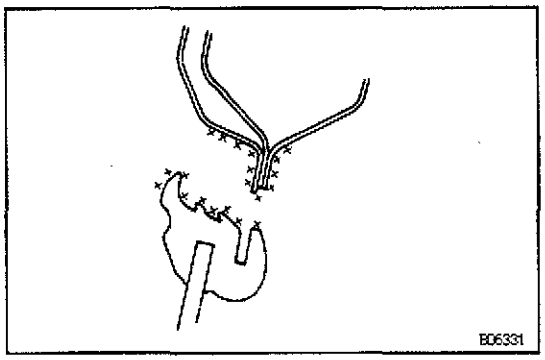


3. INSTALL WINDOW GLASS


(a) Apply soapy water to the surfaces contacting the weatherstrip lip and body flange.

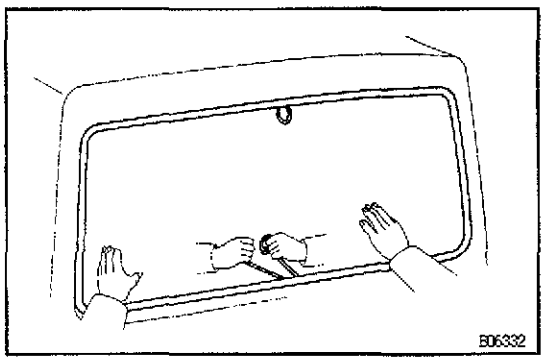

(b) Hold the glass in position on the body.
HINT: Begin installation in the middle of the lower part of the glass.

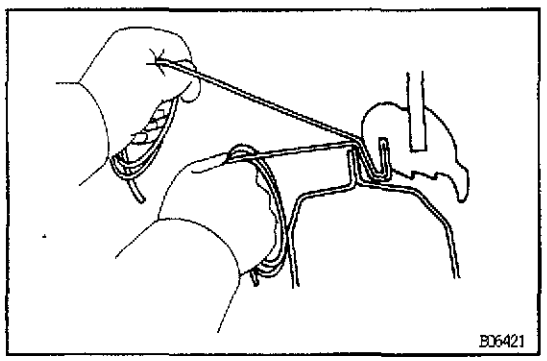


(c) From the inside of the vehicle, pull on one working cord at angle so it pulls the weatherstrip lip over the body flange. From the outside, press the glass along the weatherstrip until the glass is installed.

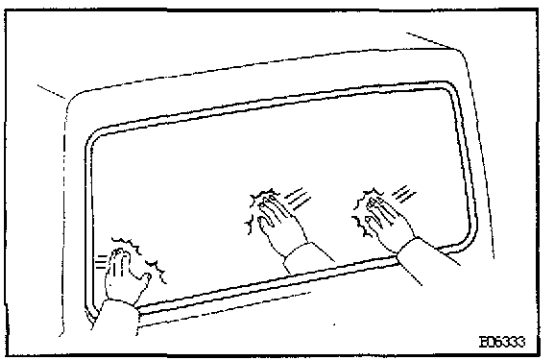


4. SNUG DOWN WINDSHIELD GLASS

To snug down the glass, tap from the outside of the vehicle with your open hand.

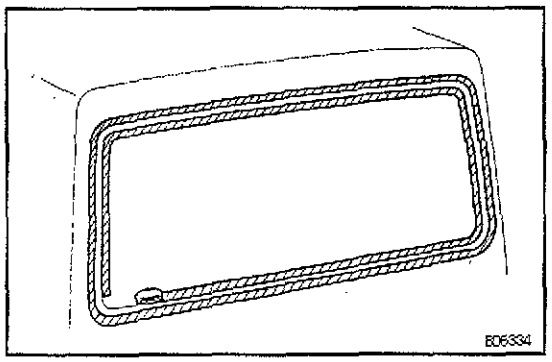

5. APPLY SEALER


(a) Put masking tape around the weatherstrip to protect the body and glass.

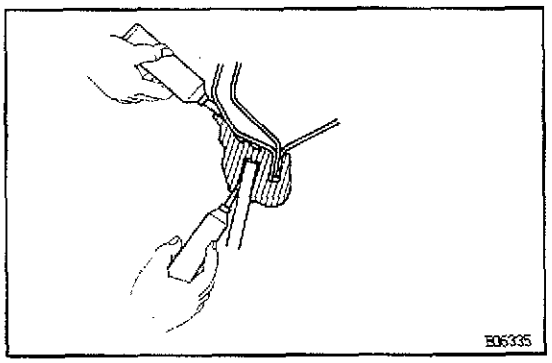

(b) Apply auto glass sealer to the weatherstrip lip, as shown in the illustration.

Sealer:

Part No. 08833–00030 or equivalent

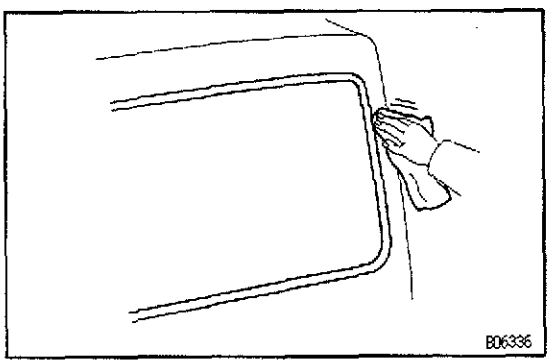

6. CLEAN SEALER SURFACE

(a) After auto glass sealer dry, remove the masking tape.
HINT: The auto glass sealer will harden in about 15 hours.

(b) Clean off the sealer oozing out from the masking tape with a clean rag saturated in cleaner.

7. INSPECT FOR LEAKS AND REPAIR


(a) Perform a leak test.

(b) Seal any leaks with auto glass sealer.

Sealer:

Part No. 08833–00030 or equivalent

8. CONNECT REAR WINDOW DEFOGGER CONNECTORS

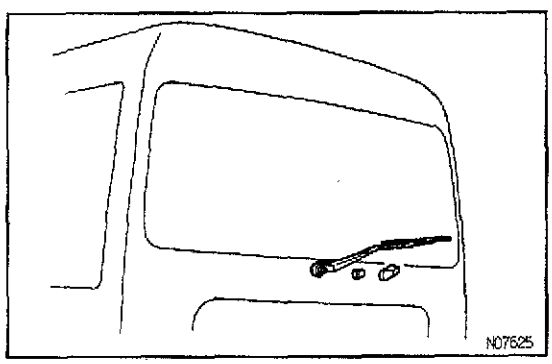

9. INSTALL WIPER ARM

Install the wiper arm with the nut. Install the arm cover.

10. CONNECT CABLE TO NEGATIVE TERMINAL OF BATTERY