
BACK WINDOW GLASS (Single Swing Out Type)

COMPONENTS

BO10G-01

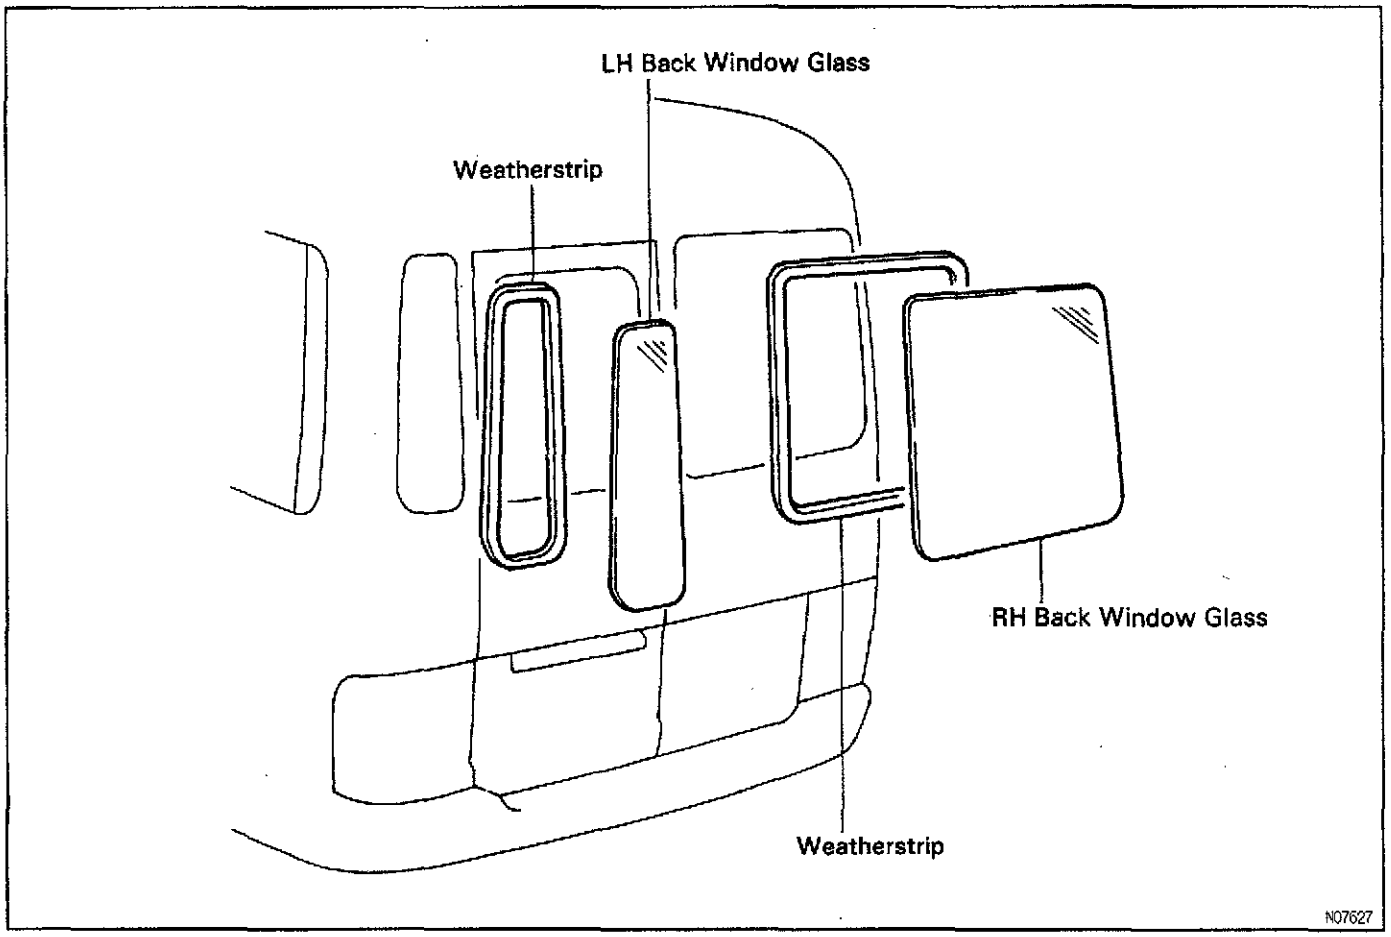

BO

BO107-01

BACK WINDOW GLASS REMOVAL

Remove the back window glass in the same manner as the Back Window Glass.

BO10A-01

BACK WINDOW GLASS INSTALLATION

Install the back window glass in the same manner as the Back Window Glass.