
BACK WINDOW GLASS (Double Swing Out Type)

BO103-01

COMPONENTS

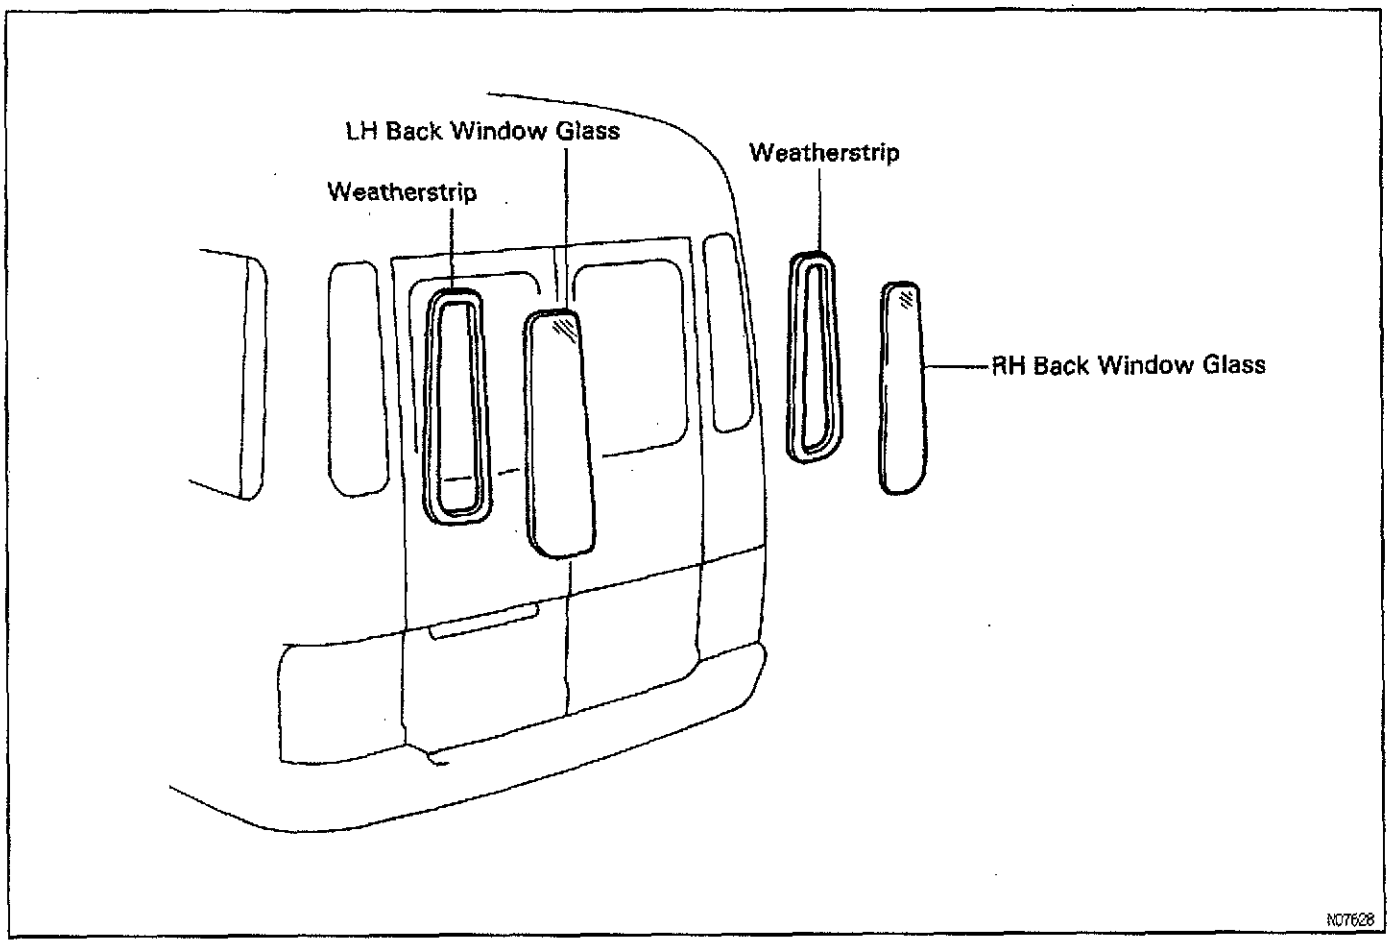

BO10D-01

BACK WINDOW GLASS REMOVAL

Remove the back window glass in the same manner as the Back Window Glass.

BO10E-01

BACK WINDOW GLASS INSTALLATION

Install the back window glass in the same manner as the Back Window Glass.