
INSTRUMENT PANEL
COMPONENTS




B00ZO-01

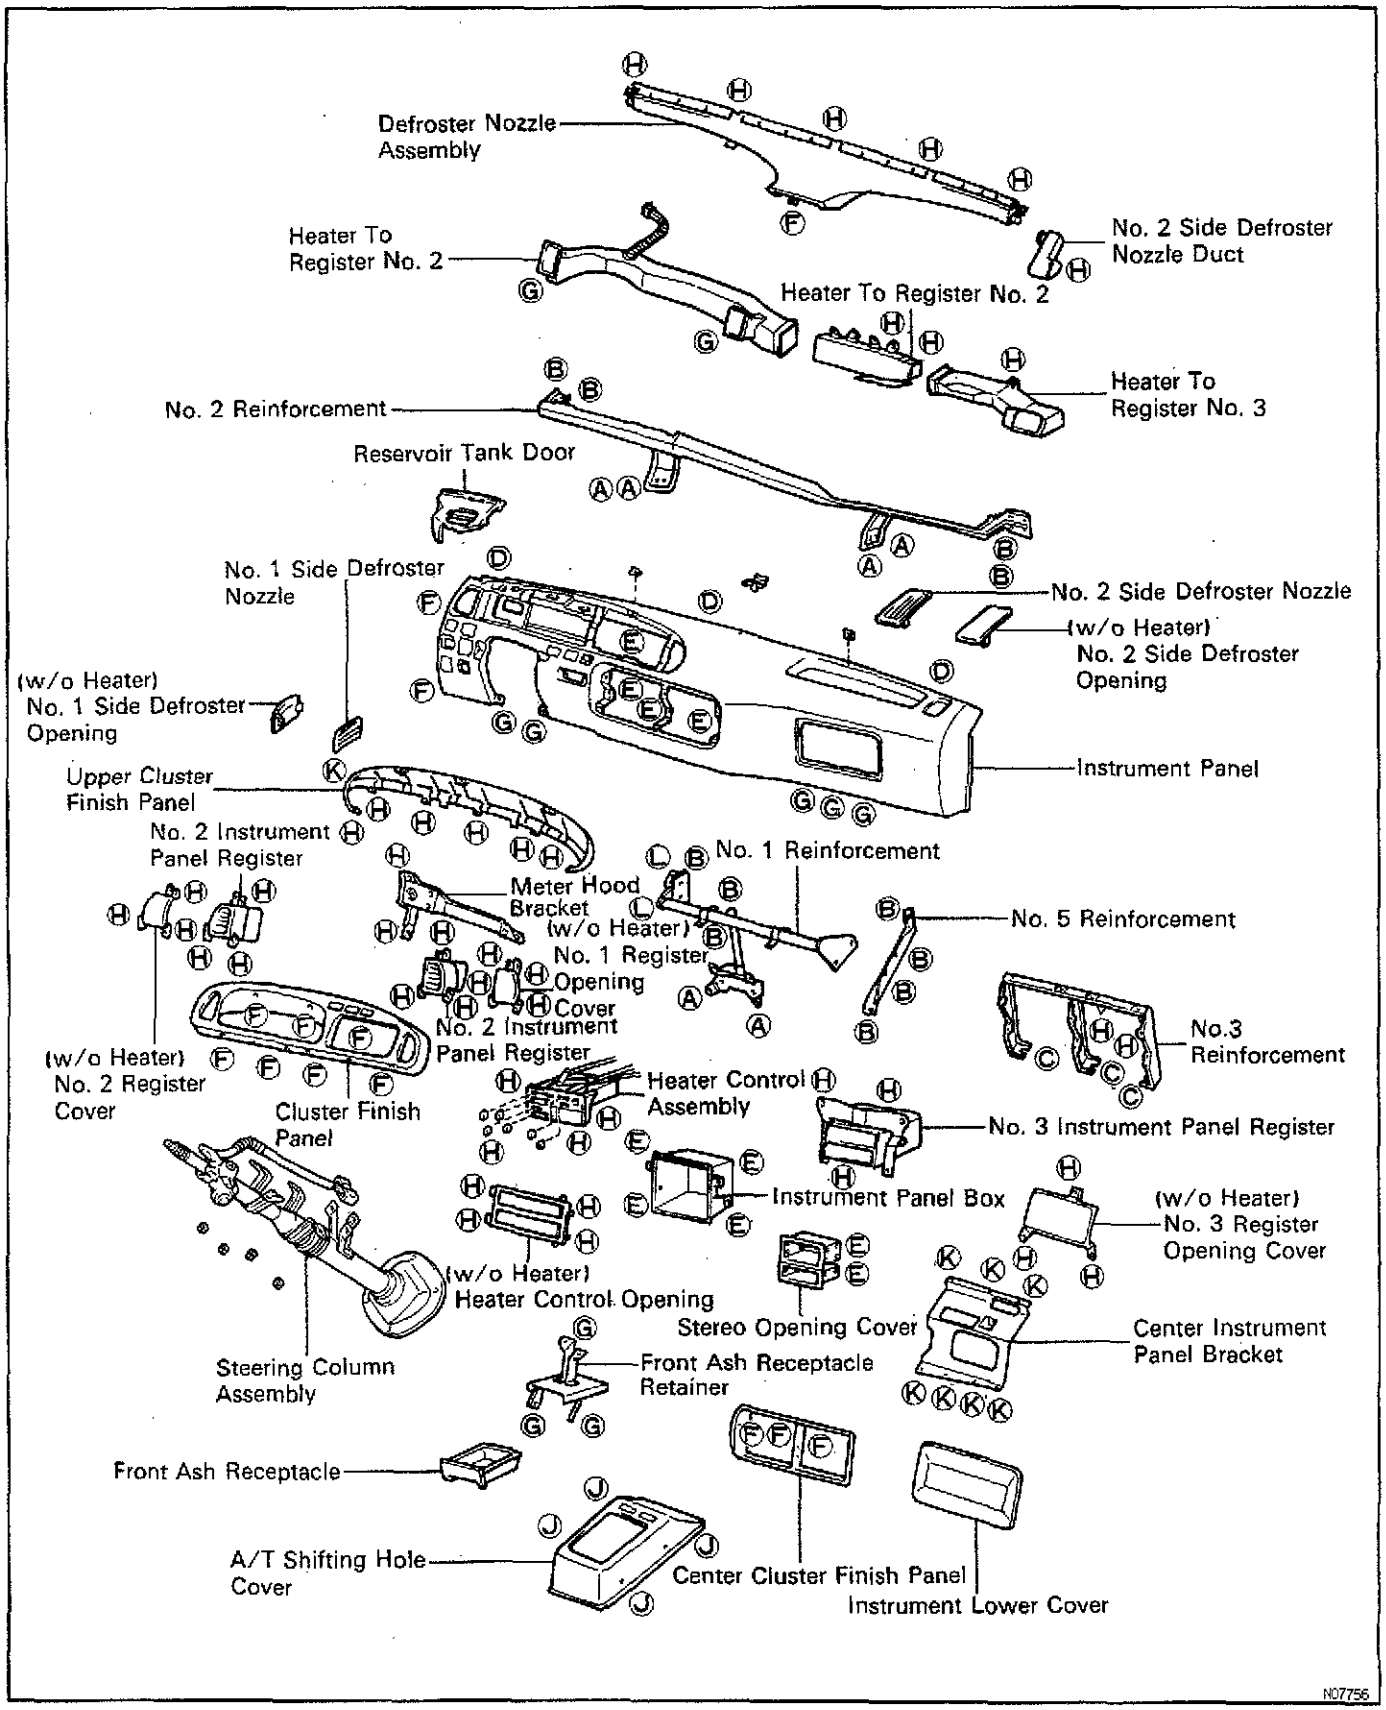

BO

HINT: Screws in the illustration on the previous page are indicated using the code below for removal and installation of instrument panel.

mm (in.)

Code	Shape	Size	Code	Shape	Size	Code	Shape	Size
A		ϕ = 10 (0.39) L = 16 (0.63)	B		ϕ = 9.25 (0.36) L = 16 (0.63)	C		ϕ = 6 (0.24) L = 20 (0.79)
D		ϕ = 6 (0.24) L = 13 (0.51)	E		ϕ = 4 (0.16) L = 18 (0.71)	F		ϕ = 5.22 (0.21) L = 14 (0.55)
G		ϕ = 5 (0.20) L = 16 (0.63)	H		ϕ = 5 (0.20) L = 14 (0.55)	I		ϕ = 5 (0.20) L = 12 (0.47)
J		ϕ = 5 (0.20) L = 9 (0.35)	K		–			

N07767

BO


V03237

B002T-01

INSTRUMENT PANEL REMOVAL


1. **DISCONNECT CABLE FROM NAGATIVE TERMINAL OF BATTERY**
2. **REMOVE STEERING WHEEL**
   (See page SR–5)
3. **REMOVE FOLLOWING PARTS:**

(a) Steering column cover
(b) Steering colum
(c) Center cluster finish panel
(d) Cluster finish panel

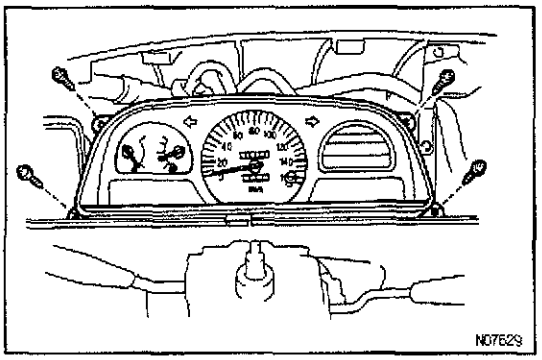

4. REMOVE COMBINATION METER


(a) Remove the 4 screws.
(b) Disconnect the connectors.
(c) Remove the combinatin meter.

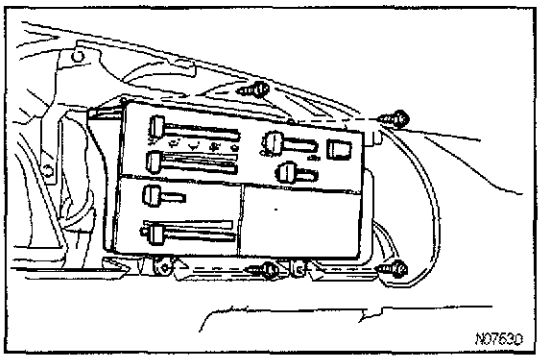

5. REMOVE HEATER CONTROL


(a) Remove the 4 screws and the heater control.
(b) *Disconnect the control cables.*

6. REMOVE METER BRACKET

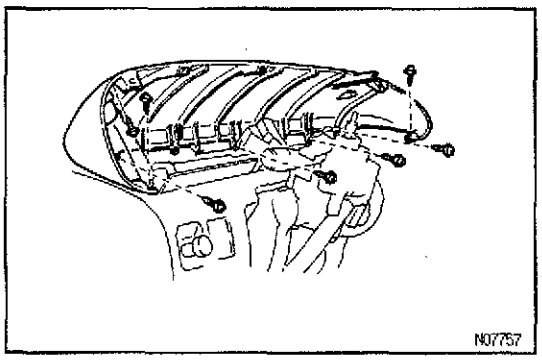

7. REMOVE UPPER CLUSTER FINISH PANEL

(a) Remove the 6 screws and the upper cluster finish panel.
(b) Remove side defroster nozzle No.1.
(c) Disconnect the duct.

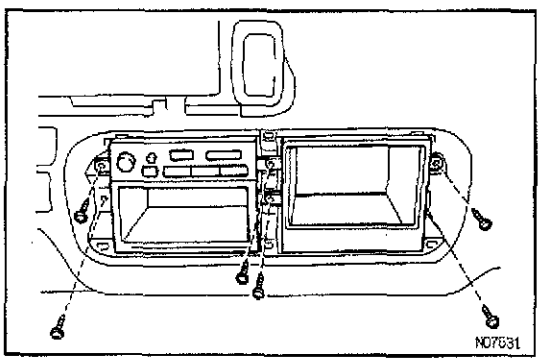

8. REMOVE INSTRUMENT PANEL BOX AND STEREO OPENING COVER

(a) Remove the 4 screws and the instrument panel box.
(b) Remove the 2 screws and the stereo opening cover.

9. REMOVE FOLLOWING PARTS:

(a) Throttle knob
(b) Front ash receptacle
(c) Radiator grille cap release lever


10. (A/T)

REMOVE SHIFTING HOLE COVER

Remove the 4 screws and the shifting hole cover.


11. REMOVE INSTRUMENT PANEL

(a) Remove the 3 bolts, screws and clip.
(b) Disconnect the connectors.

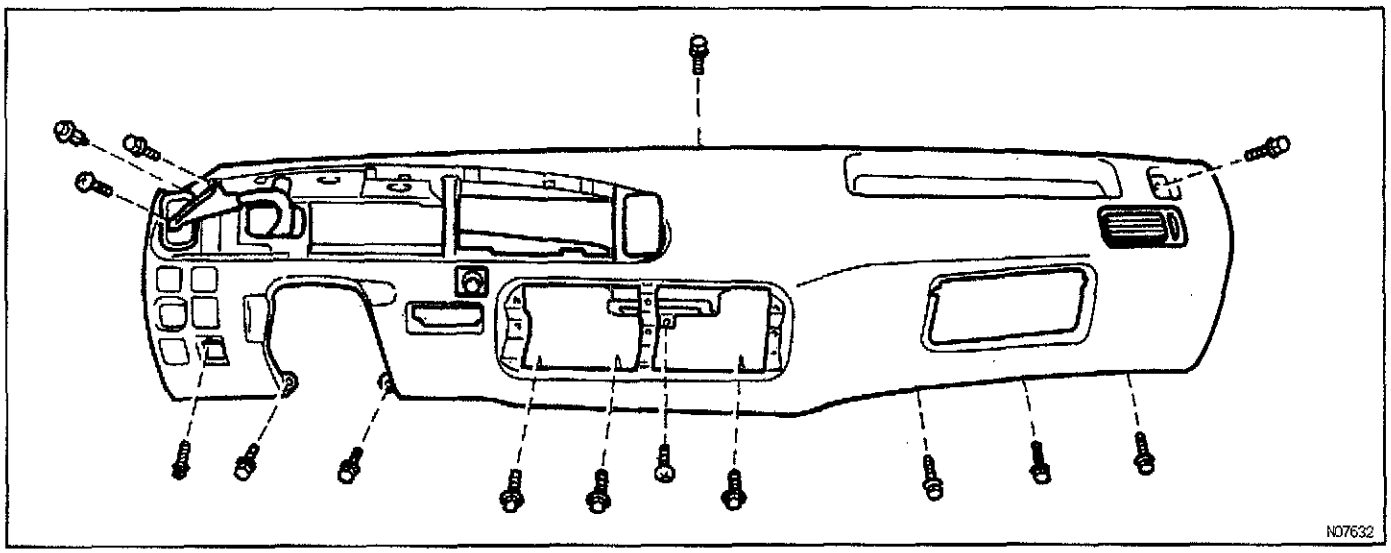

12. REMOVE NO.1 REINFORCEMENT

Remove the 9 bolts, 2 nuts and the No.1 reinforcement and No.5 reinforcement.

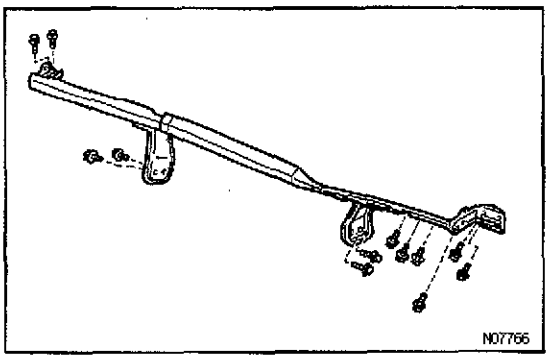

13. REMOVE NO.2 REINFORCEMENT

(a) Remove the wire harness connector clamps from the No.2 reinforcement.
(b) Remove the 12 bolts and the No.2 reinforcement.

INSTRUMENT PANEL DISASSEMBLY

B00ZW-01

REMOVE FOLLOWING PARTS FROM INSTRUMENT PANEL

(a) Defroster nozzle
(b) Side defroster nozzle No.2
(c) Heater to register No.3
(d) Heater to register No.2
(e) Heater to register No.1

(f) Instrument panel center bracket
(g) No.3 reinforcement

INSTRUMENT PANEL ASSEMBLY

B05ZZ-01

ASSEMBLE INSTRUMENT PANEL PARTS BY FOLLOWING DISASSEMBLY SEQUENCE IN REVERSE

INSTRUMENT PANEL INSTALLATION

B0100-01

INSTALL INSTRUMENT PANEL PARTS BY FOLLOWING REMOVAL SEQUENCE IN REVERSE