


ROOF HEADLINING
COMPONENTS

B00ZG-01

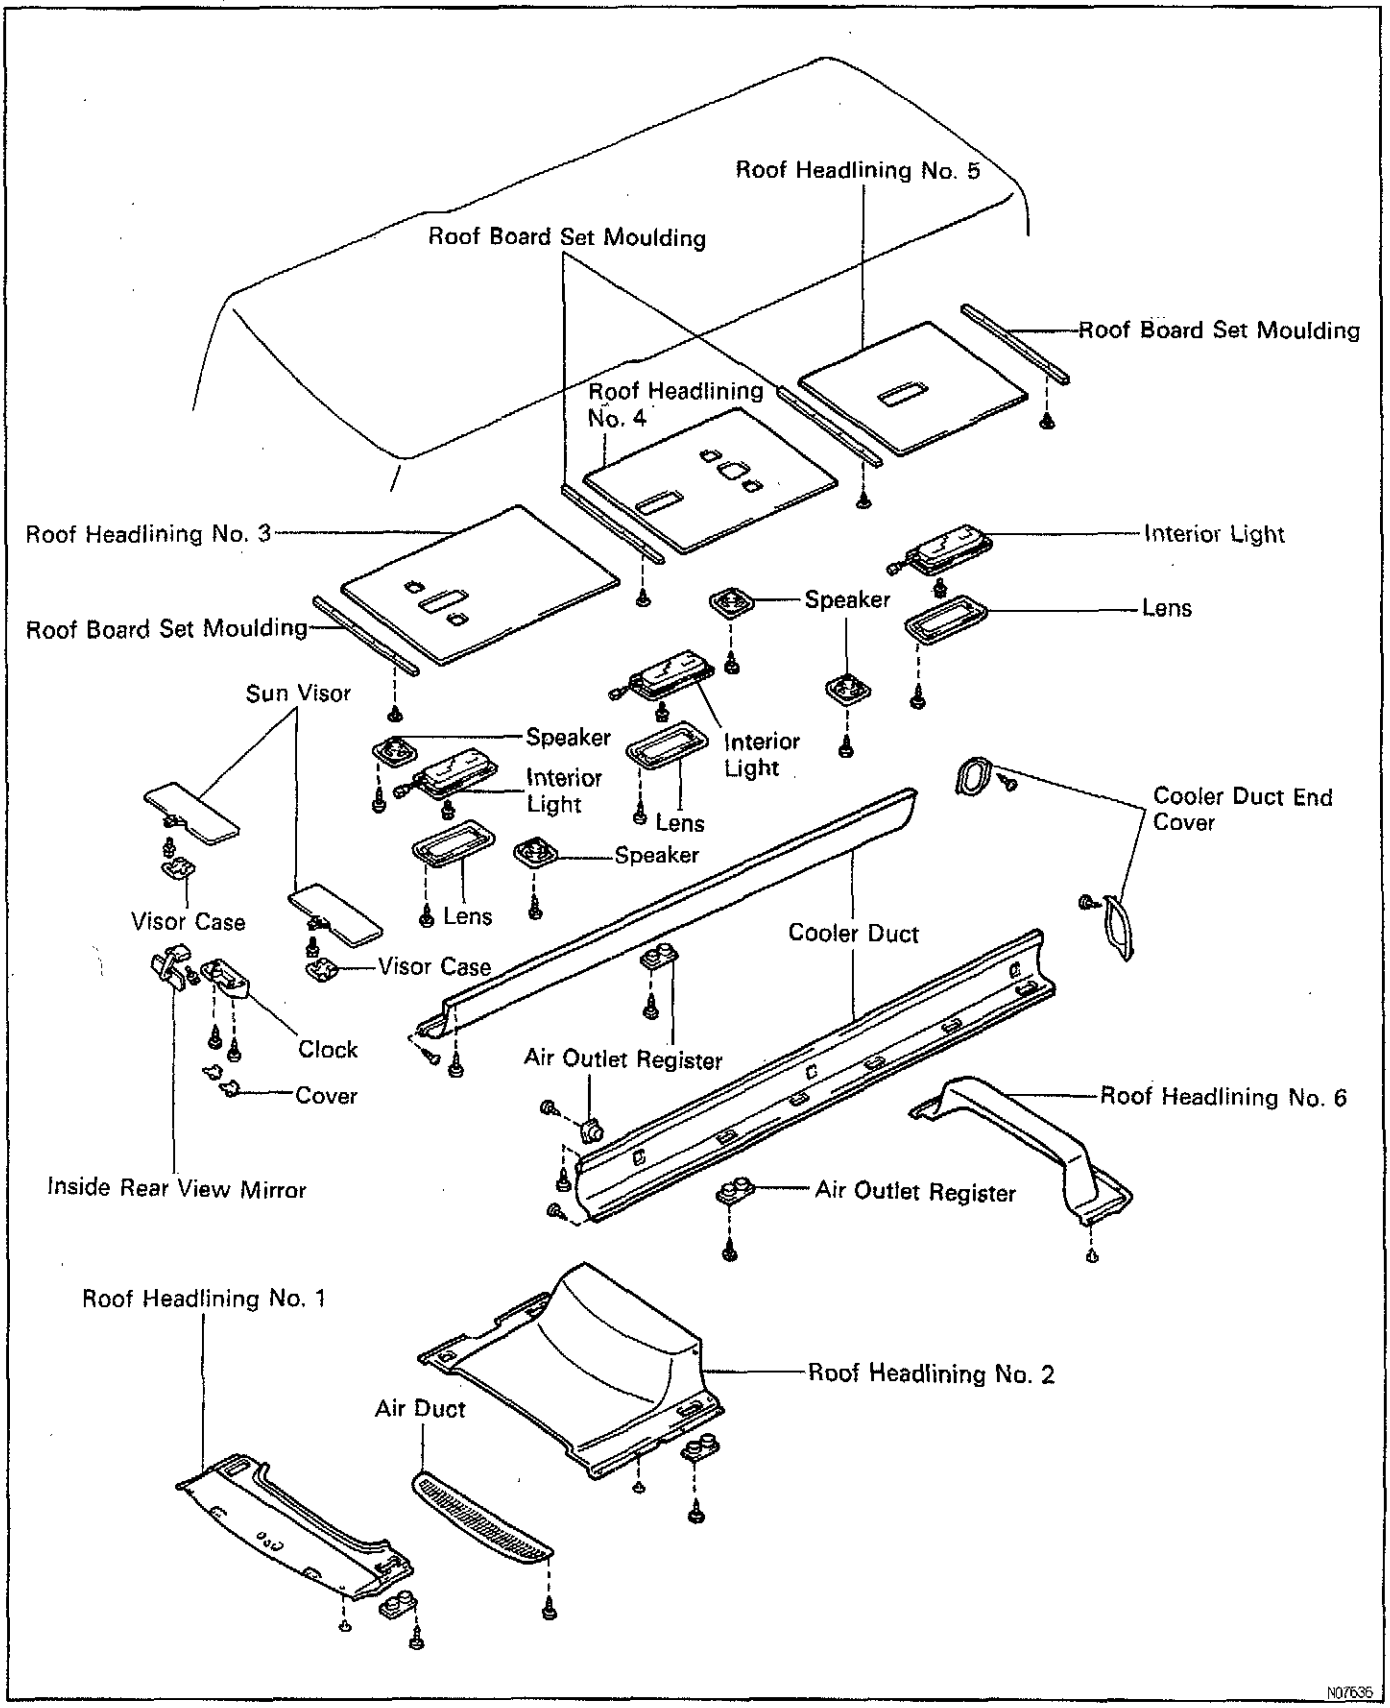

COMPONENTS (Cont'd)

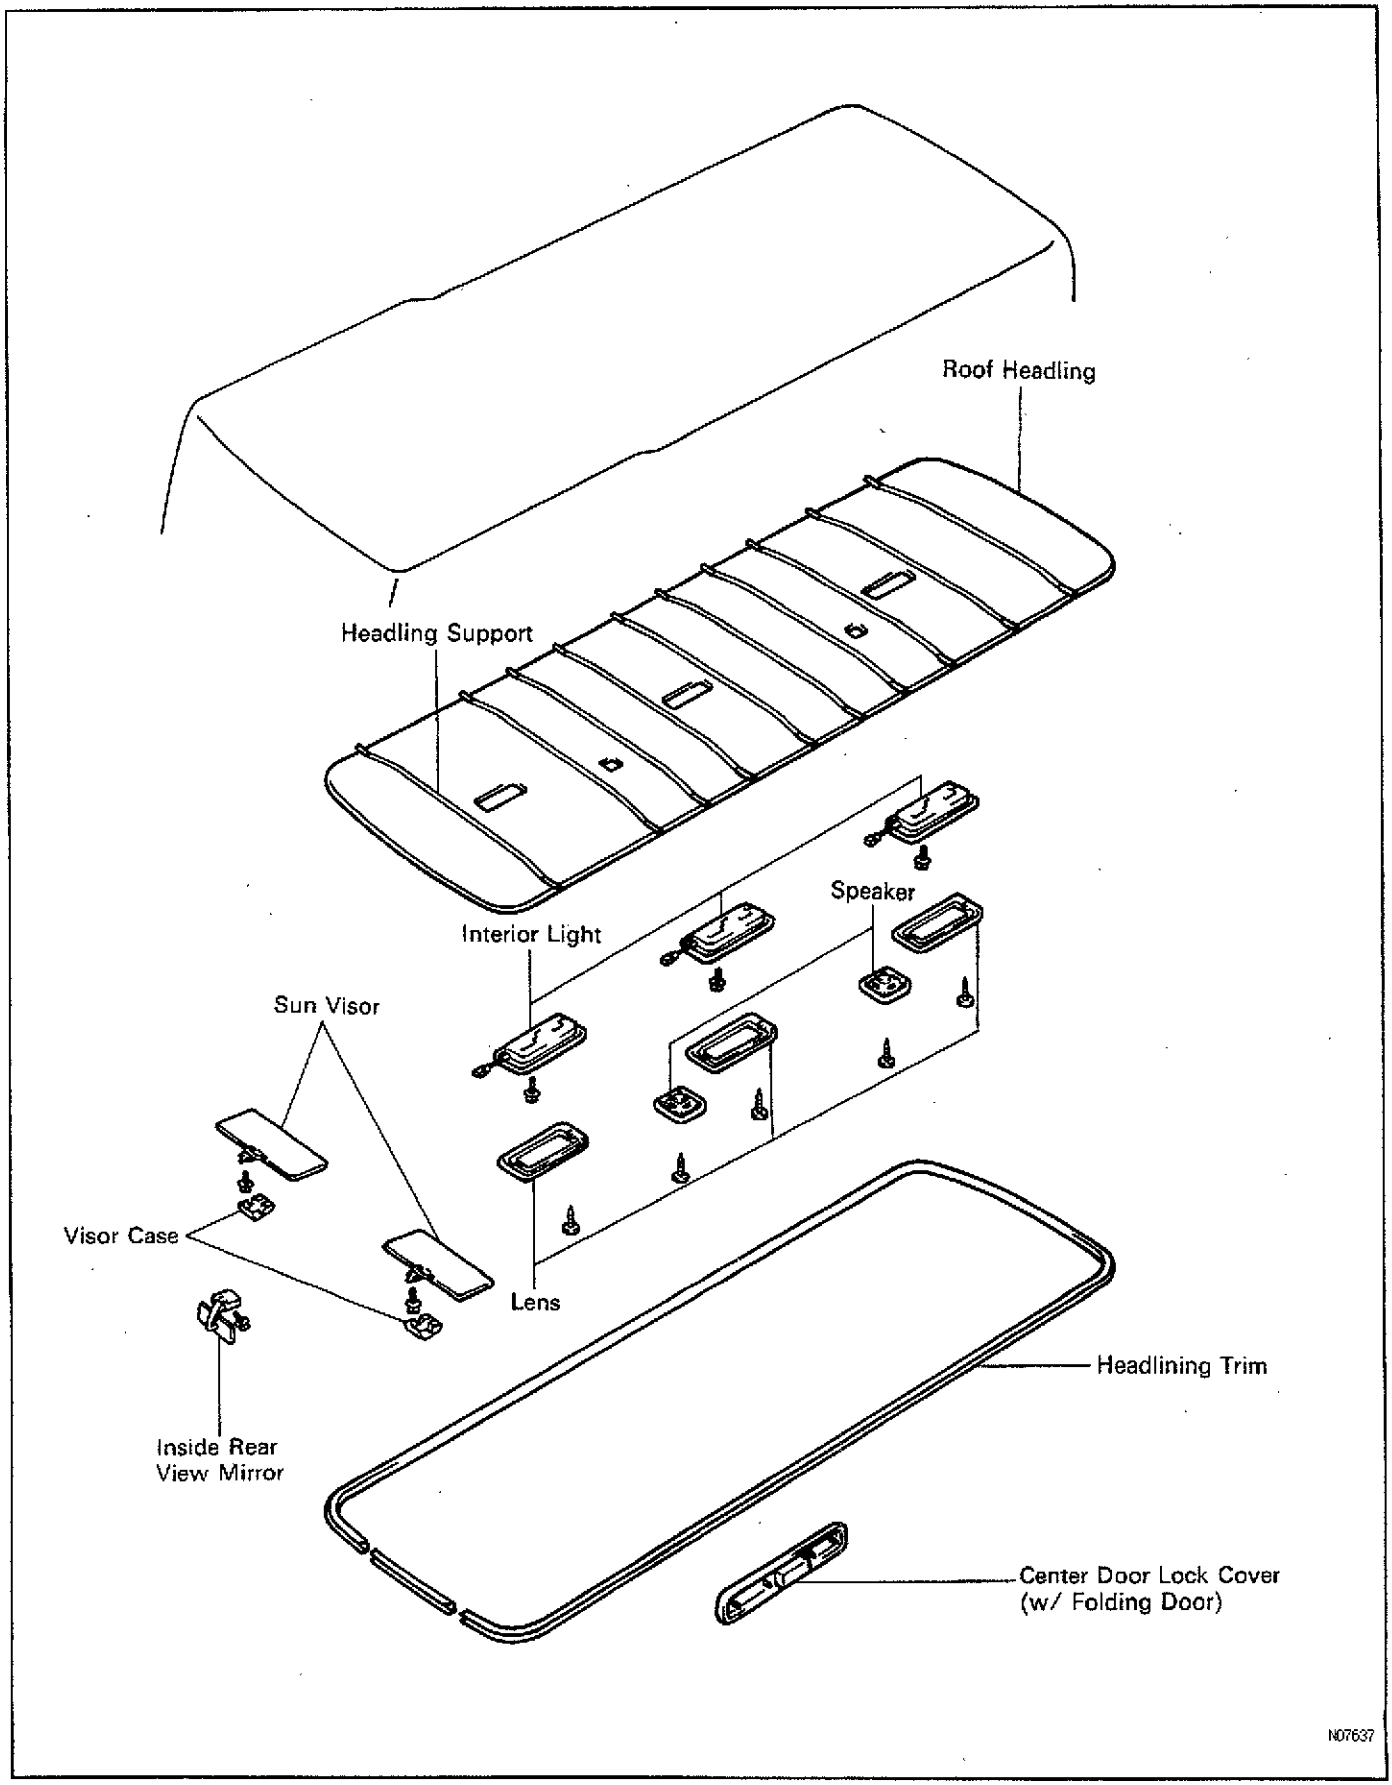

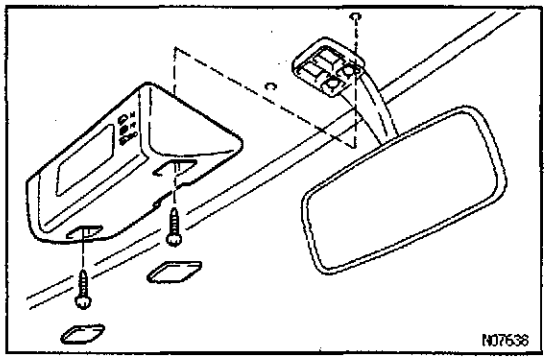


ROOF HEADLINING REMOVAL

BO2ZK-01


1. **DISCONNECT CABLE FROM NEGATIVE TERMINAL OF BATTERY**
2. **REMOVE FOLLOWING PARTS:**

(a) Clock


(b) Rear view mirror

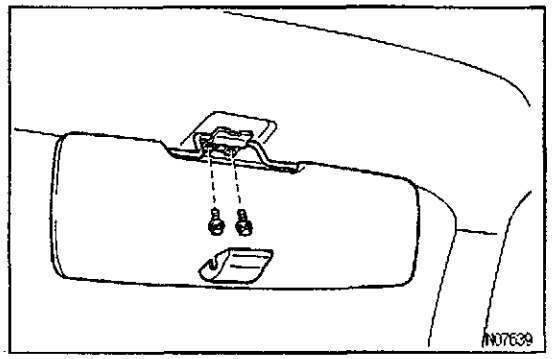


(c) Sun visors

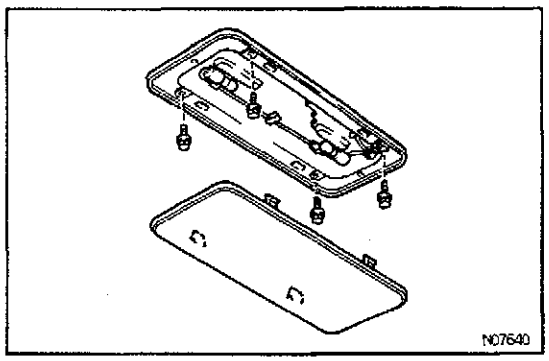


(d) Interior lights

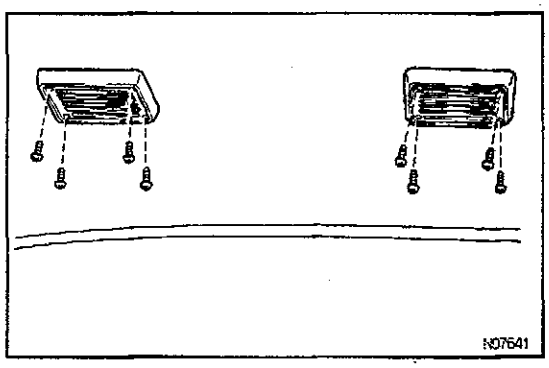

(e) Speakers

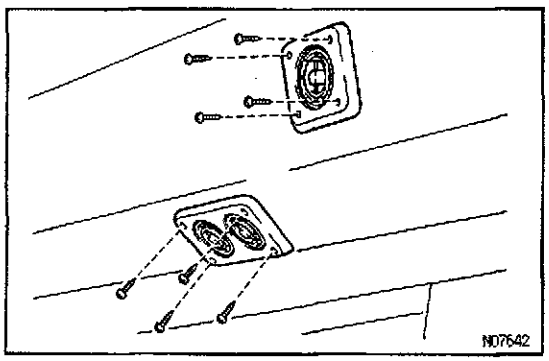


(f) Air outlet register

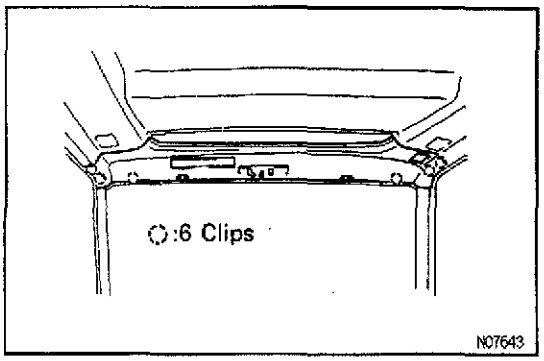


3. REMOVE HEADLINING NO.1

Using a clip remover, remove the 6 clips.

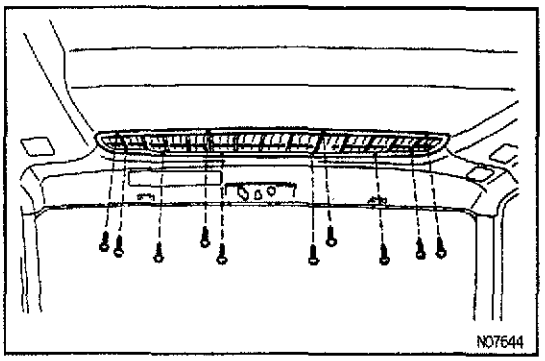


4. REMOVE ROOF HEADLINING NO.2

(a) Remove the 10 screws and air duct net.
(b) Remove the 10 clips and roof headlining No.2.

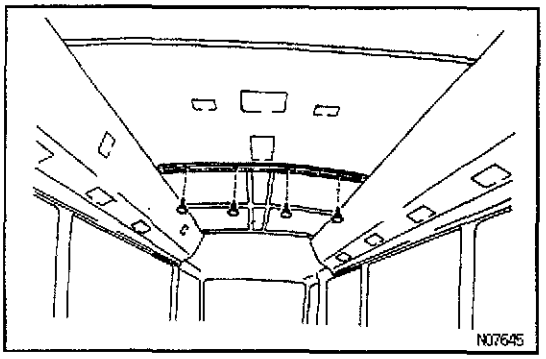


5. REMOVE ROOF HEADLINING BOARD NO.3

(a) Remove the 4 screws and roof board set moulding.
(b) Remove the 2 clips and roof headlining board No.3.

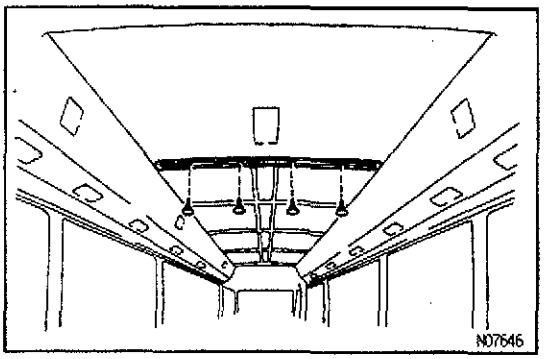


6. REMOVE ROOF HEADLINING BOARD NO.4

(a) Remove the 4 screws and roof board set moulding.
(b) Remove the 2 clips and roof headlining board No.4.

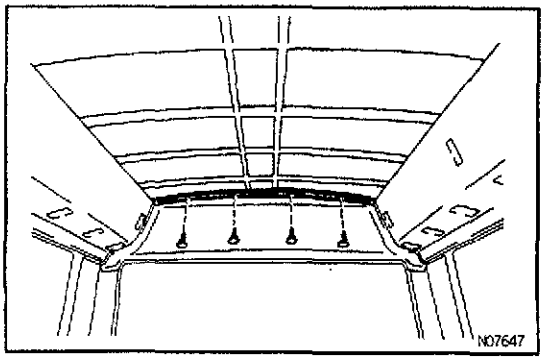


7. REMOVE ROOF HEADLINING BOARD NO.5

(a) Remove the 4 screws and roof board set moulding.
(b) Remove the 2 clips and roof headlining board No.5.

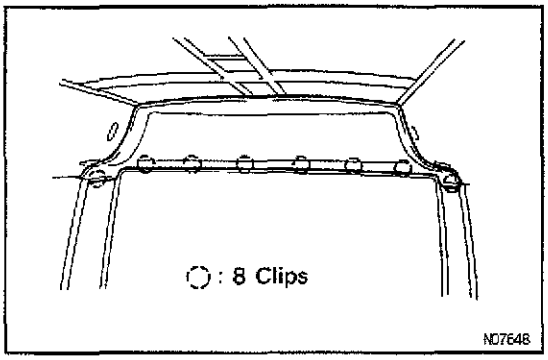


8. REMOVE ROOF HEADLINING BORAD NO.6

Using a clip remover, remove the 8 clips.

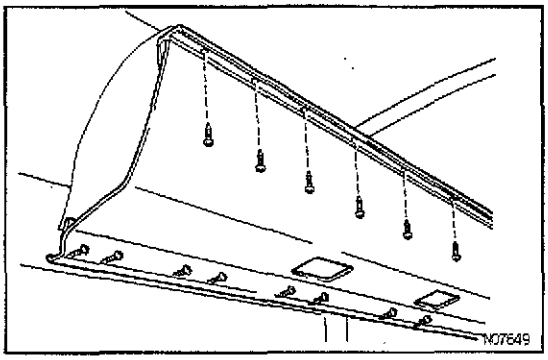

9. REMOVE LH /RH COOLER DUCT

(a) Remove the screws and cooler duct.

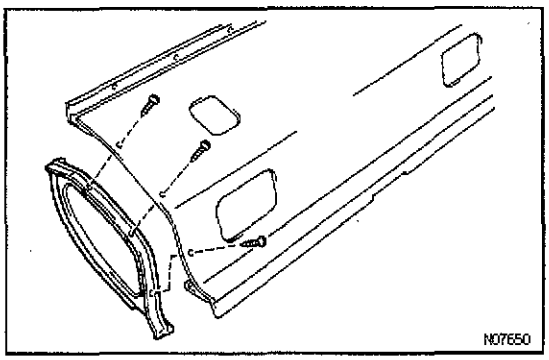

(b) Remove the 3 screws.

(c) Remove the cooler duct end cover from the cooler duct.

ROOF HEADLINING INSTALLATION

B0023N-01

ASSEMBLE ROOF HEADLINING PARTS BY FOLLOWING REMOVAL SEQUENCE IN REVERSE