

SEAT
COMPONENTS

BO0ZC-01


Driver's Seat

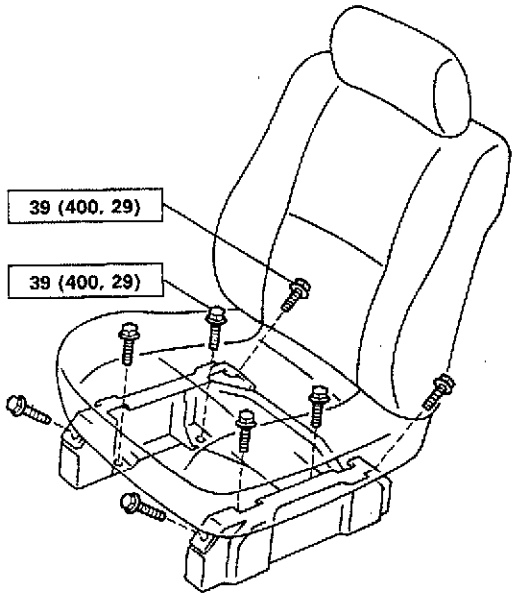


Front Passenger Seat

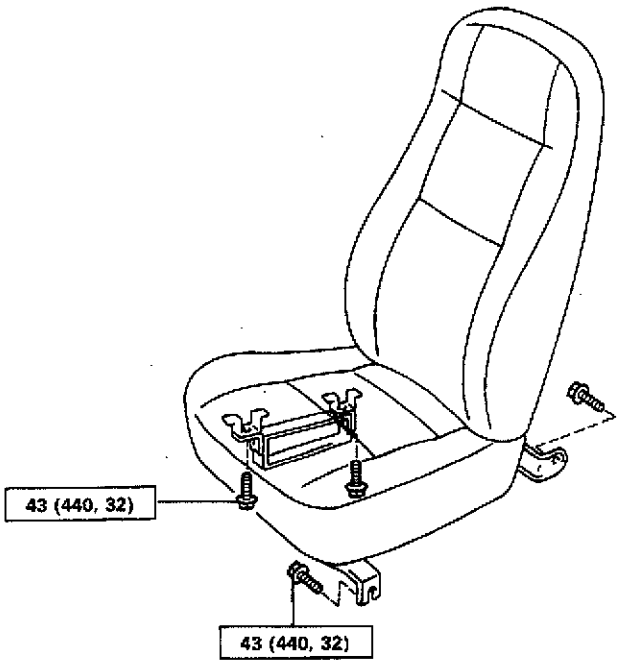

Single Rear Passenger Seat
(Type A)

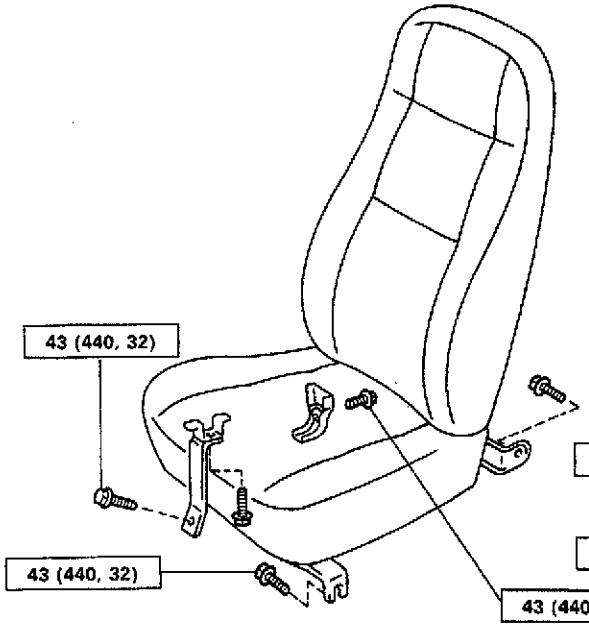

Single Rear Passenger Seat
(Type B)

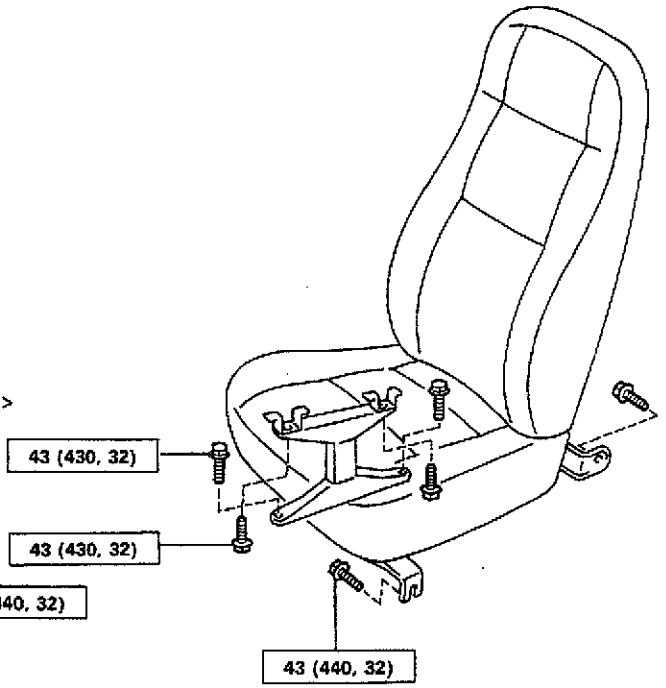

N07550 B07551
N07552 N07553


N·m (kgf·cm, ft·lbf) : Specified torque

Z07294


BO

COMPONENTS (Cont'd)


Subseat

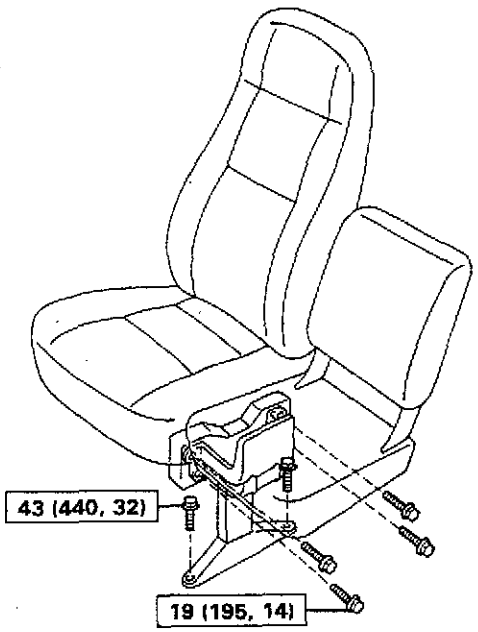

Rear Passenger Seat for 2 Persons

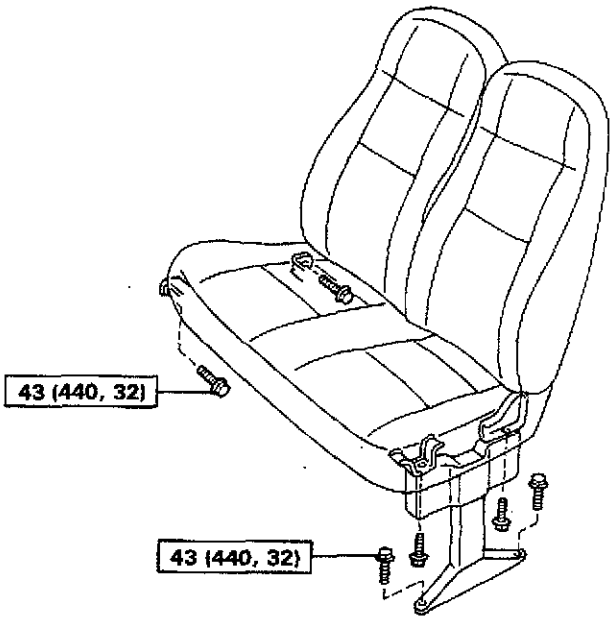

Rearmost Passenger Seat for 4 Persons (Type A)

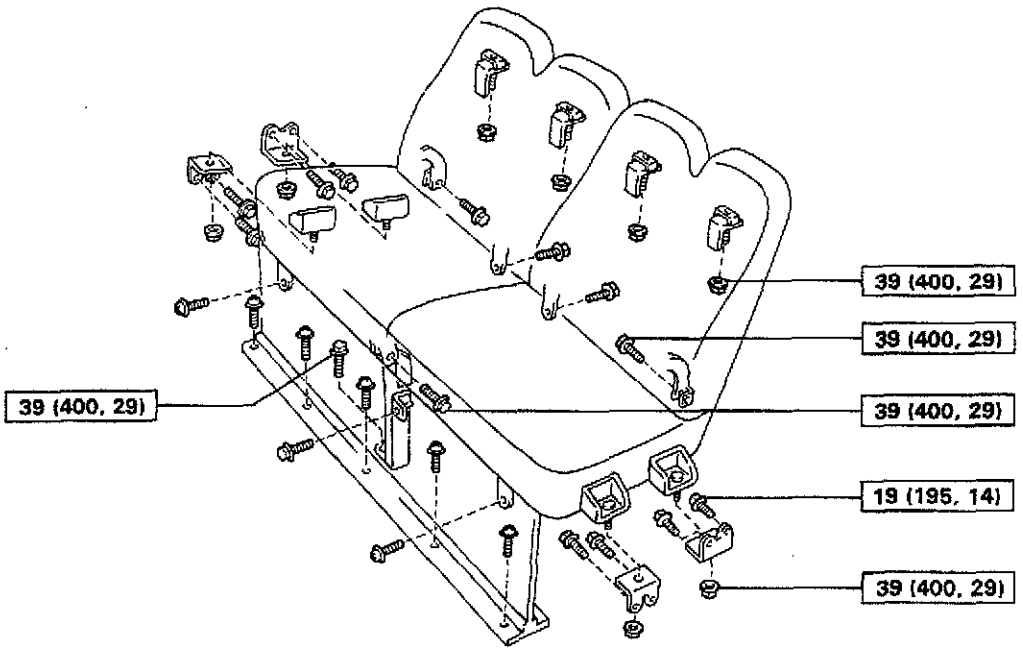


N07554 N07555
N07556

N·m (kgf·cm, ft·lbf) : Specified torque

Z07295

COMPONENTS (Cont'd)


Rearmost Passenger Seat for 4 Persons (Type B)

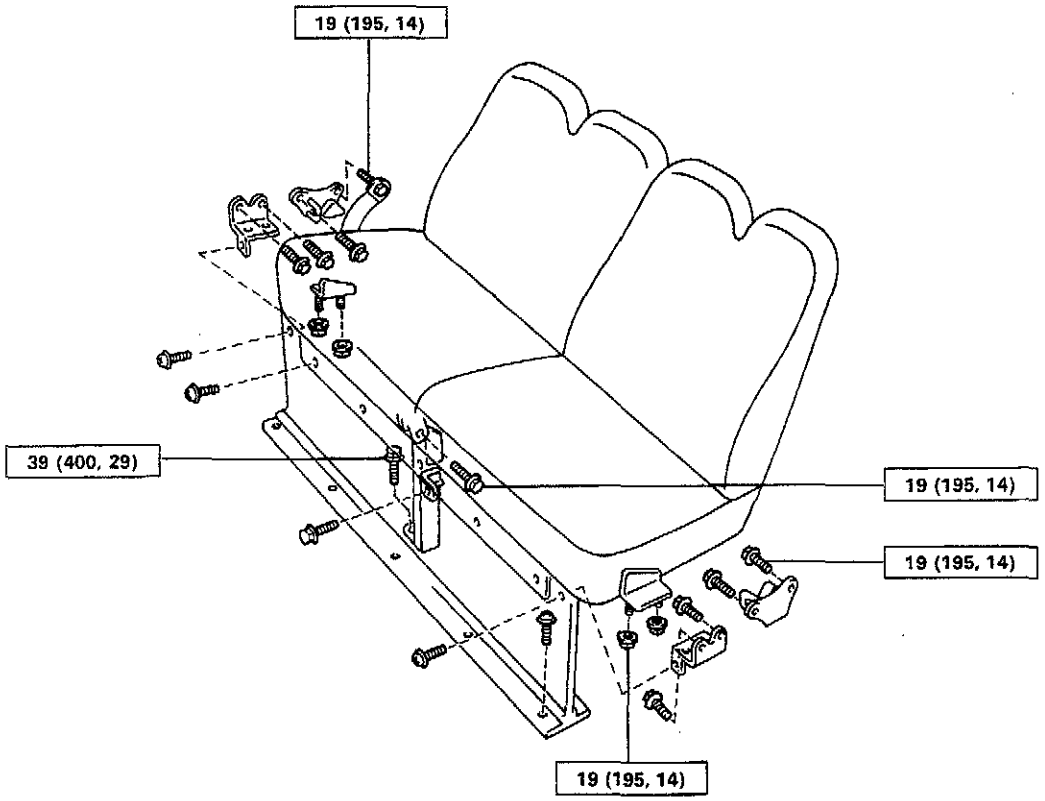

N·m (kgf·cm, ft·lbf) : Specified torque

N07557

COMPONENTS (Cont'd)

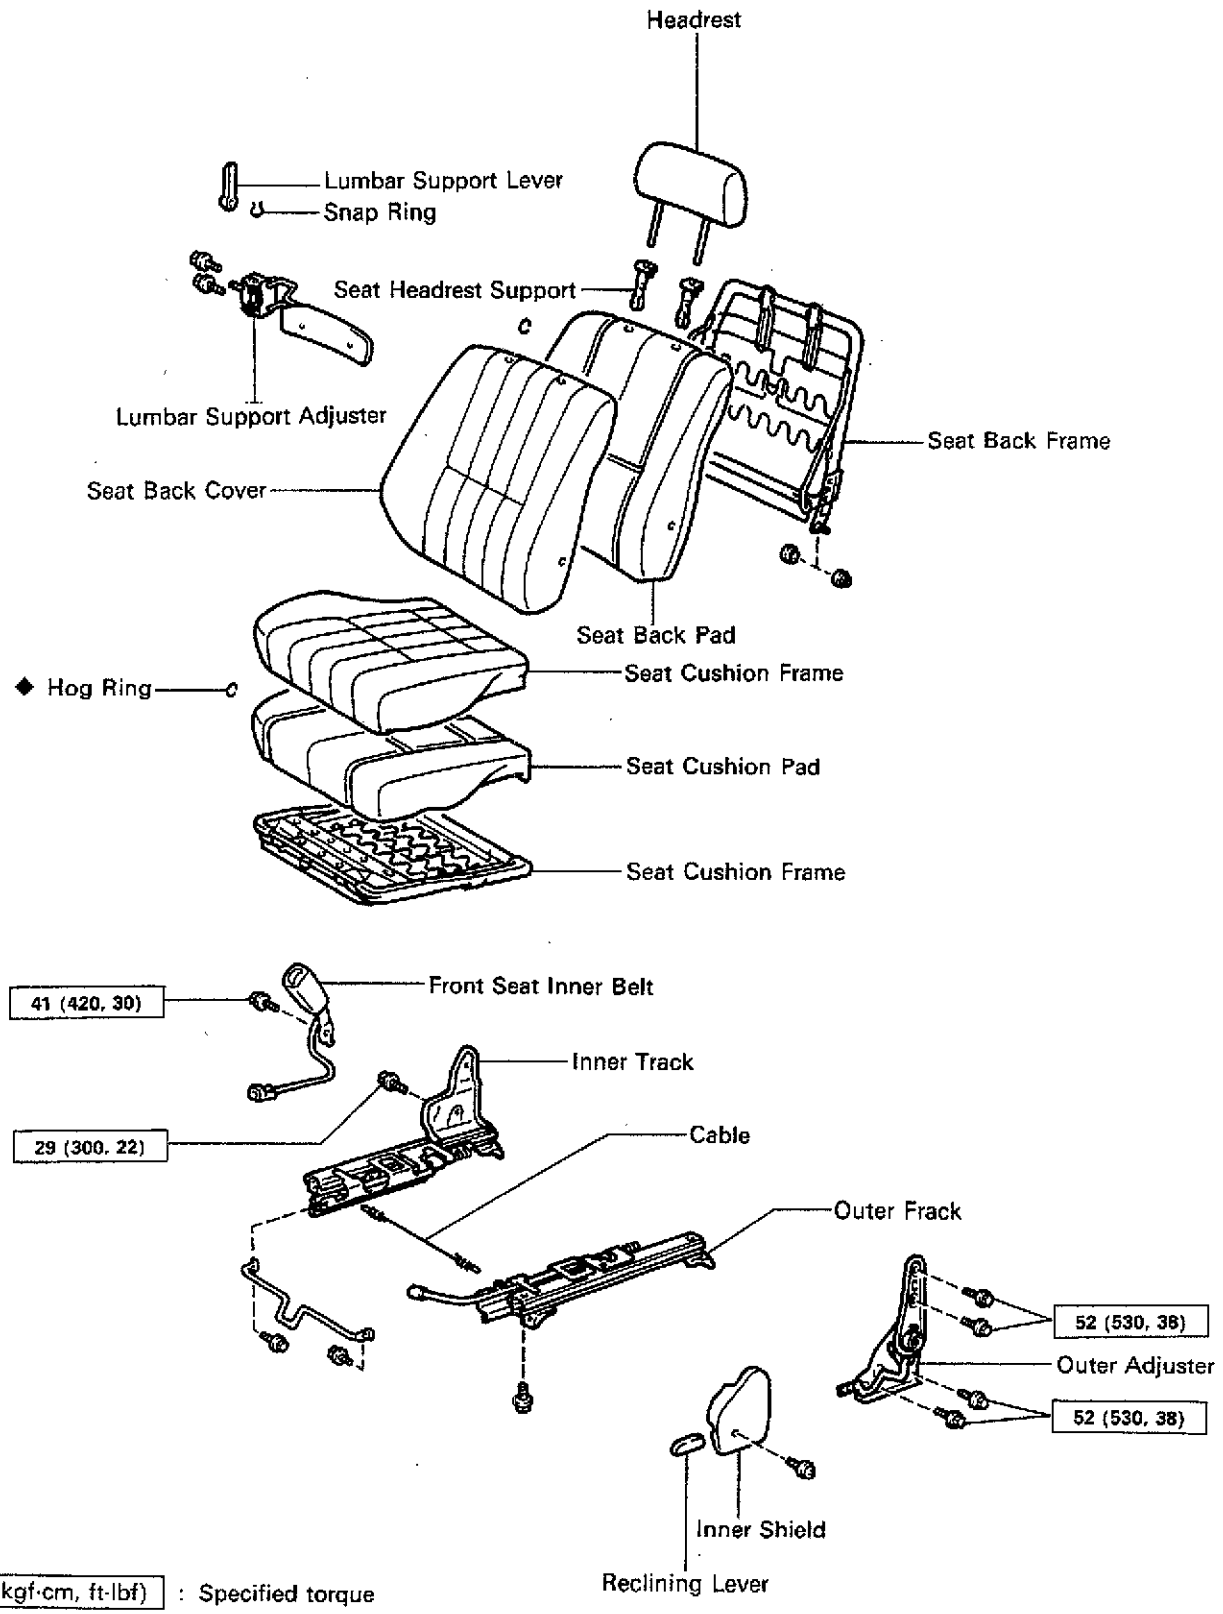


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

N07941

COMPONENTS (Cont'd)

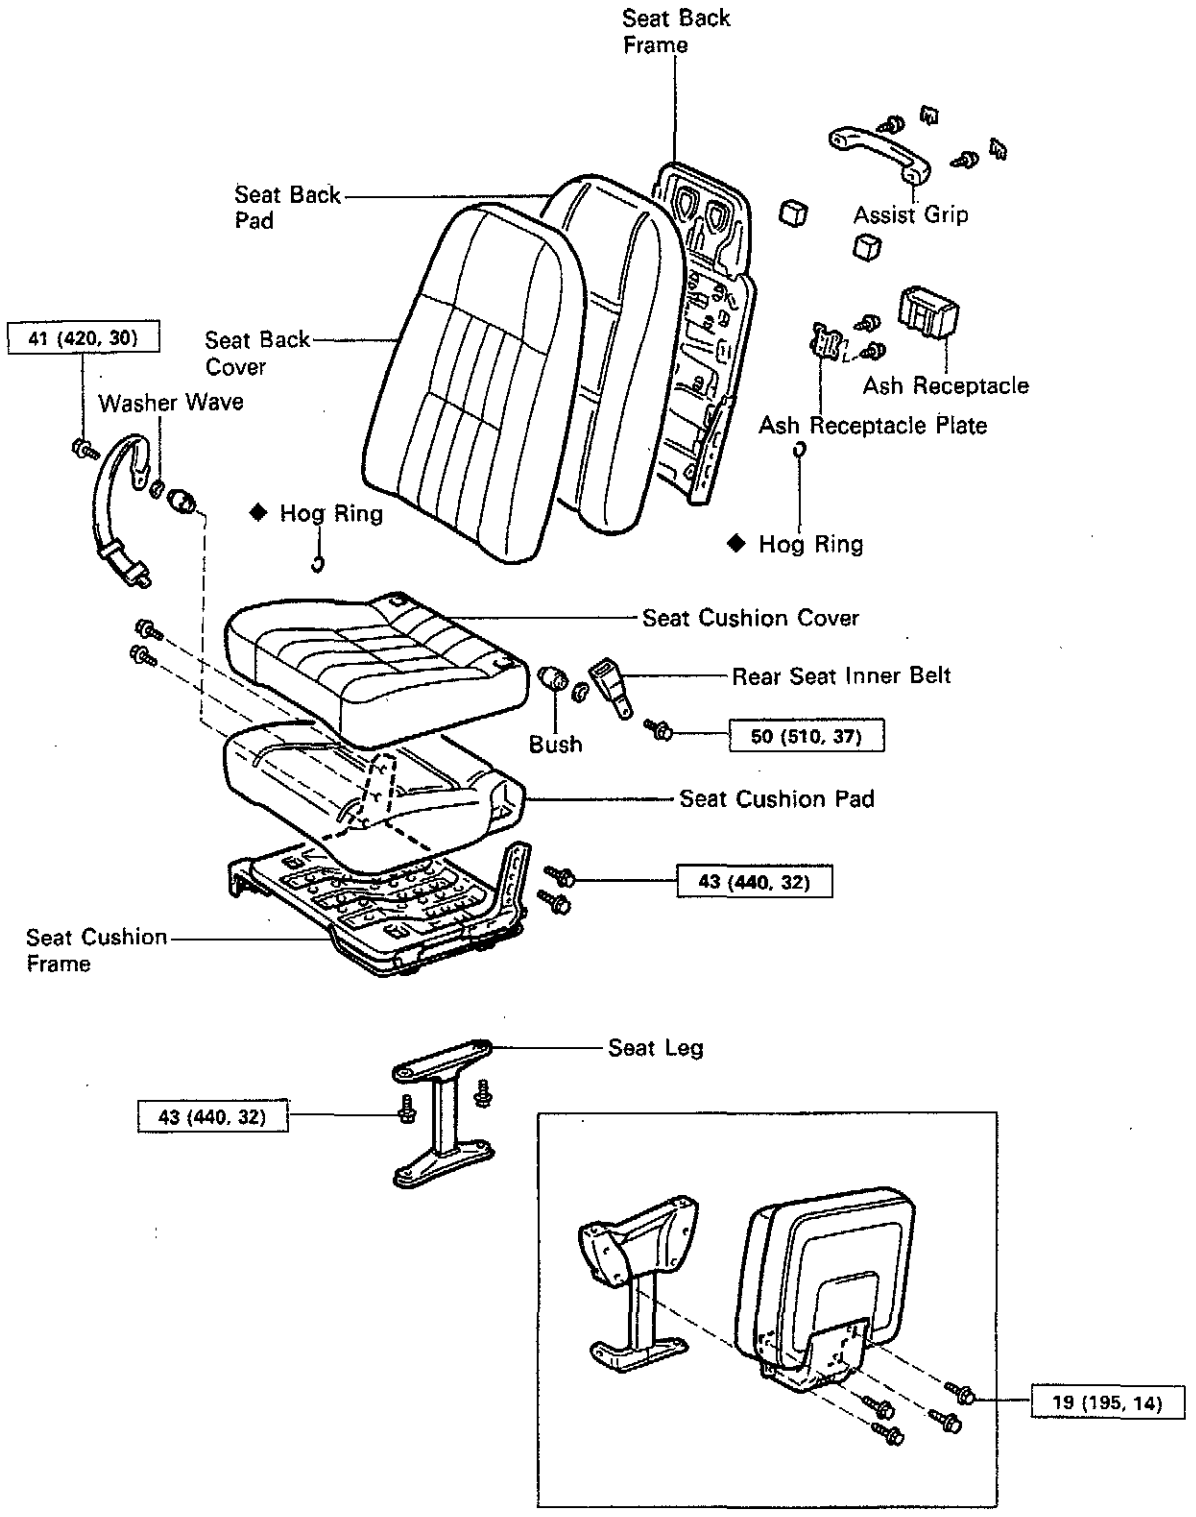


N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non-reusable part

N07942

BO

COMPONENTS (Cont'd)

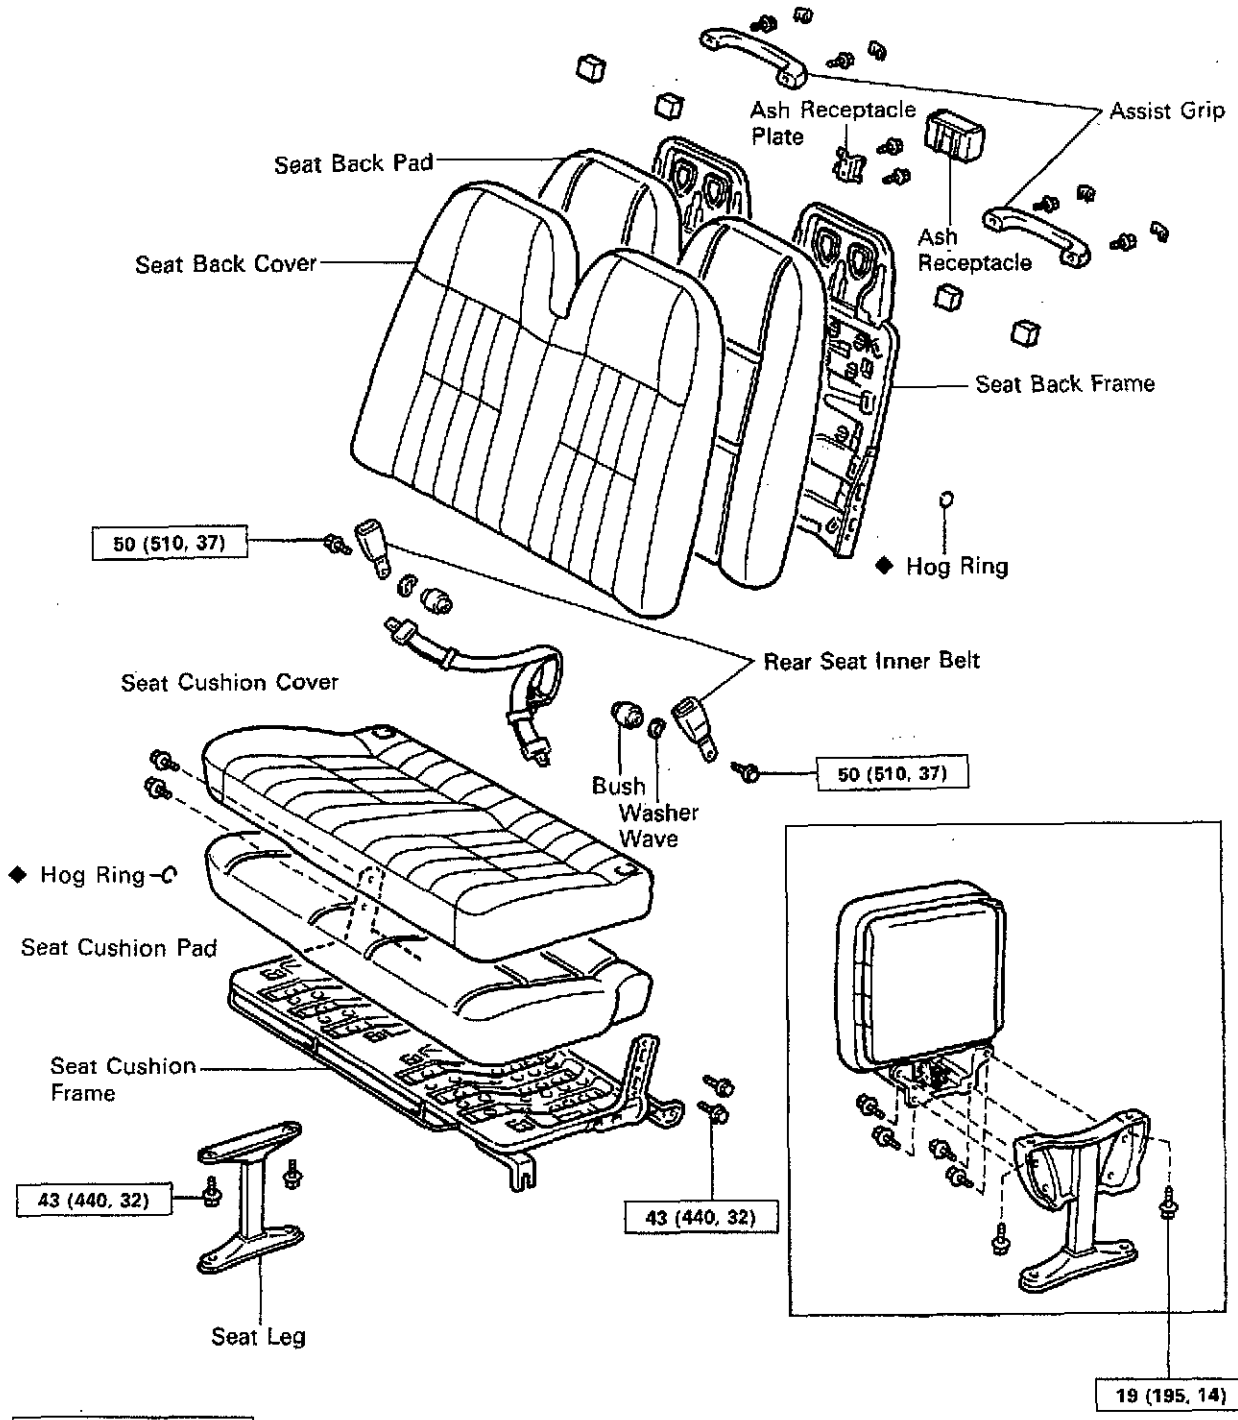


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non-reusable part

N07943

COMPONENTS (Cont'd)

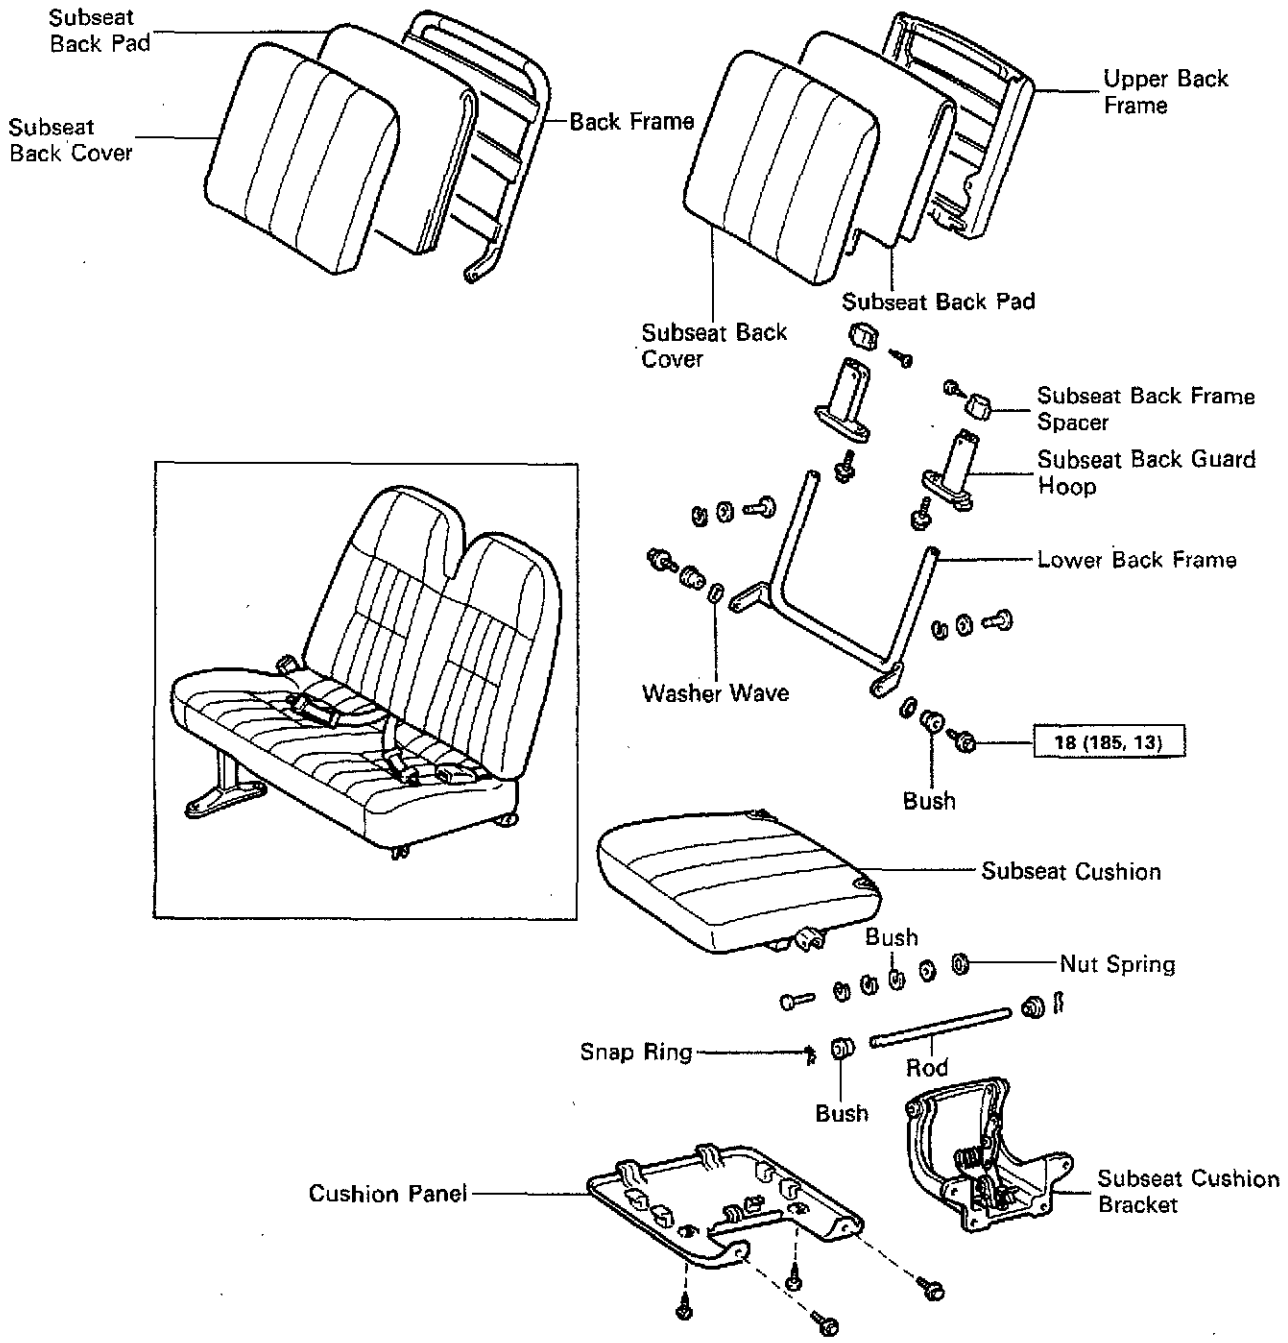


N·m (kgf·cm, ft·lbf) : Specified torque

N07944

BO

B00ZE-01


SUBSEATS ADJUSTMENT

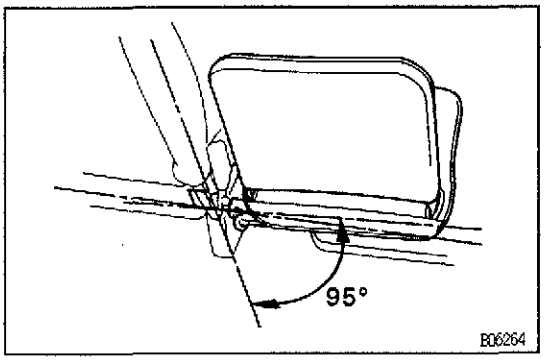

1. CHECK SUBSEAT INSTALLATION ANGLE

Angle:

95°

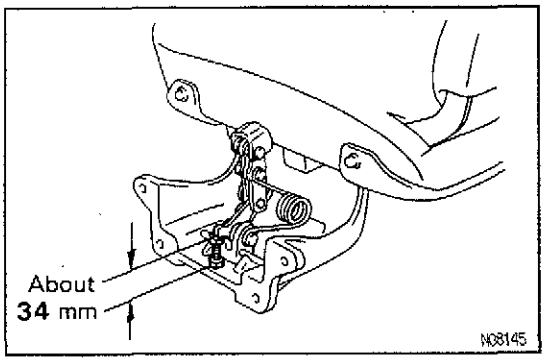

2. ADJUST SUBSEAT INSTALLATION ANGLE

(a) Remove the subseat.

(b) Loosen the lock nut.

(c) Adjust the subseat by turning the adjusting bolt.
HINT: There is about 34 mm (1.34 in.) between the hinge surface and bolt head.

(d) Reinstall the subseat.