
FUEL TANK AND LINE
COMPONENTS

BO022-01

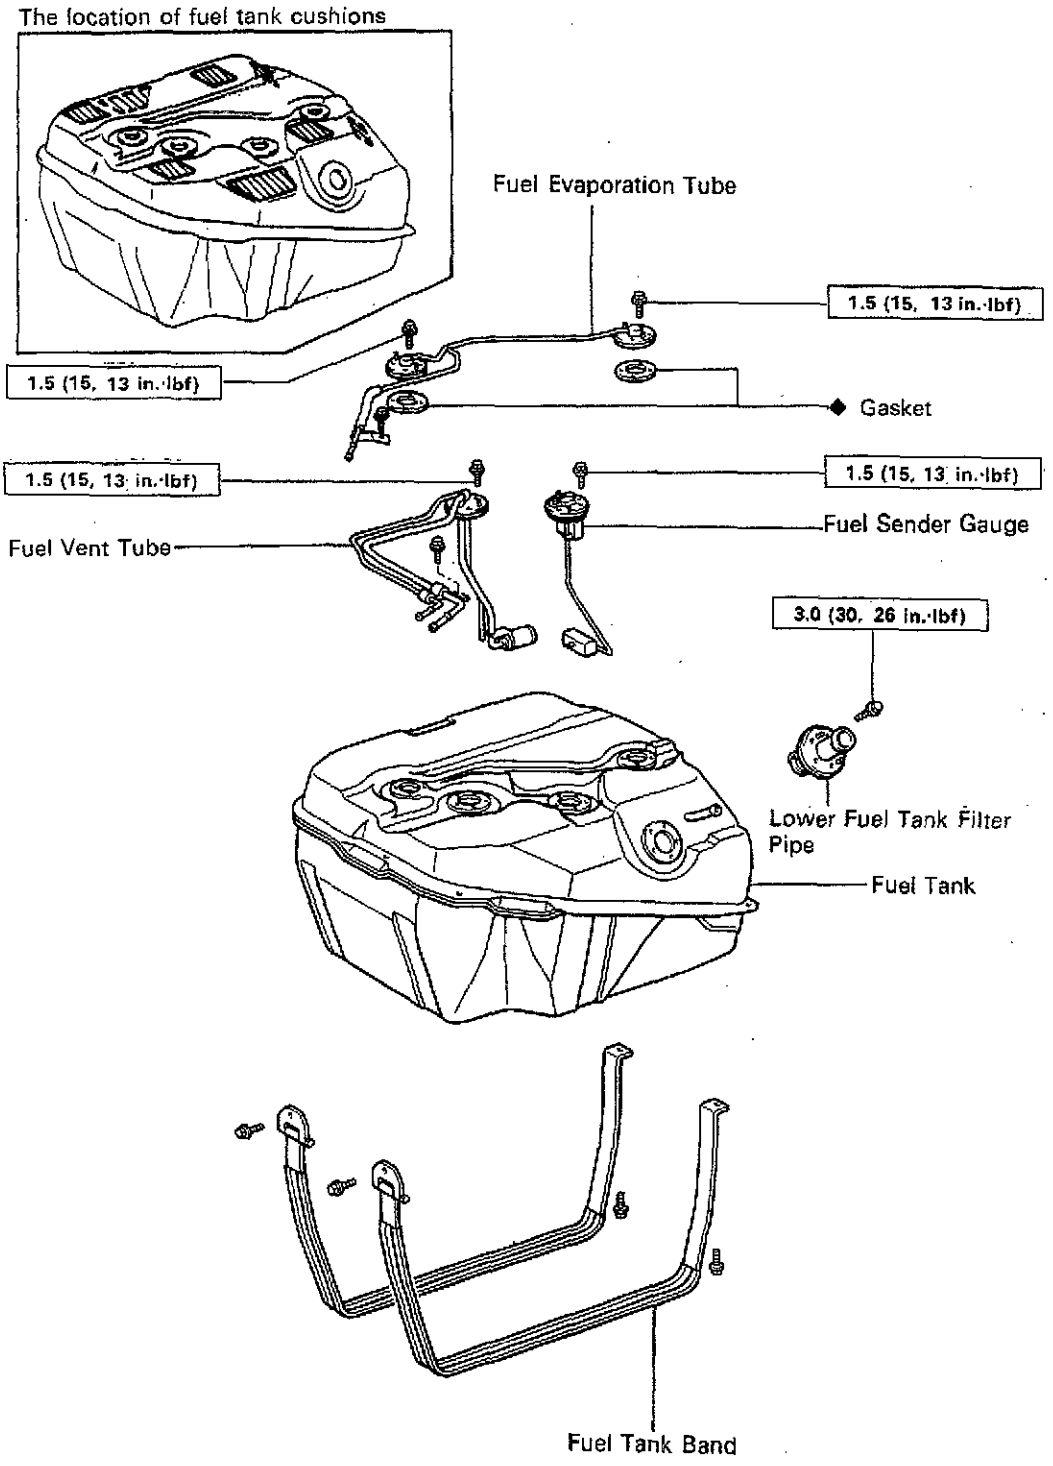

N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non-reusable part


N07705


BO

BO0Z8-01

PRECAUTIONS

1. **Always use new gaskets when replacing the fuel tank or component parts.**
2. **Apply the porper torque to all parts tightened.**

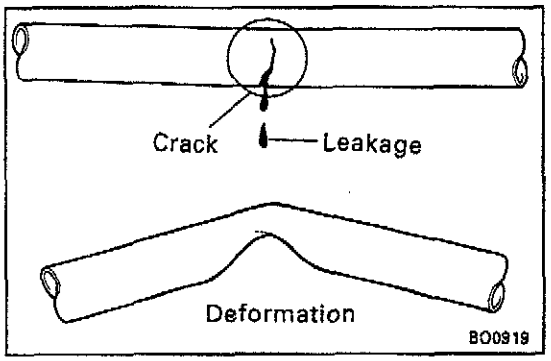

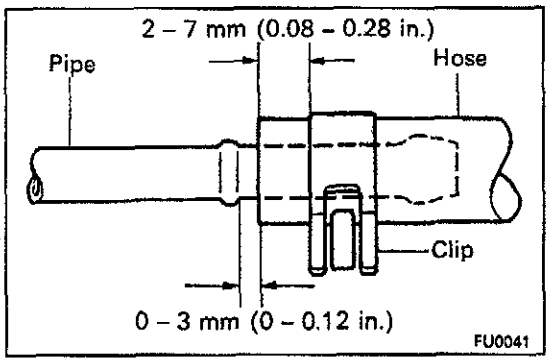

BO0Z6-01

FUEL LINES AND CONNECTIONS INSPECTION

(a) Check the fuel lines for cracks or leakage, and all connection.
(b) Check the fuel tank vapor vent system hoses and connections for looseness, sharp bends or damage.
(c) Check the fuel tank for deformation, cracks or fuel leakage or tank band looseness.
(d) Check the fuel neck for damage or fuel leakage.
(e) Hose and tube connections are as shwn in the illustration.
If a problem is found, repair or replace the parts as necessary.