
VEHICLE LIFT AND SUPPORT LOCATIONS

IN007-04

IN

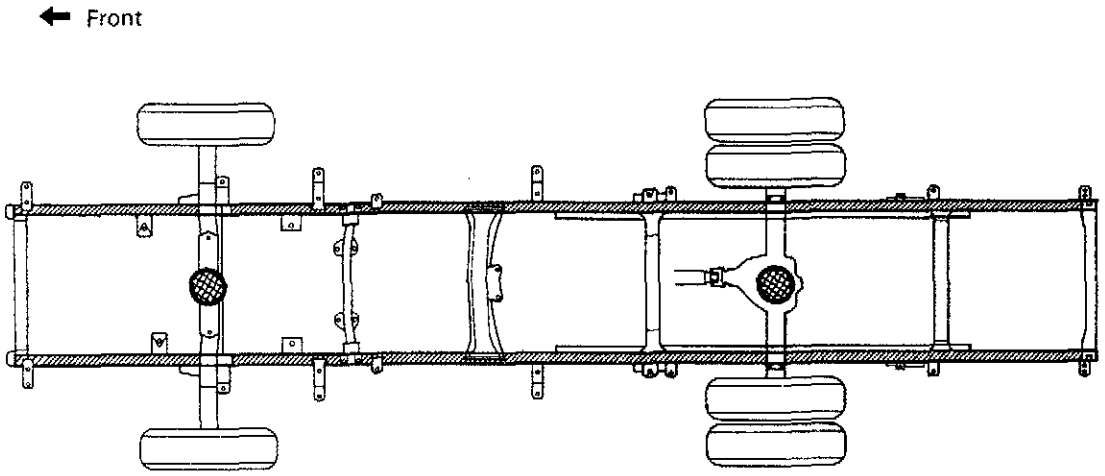

N07940

JACK POSITION
Front ..... Center of crossmember
Rear ..... Center of rear axle housing

SUPPORT POSITION
Safety stand .....

Z07731