

FRONT BEARING RETAINER

COMPONENTS

MT05Q–01

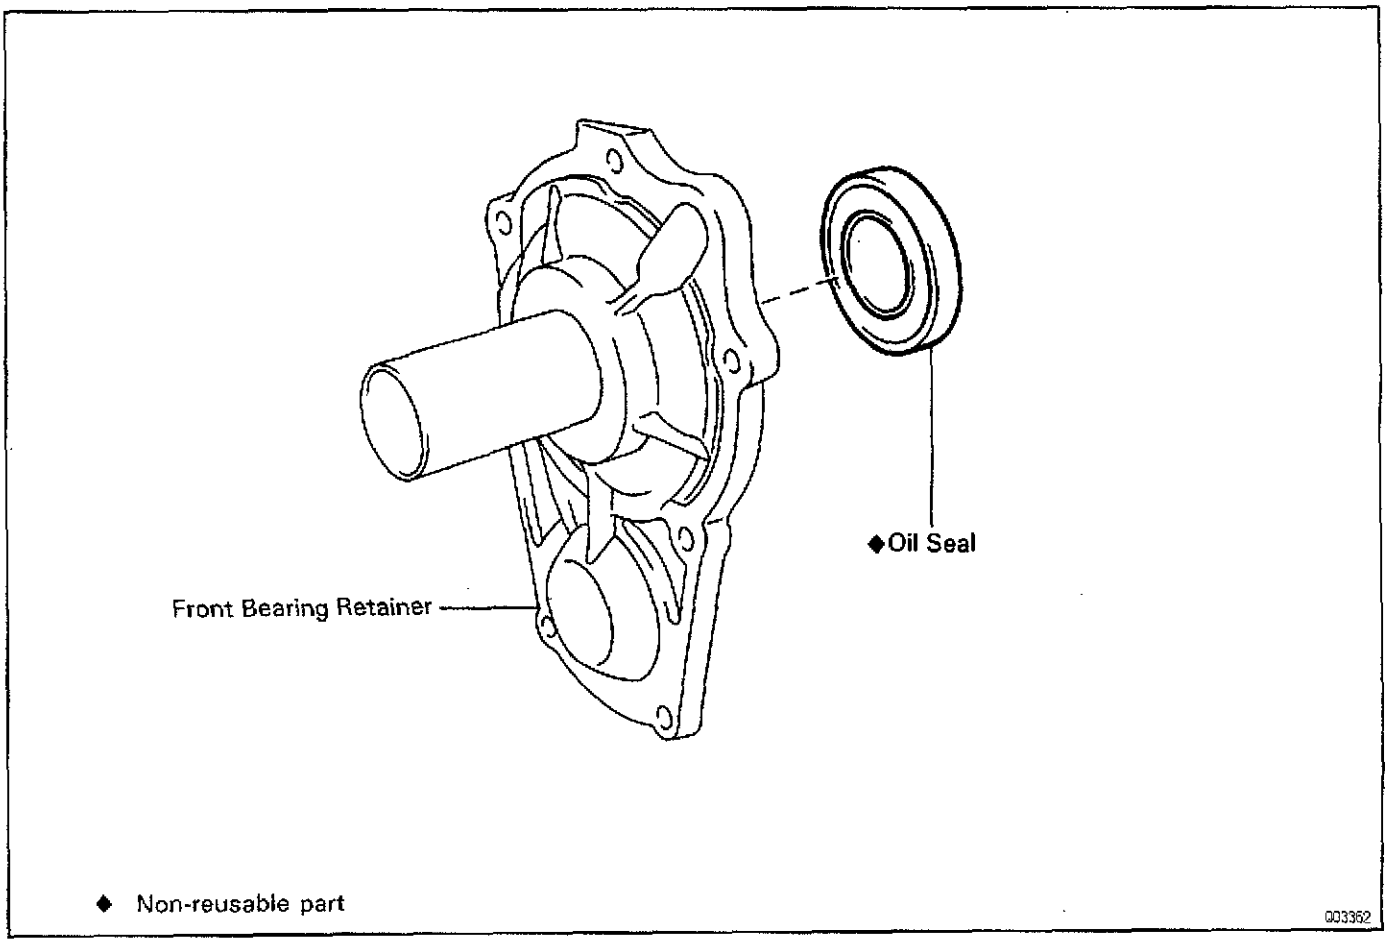

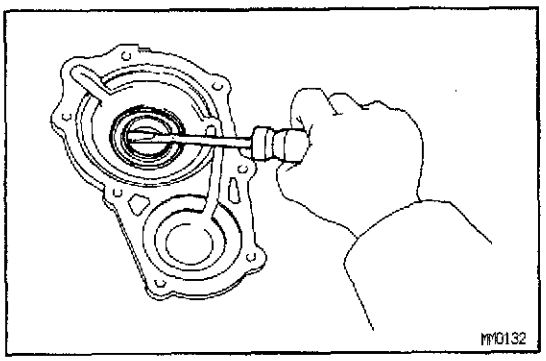


MT05R–01

OIL SEAL REPLACEMENT

REPLACE FRONT BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

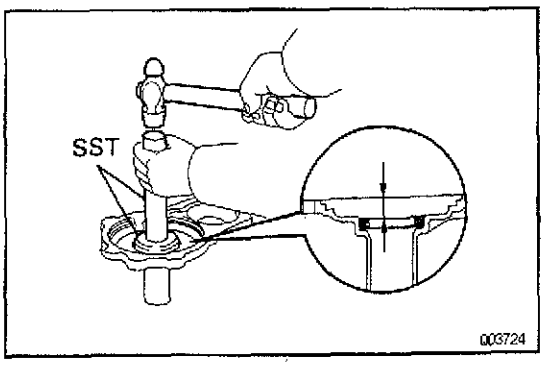

(b) Using SST, drive in a new oil seal.
SST 09608–12010 (09608–00020, 09608–00030)
Oil seal depth:
15.0–15.8 mm (0.591–0.622 in.)