
REAR BEARING RETAINER

MT0ES–01

COMPONENTS

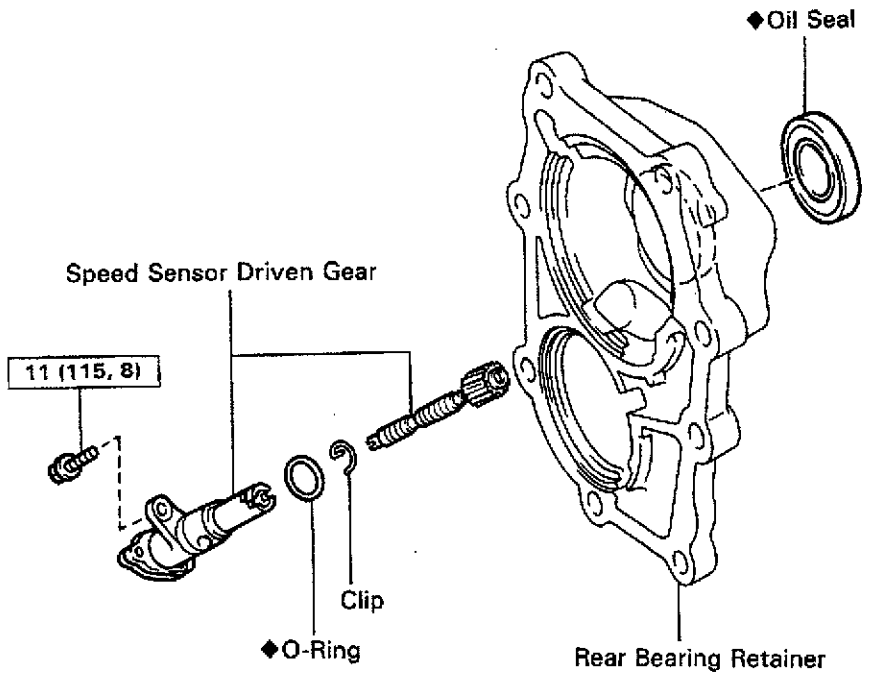


N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non-reusable part

003421

MT

MT0ST–01


OIL SEAL REPLACEMENT

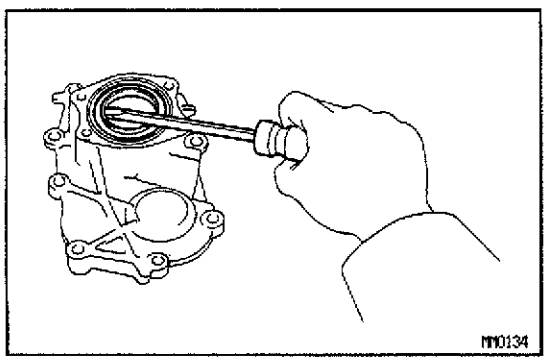

MM0134

1. REPLACE REAR BEARING RETAINER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

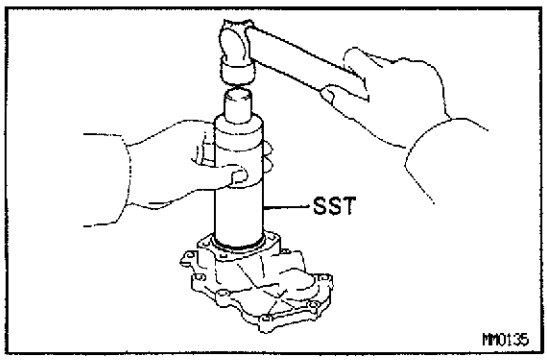

MM0135

(b) Using SST, drive in a new oil seal.
SST 09316–60010 (09316–00010)
Drive in depth:
0.1–0.9 mm (0.004–0.035 in.)