

REAR SHOCK ABSORBER
COMPONENTS

SA0YF-01

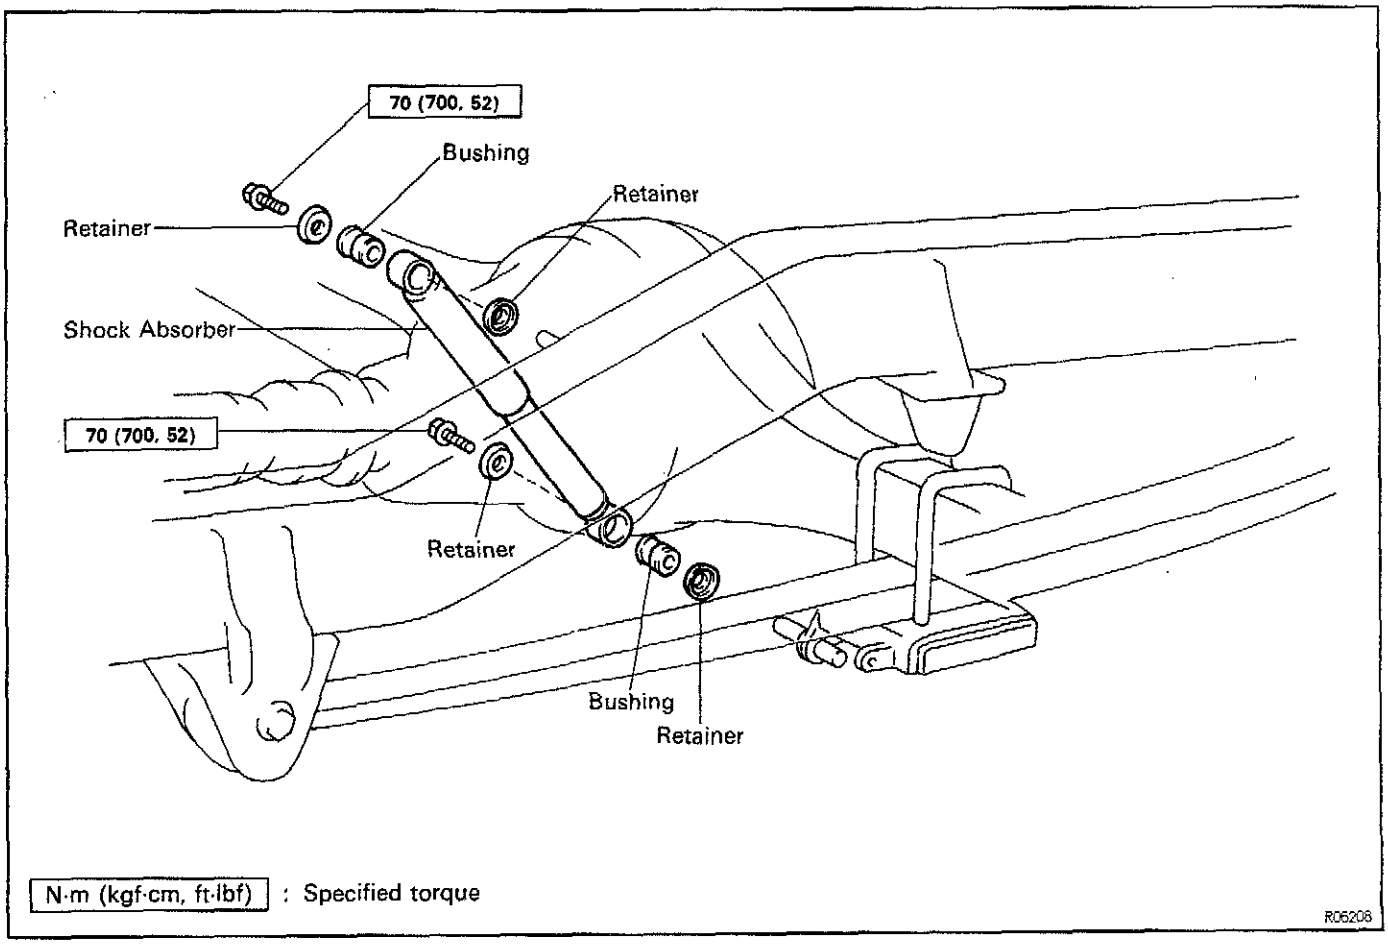

SA0YG-01


REAR SHOCK ABSORBER REMOVAL

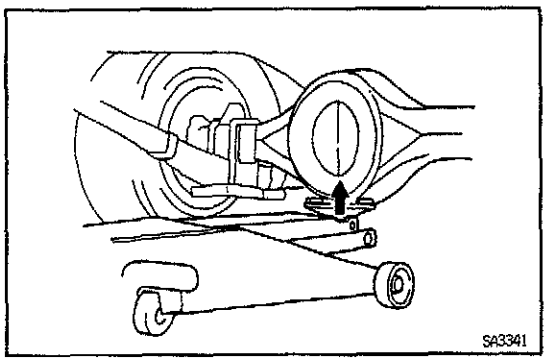

1. JACK UP AND SUPPORT FRAME

(a) Jack up and support the frame on stands.


(b) Lower the axle housing until the leaf spring tension is free, and keep it at this position.

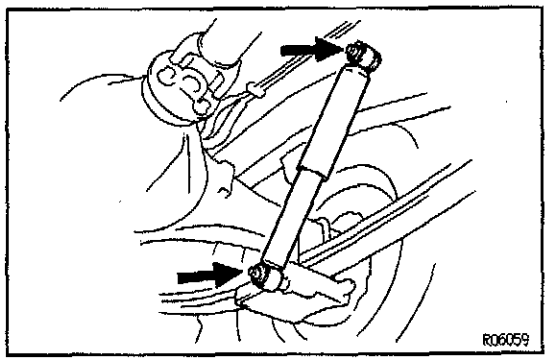

2. REMOVE REAR SHOCK ABSORBER

(a) Remove the 2 rear shock absorber set bolts.

(b) Remove the shock absorber.

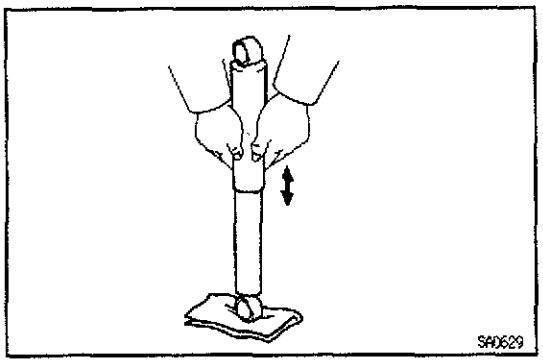


REAR SHOCK ABSORBER INSPECTION

SA0YH-01

INSPECT SHOCK ABSORBER

Compress and extend the shock absorber rod and check that there is no abnormal resistance or unusual operation sounds.

If there is any abnormality, replace the shock absorber with a new one.

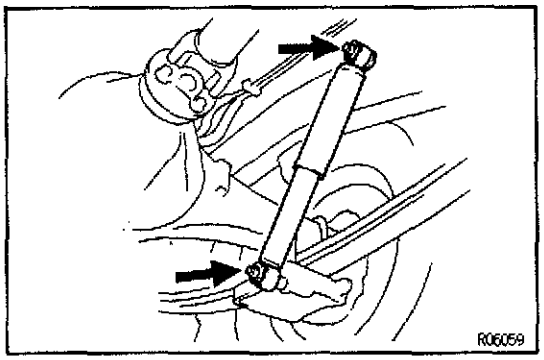

REAR SHOCK ABSORBER INSTALLATION

SA0YJ-01

1. **INSTALL REAR SHOCK ABSORBER**

(a) Connect the rear shock absorber upper to the frame with the bolt.

(b) Tighten the bolt.

Torque: 70 N·m (700 kgf·cm, 52 ft·lbf)

(c) Connect the rear shock absorber lower to the spring seat with the bolt.

(d) Tighten the bolt.

Torque: 70 N·m (700 kgf·cm, 52 ft·lbf)

2. **LOWER VEHICLE**