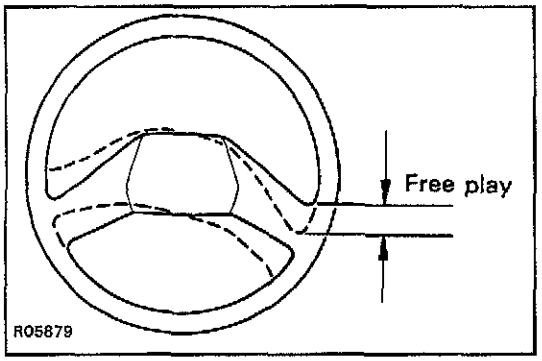


ON–VEHICLE INSPECTION

1. **CHECK THAT STEERING WHEEL FREEPLAY IS CORRECT** SR0EY-01


With the vehicle stopped and tires pointed straight ahead, rock the steering wheel gently back and forth with light finger pressure.

Freeplay should not exceed the maximum.

Maximum freeplay:

40 mm (1.58 in.)

If incorrect, repair.

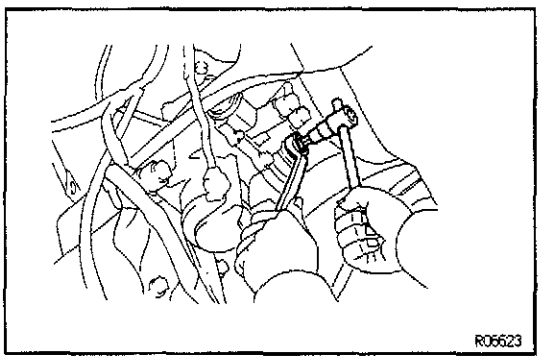

2. **ADJUST STEERING GEAR HOUSING**

(a) Using a hexagon wrench (6 mm), loosen the lock nut.

(b) Turn the adjusting screw clockwise to decrease wheel freeplay and counterclockwise to increase it.

HINT: Turn the adjusting screw in small increments and check the wheel freeplay between each adjustment.

3. **CHECK THAT STEERING DOES NOT BIND**

Turn the steering wheel half way around in both directions.

Check that the freeplay is correct and steering is smooth and without rough spots.

4. **HOLD ADJUSTING SCREW AND TIGHTEN LOCK NUT**