
ASSEMBLY REMOVAL AND INSTALLATION

SR0EZ--01


Remove and install the parts, as shown.

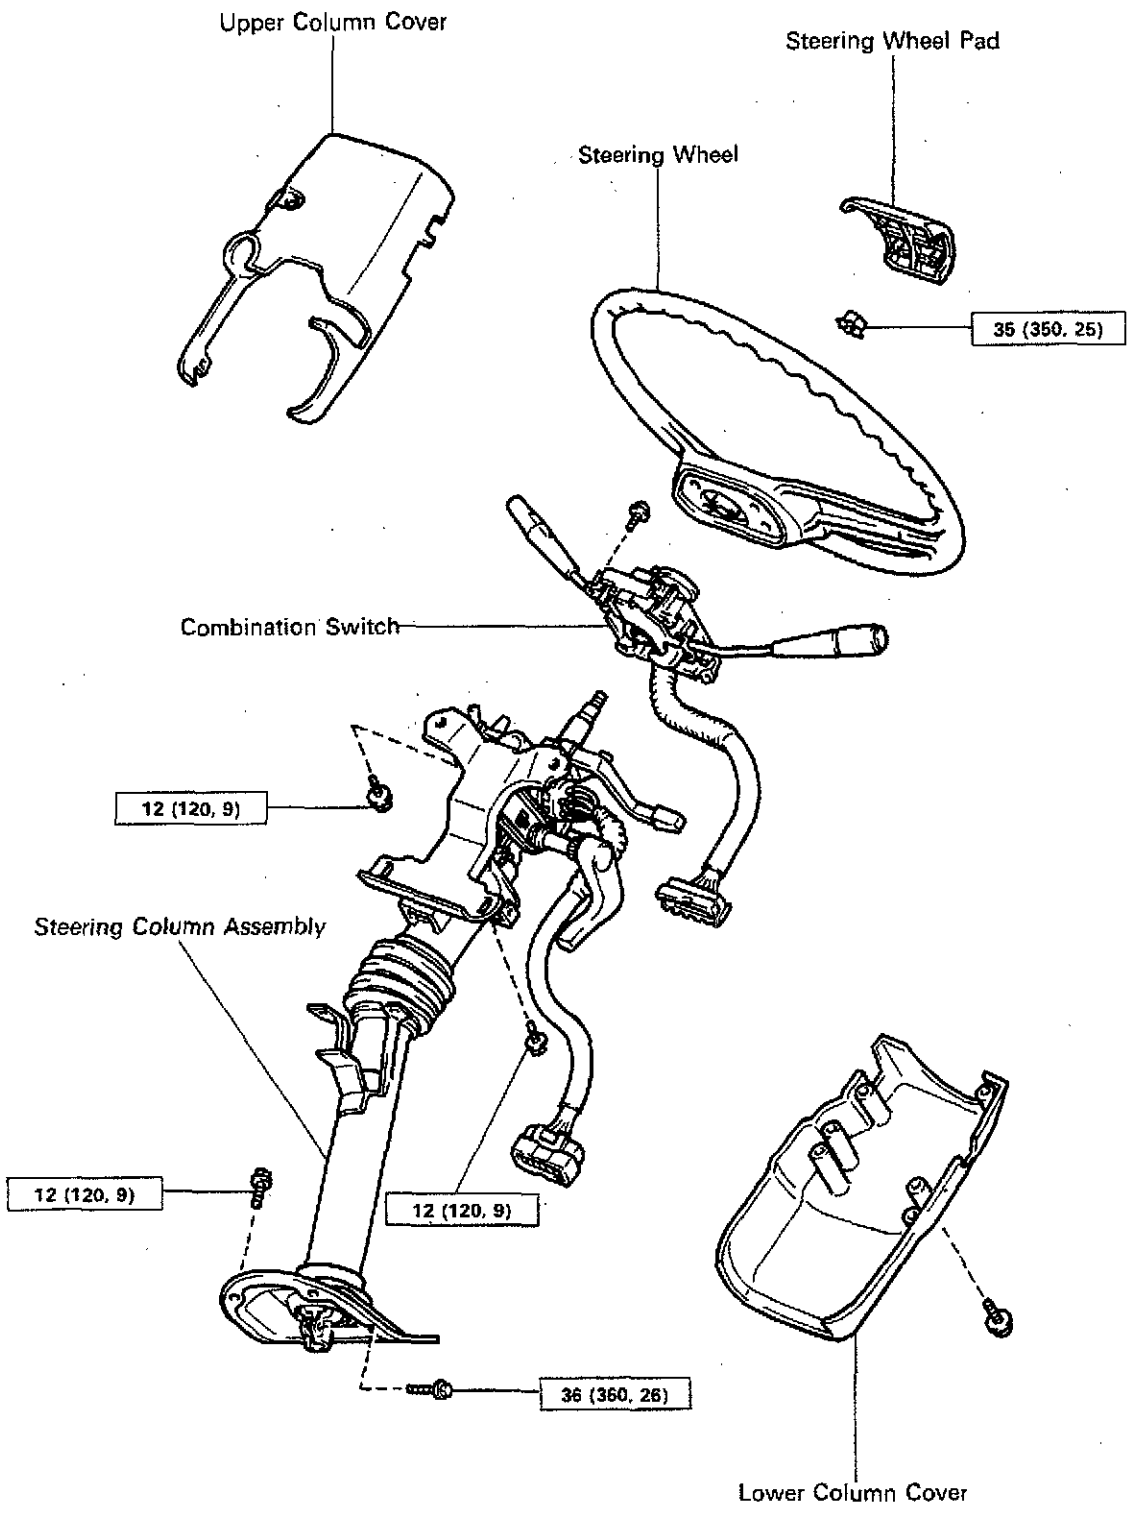

N·m (kgf·cm, ft·lbf) : Specified torque

R05991

SR

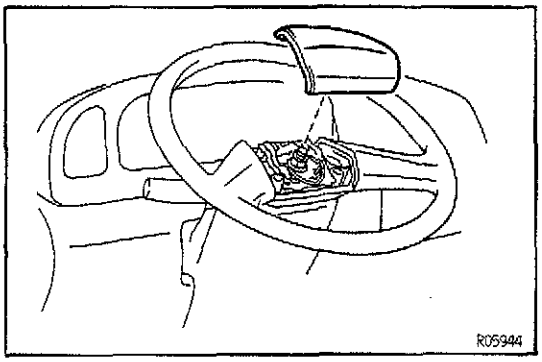


MAIN POINTS OF REMOVAL AND INSTALLATION


1. REMOVE STEERING WHEEL

(a) Remove the steering wheel pad.

(b) Remove the steering wheel set nut.

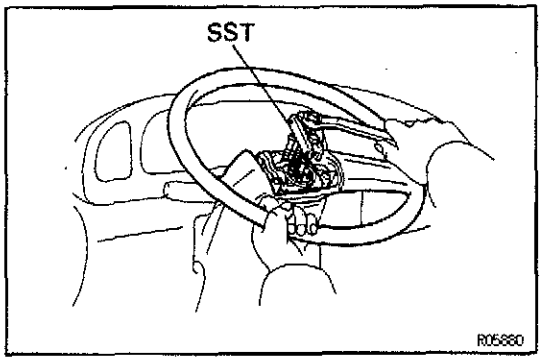

(c) Using SST, remove the steering wheel.
SST 09609–20011

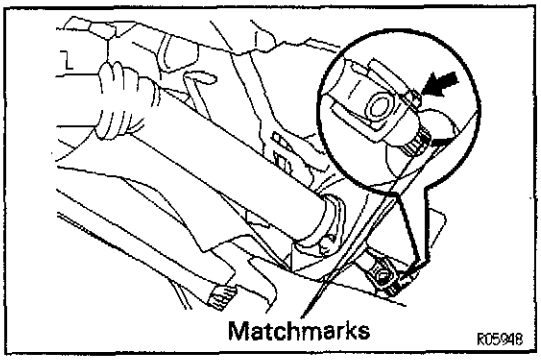

2. DISCONNECT MAIN SHAFT

(a) Remove the steering column assembly.

(b) Place matchmarks on gear housing and flexible coupling.

3. CHECK STEERING WHEEL CENTER POINT AFTER INSTALLING STEERING COLUMN