
PRECAUTION

1. Do not leave the ignition switch on for more than 10 minutes if the engine does not start.

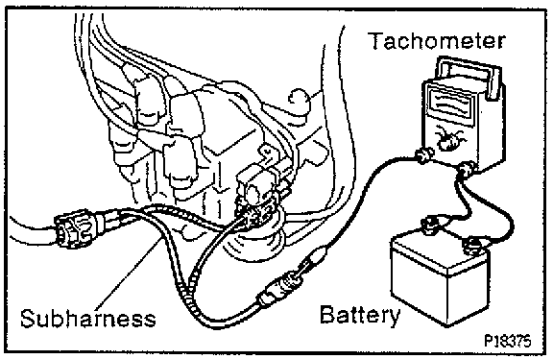

2. With a tachometer connected to the system, disconnect the distributor connector (for negative (—) terminal of ignition coil). Then connect the subharness to the distributor. Connect the test probe of a tester to the subharness form the distributor.

3. As some tachometers are not compatible with this ignition system, we recommend that you confirm the compatibility of your unit before use.

4. NEVER allow the tachometer terminals to touch ground as it could result in damage to the igniter and/or ignition coil.

5. Do not disconnect the battery while the engine is running.

6. Check that the igniter is properly grounded to the body.