
STARTER RELAY

STARTER RELAY INSPECTION


ST040-01

1. **REMOVE STARTER RELAY**
   LOCATION:
   RCK series
   The relay is located in the junction block on the driver's side.
   RZB series
   The relay is located near the rear RH front floor panel.

ST

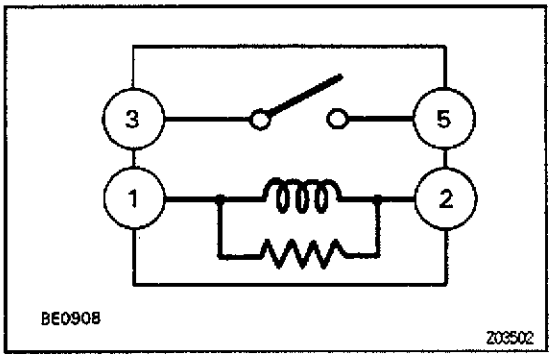


2. **RKC Series:**
   INSPECT STARTER RELAY

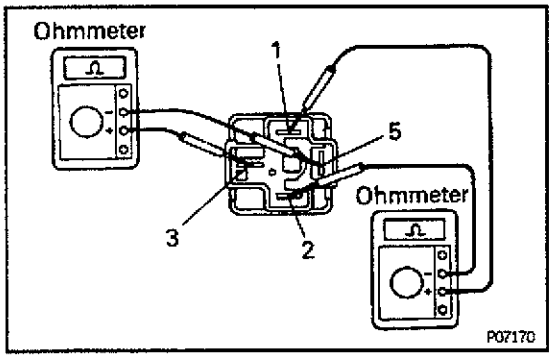

A. Inspect relay continuity

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

(b) Check that that there is no continuity between terminals 3 and 5.
If continuity is not as specified, replace the relay.

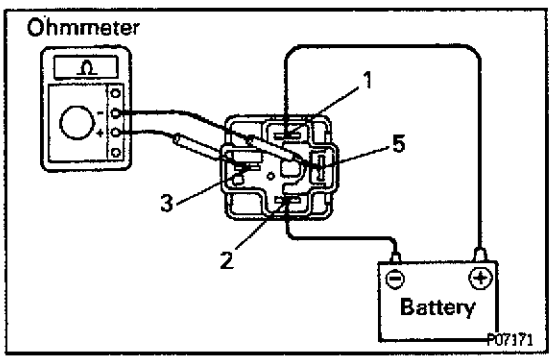



B. Inspect relay operation

(a) Apply battery voltage across terminals 1 and 2.

(b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.
If operation is not as specified, replace the relay.

3. **RZB Series:**
   INSPECT STARTER RELAY

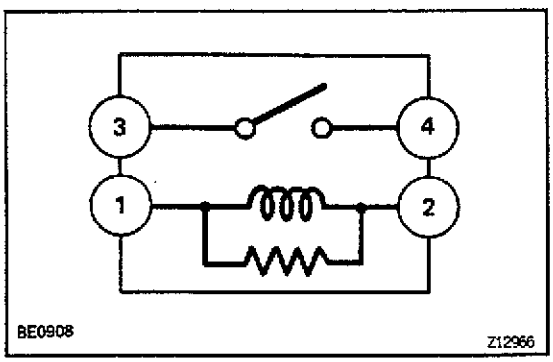

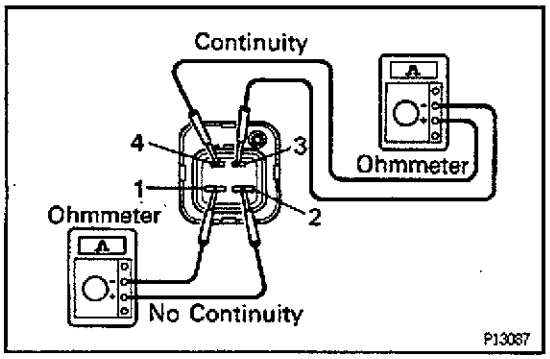


A. Inspect relay continuity

(a) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

(b) Check that there is no continuity between terminals 1 and 2.

If continuity is not as specified, replace the relay.

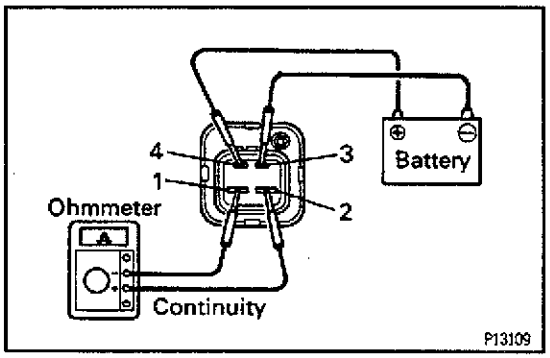

B. Inspect relay operation

(a) Apply battery voltage across terminals 3 and 4.

(b) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If operation is not as specified, replace the relay.

4. REINSTALL STARTER RELAY