EG0CH-14

EQUIPMEMT

Angle gauge	
Brass brush	
Dial indicator with magnetic base	
Graduated cylinder	
Injection nozzle tester	
Injection pump tester	
Inner pressure gauge	
Micrometer	
Ohmmeter	
Thickness gauge	
Timer measuring device	
Torque wrench	
Vernier calipers	
Wooden stick	

EG


FUEL FILTER

EG9TF-03

1. **DISCONNECT FUEL FILTER WARNING SWITCH CONNECTOR**
2. **DRAIN FUEL FROM FUEL FILTER**

(a) Install a vinyl hose to the drain cock, and insert the other end of the vinyl hose in a container.


(b) Loosen the drain plug, and drain the fuel.

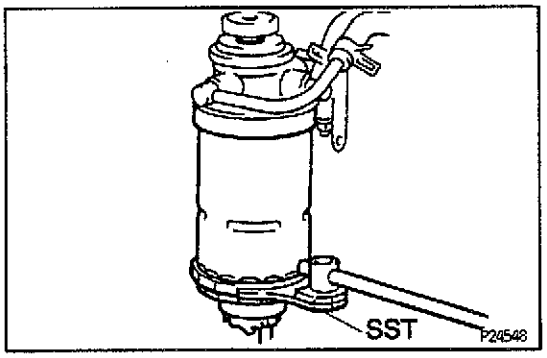

3. **REPLACE FUEL FILTER**

A. Remove fuel filter

Using SST, remove the fuel filter.
SST 09228–64010

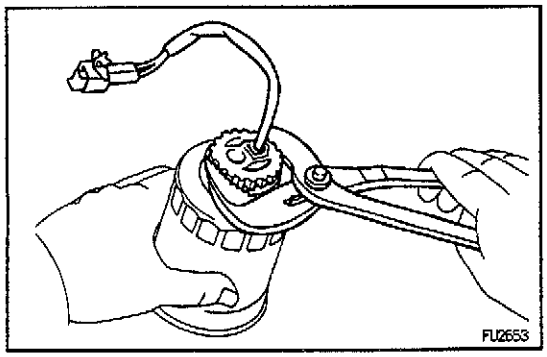

B. Remove fuel filter warning switch from fuel filter

Using pliers, remove the warning switch and O–ring.

NOTICE: Be careful not to damage the warning switch.

C. Install fuel filter warning switch to new fuel filter

(a) Install a new O–ring to the warning switch.

(b) Apply fuel to the O–ring of the warning switch.

(c) Install the warning switch to a new fuel filter by hand.