



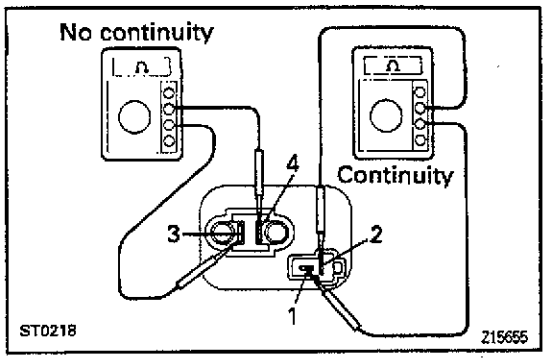


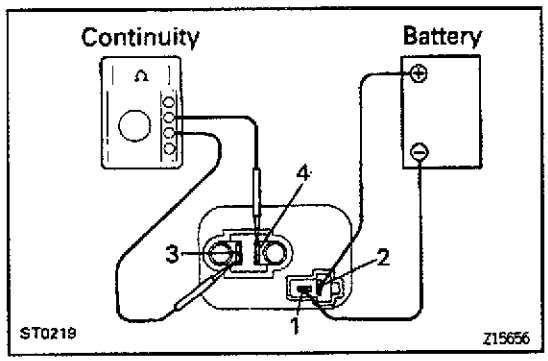

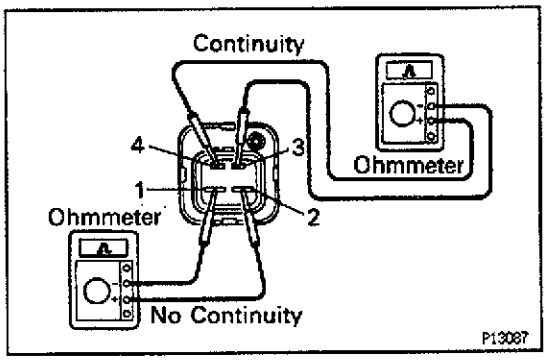

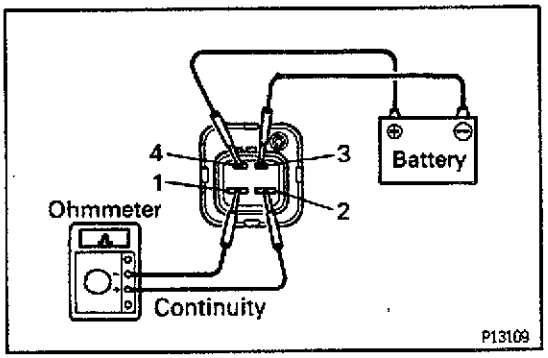

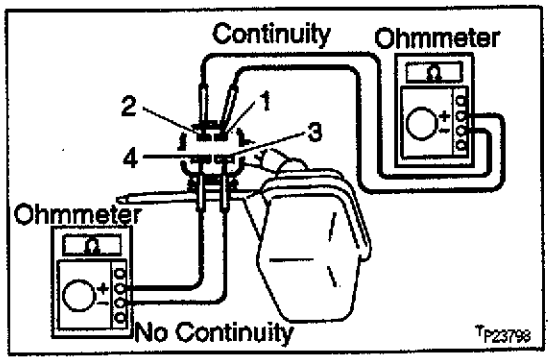

STARTER RELAY

STARTER RELAY INSPECTION (BU)

ST08F-01

LOCATION: See relay locations in Electrical Wiring Diagram.

1. **REMOVE STARTER RELAY**
2. **INSPECT STARTER RELAY**

A. Inspect relay continuity

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

(b) Check that there is no continuity between terminals 3 and 4.

If continuity is not as specified, replace the relay.

B. Inspect relay operation

(a) Apply battery voltage across terminals 1 and 2.

(b) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

If operation is not as specified, replace the relay.

3. **REINSTALL STARTER RELAY**

STARTER RELAY INSPECTION (BB)

ST08Y-02

LOCATION: See relay locations in Electrical Wiring Diagram.

1. **REMOVE STARTER RELAY**
2. **INSPECT STARTER RELAY (12 V)**

A. Inspect relay continuity

(a) Using an ohmmeter, check that there is continuity between terminals 3 and 4.

(b) Check that there is no continuity between terminals 1 and 2.

If continuity is not as specified, replace the relay.

B. Inspect relay operation

(a) Apply battery voltage across terminals 3 and 4.

(b) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If operation is not as specified, replace the relay.

3. **INSPECT STARTER RELAY (24 V)**

A. Inspect relay continuity

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

(b) Check that there is no continuity between terminals 3 and 4.

If continuity is not as specified, replace the relay.