
FRONT SPEED SENSOR

COMPONENTS


BR045-01

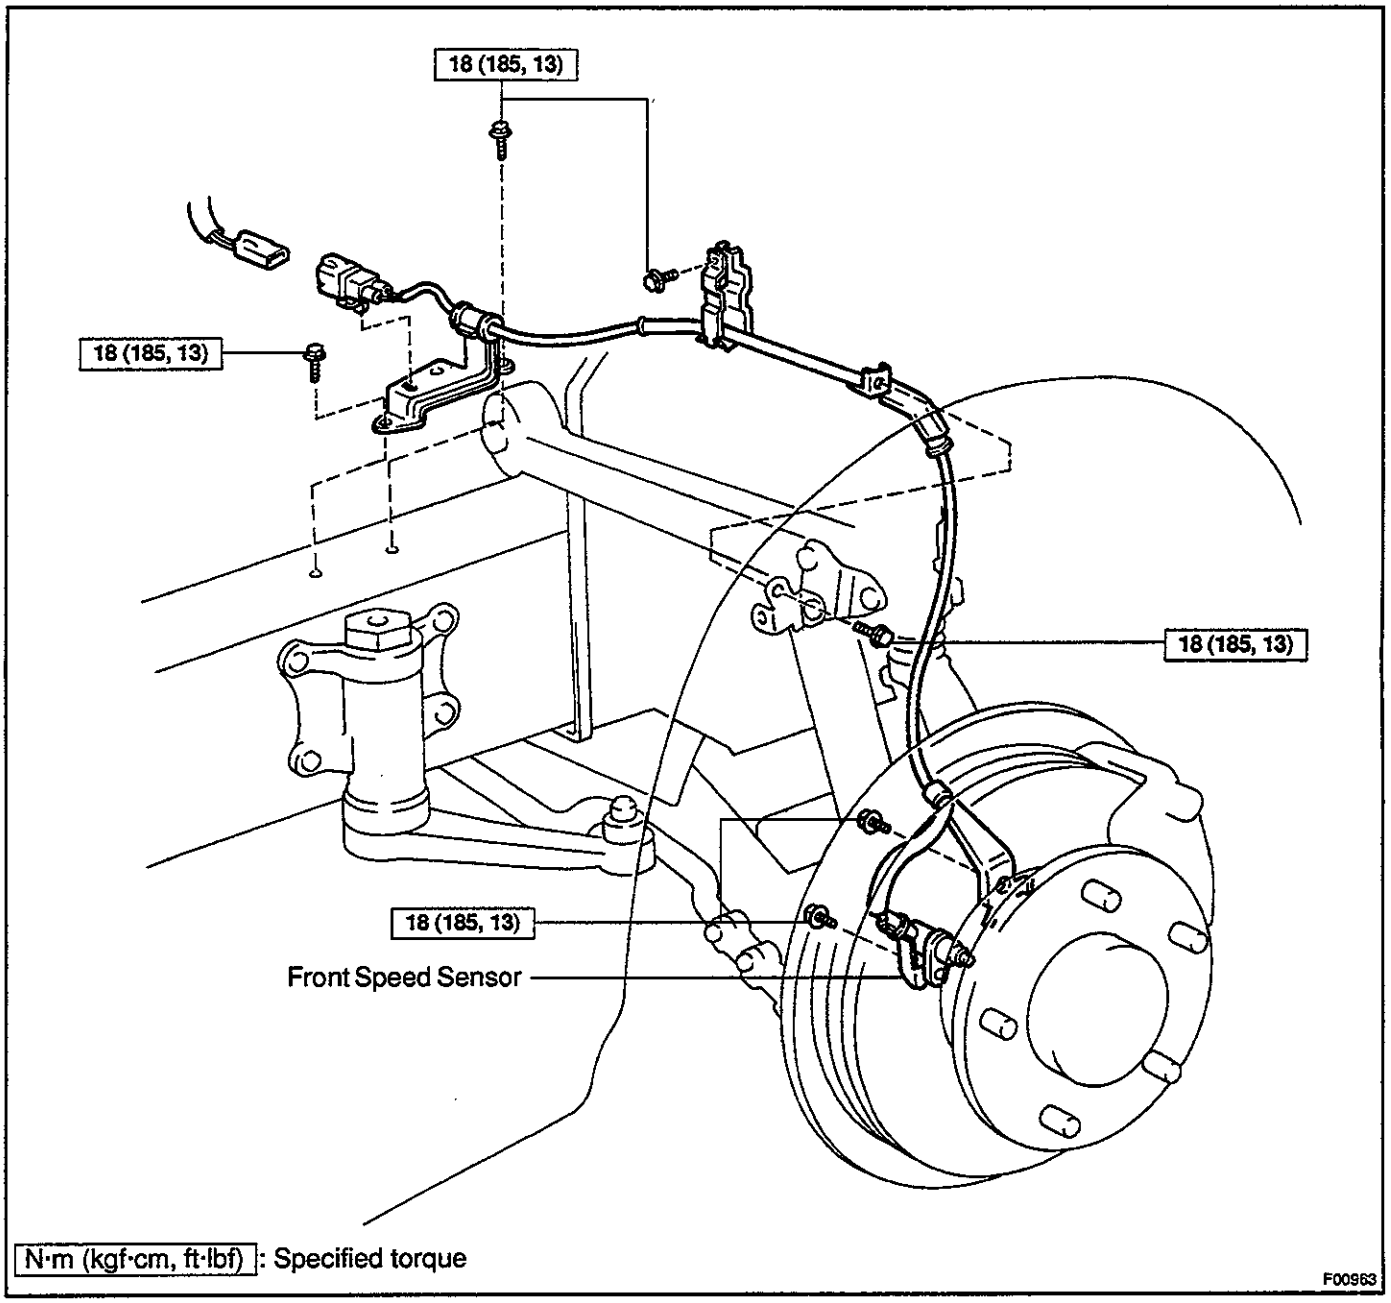

BR049-01


REMOVAL

REMOVE SPEED SENSOR

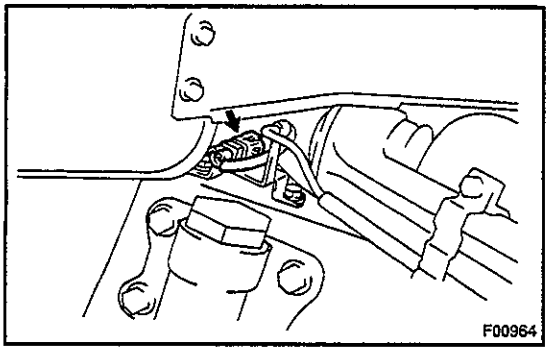

(a) Disconnect the speed sensor connector.

(b) Remove the 5 clamp bolts holding the sensor harness to the steering knuckle, upper arm and frame.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

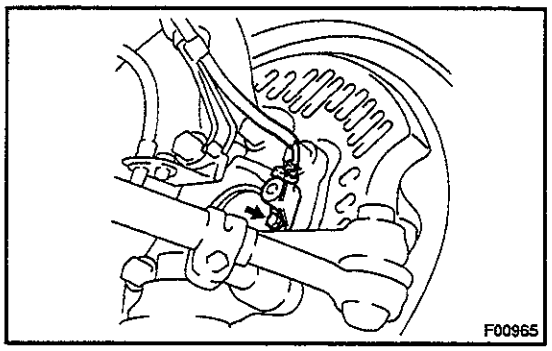

(c) Remove the speed sensor installation bolt from the steering knuckle.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

BR04A–01

INSTALLATION

Installation is in the reverse order of removal.

AFTER INSTALLATION, CHECK SPEED SENSOR SIGNAL (See page DI–21)

NOTICE:

Make sure that

- **There are no foreign objects on the sensor or the part of the knuckle to which the sensor is to be installed.**
- **The sensor is installed flat against the knuckle when you tighten the bolt.**