

REAR SPEED SENSOR

COMPONENTS

BR04B-01

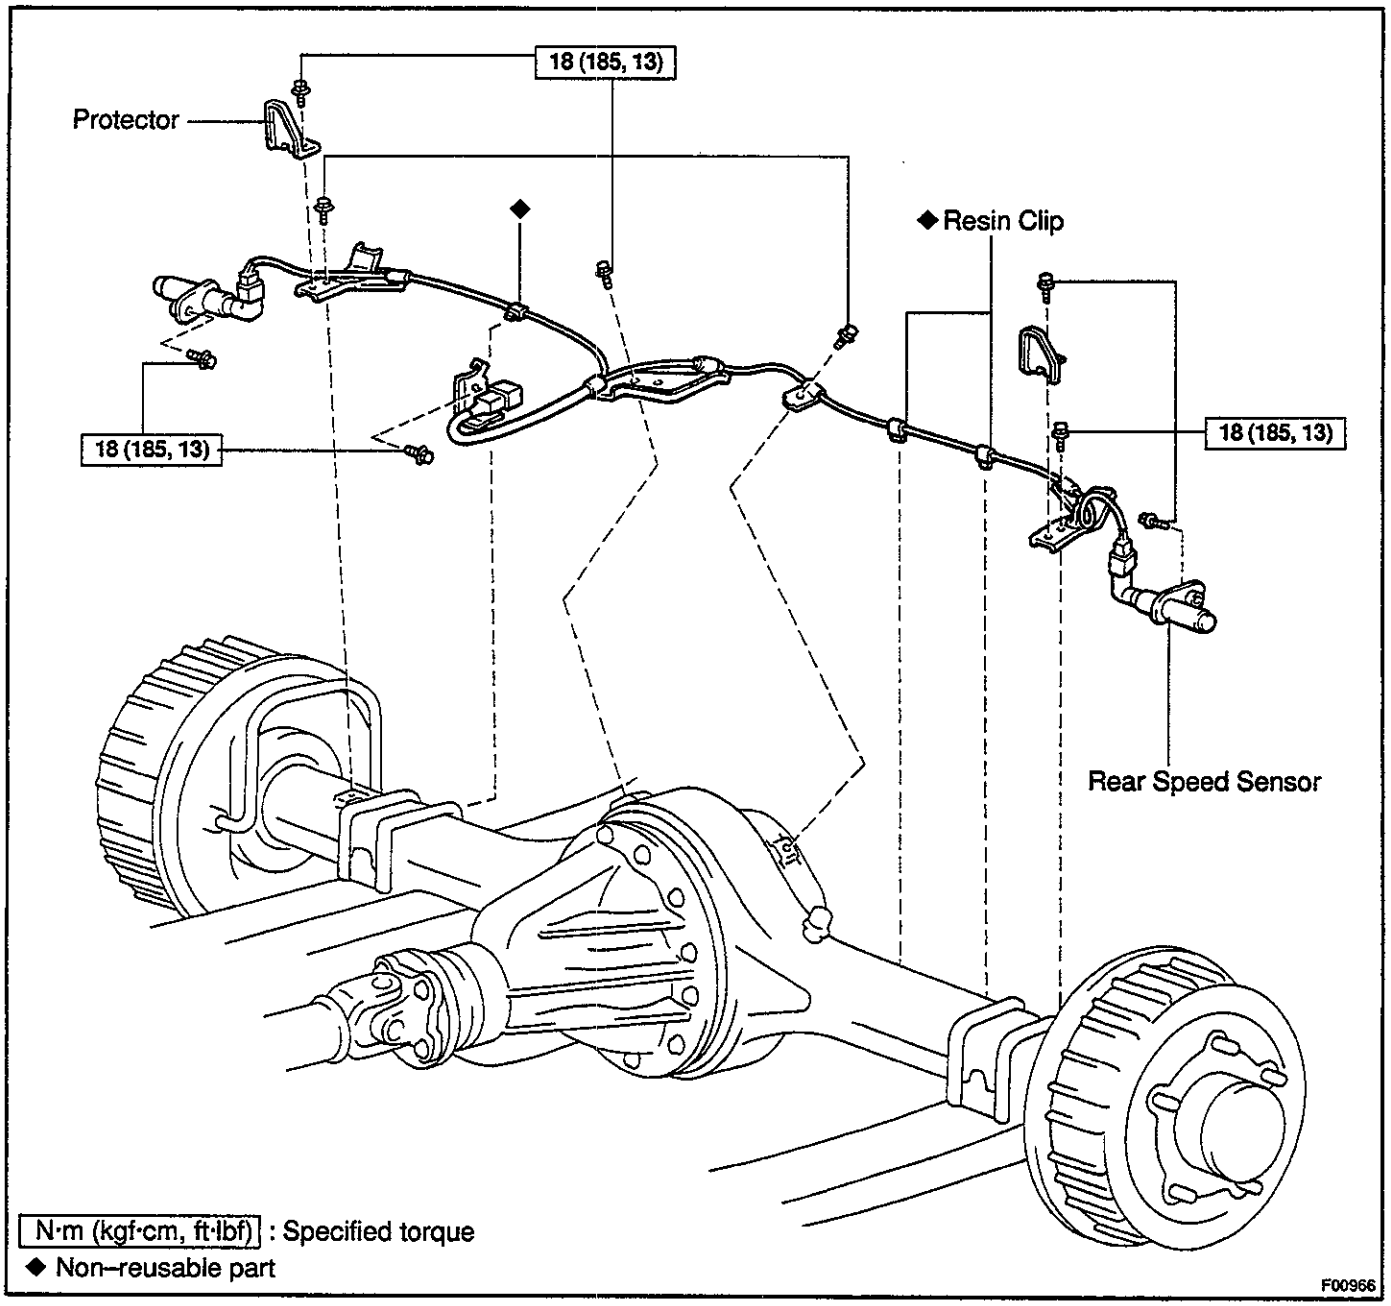

BR04C-01

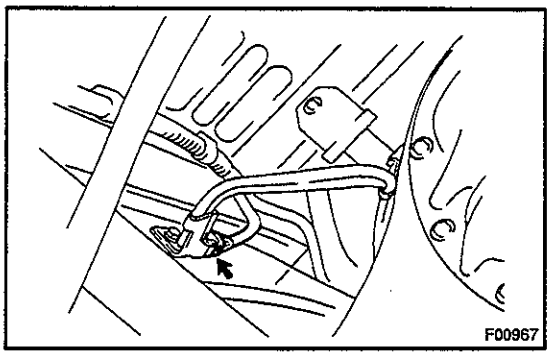


REMOVAL

REMOVE SPEED SENSOR

(a) Disconnect the speed sensor connector.

(b) Remove the 3 resin clips and 5 clamp bolts holding the sensor wire harness to the frame, upper control arm and axle housing.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

(c) Remove the 2 bolts and protectors.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

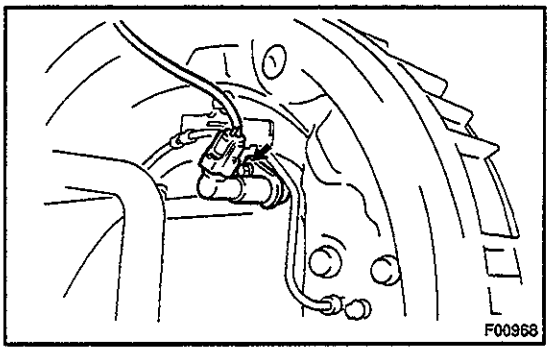

(d) Remove the mounting bolt and speed sensor.
Torque:18 N·m (185 kgf·cm, 13 ft·lbf)

BR04C-01

INSTALLATION

Installation is in the reverse order of removal.AFTER INSTALLATION, CHECK SPEED SENSOR SIGNAL (See page DI–21)

NOTICE:

Make sure that

- There are no foreign objects on the sensor or the part of the knuckle to which the sensor is to be installed.
- The sensor is installed flat against the knuckle when you tighten the bolt.
- When installing the resin clips , use new ones.