
IN017-01

VEHICLE LIFT AND SUPPORT LOCATIONS

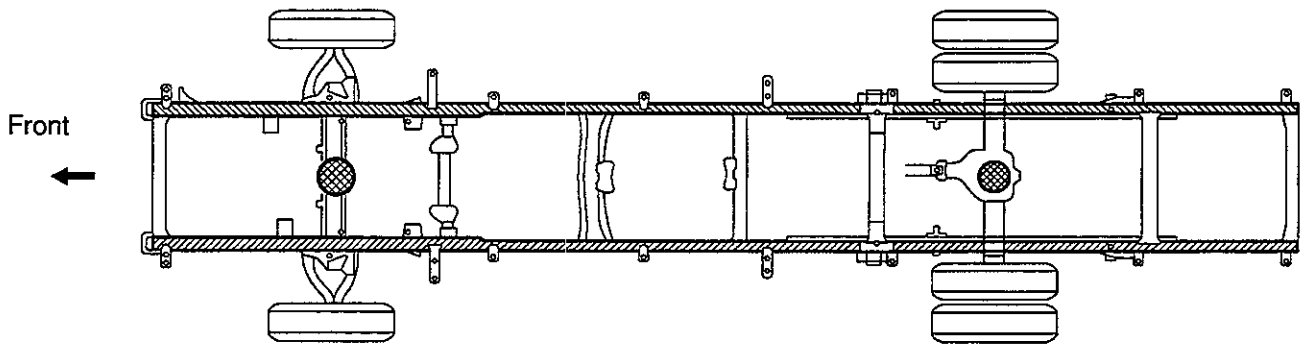

JACK POSITION

Front - - - - - - - - - - - - - - - - - - Center of crossing

Rear - - - - - - - - - - - - - - - - - - Center of rear axle housing

SUPPORT POSITION

Safety stand -

B01292