
AT0RB–01

INSTALLATION

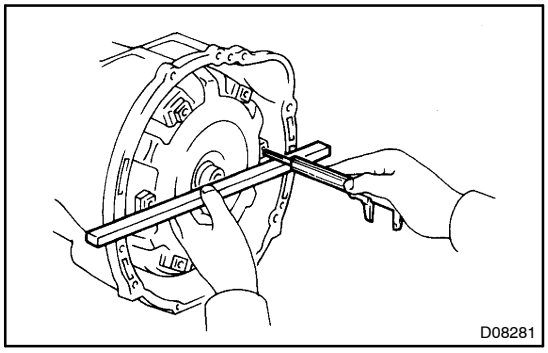

1. CHECK TORQUE CONVERTER CLUTCH INSTALLATION

Using calipers and a straight edge, measure the distance from the installed surface of the transmission housing to the installed surface of the torque converter clutch.

Correct distance: More than 17.95 mm (0.7067 in.)

2. INSTALL TRANSMISSION

Installation is in the reverse order of removal (See page AT–5).

HINT:

- After installation, adjust the shift lever position (See Pub. No. RM339E on page AT–25).
- Fill ATF and check the fluid level (See Pub. No. RM339E on page AT–24).
- Conduct the road test of the vehicle (See Pub. No. RM339E on page AT–46).