
# COMBINATION METER


BE1CK–01

## CIRCUIT

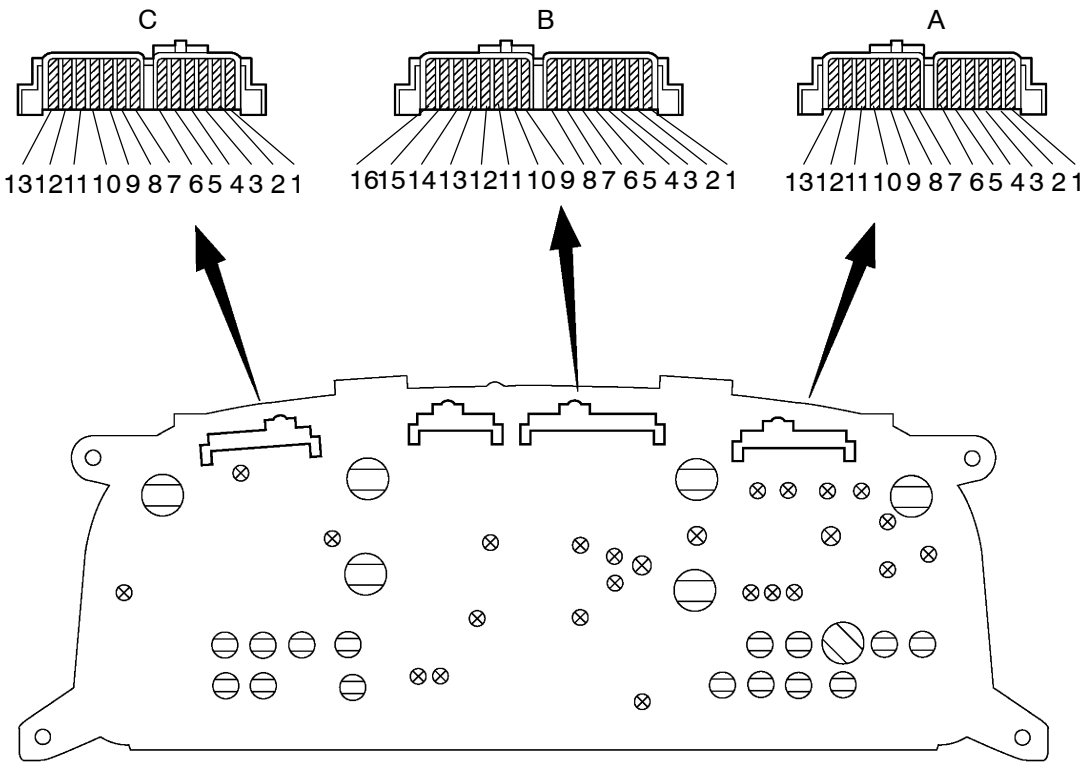


Y

I14813

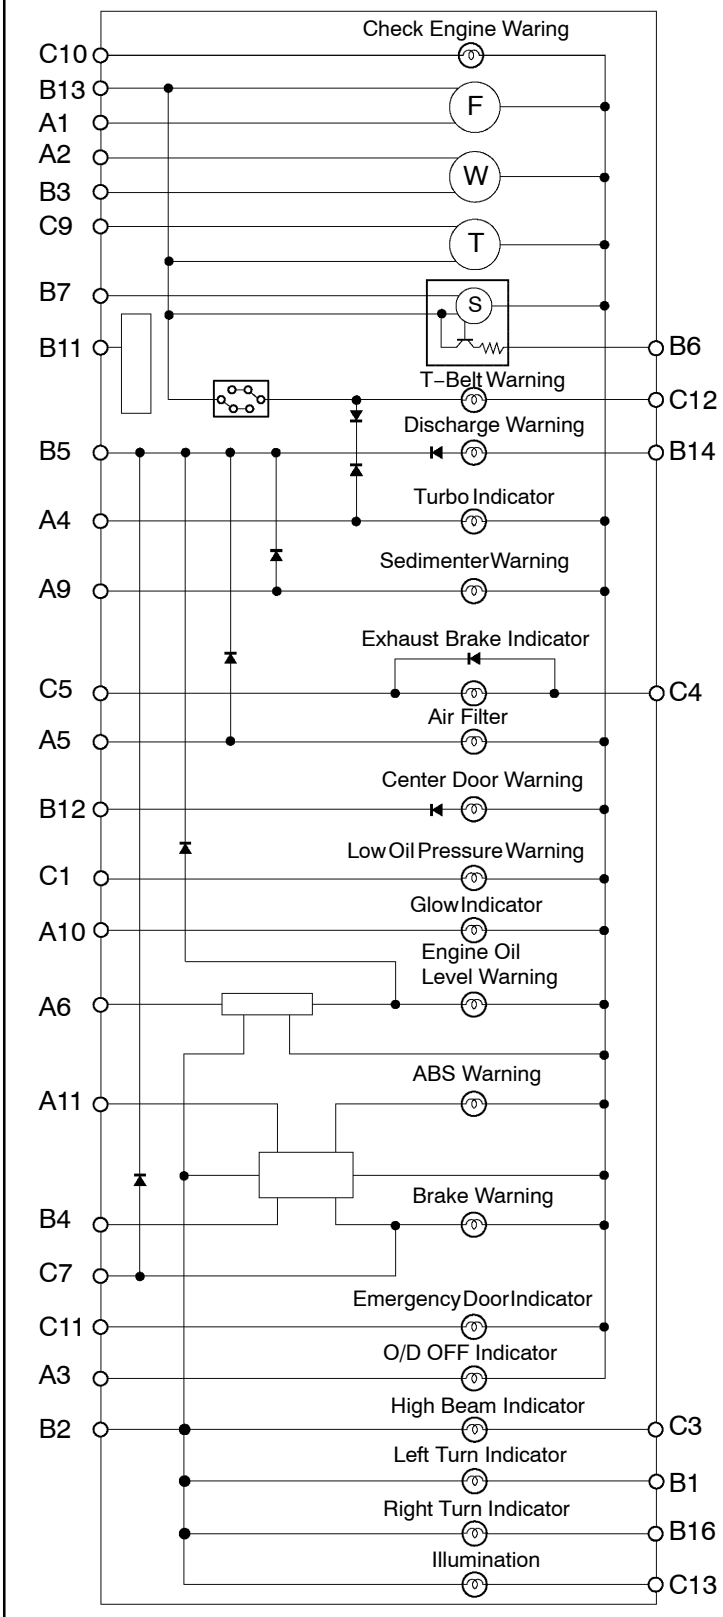


Y

(F) : Fuel Sinder Gauge (T) : Tachometer

(W) : Water Temperature Semder Gauge (S) : Speedometer

| No. | | Wiring Connector Side |
|---|---|---|
| A | 1 | Fuel Sender Gauge |
| | 2 | Ground |
| | 3 | O/D OFF Switch |
| | 4 | Turbo Warning Relay |
| | 5 | Air Cleaner Warning Sensor |
| | 6 | Engine Oil Level Sensor |
| | 9 | Sedimenter Buzzer |
| | 10 | Glow Timer |
| | 11 | ABS ECU |
| B | 1 | Turn Signal Switch (L) |
| | 2 | Ground |
| | 3 | Water Temperature Sender Gauge |
| | 4 | ABS ECU |
| | 5 | ALT Terminal L |
| | 6 | Tachograph, Automatic Door Control ECU, Engine ECU, ECT ECU |
| | 7 | Speed Sensor |
| | 11 | Speed Sensor Power Source |
| | 12 | Auto Door Switch |
| | 13 | Ground |
| | 14 | IGN Fuse |
| | 16 | Turn Signal Switch (R) |
| C | 1 | Oil Pressure Switch |
| | 3 | Headlight Dimmer Switch |
| | 4 | Ground |
| | 5 | Exhaust Brake Switch |
| | 7 | Brake Fluid Level Warming Switch Parking Brake Switch |
| | 9 | Pick–up Sensor, Engine ECU, Igniter |
| | 10 | Engine ECU |
| | 11 | Emergency Exit Door Courtesy Switch |
| | 12 | GAUGE Fuse |
| | 13 | Tail Fuse |

I13471