
BO2MX–01

REMOVAL

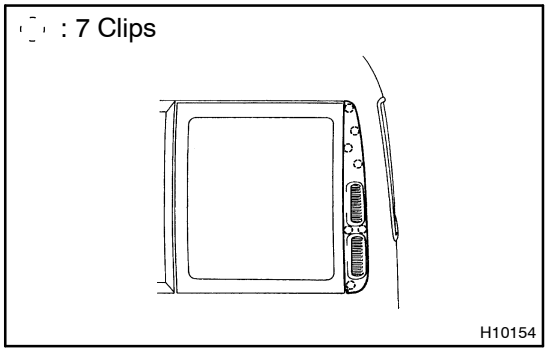


1. REMOVE QUARTER VENTILATOR LOUVER

Using a screwdriver, remove the quarter ventilator louver.


HINT:

Tape the screwdriver tip before use.

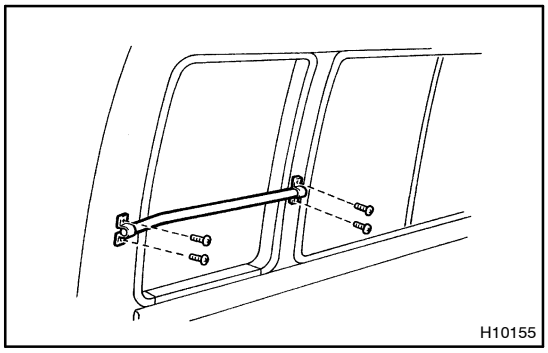

2. w/ Window guard:
REMOVE WINDOW GUARD

Remove the 4 screws and window guard.

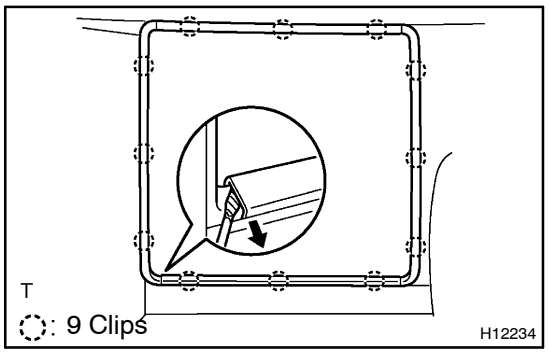


3. REMOVE SIDE WINDOW GARNISHES

Using a screwdriver, remove the side window garnishes.

HINT:

Tape the screwdriver tip before use.

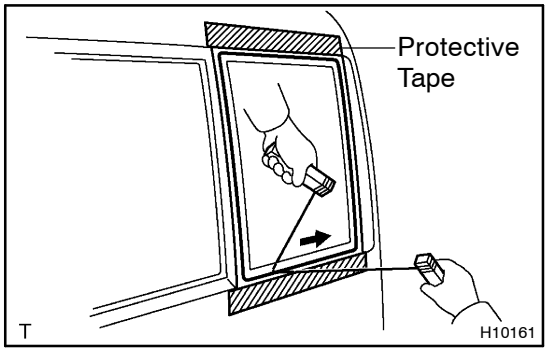

4. REMOVE SIDE REAR GLASS

(a) Push a piano wire through from the interior.


(b) Tie both wire ends to wooden blocks or similar objects.

HINT:

Apply protective tape to the outer surface to keep the surface from being scratched.

NOTICE:


When separating the glass, take care not to damage the paint and exterior.

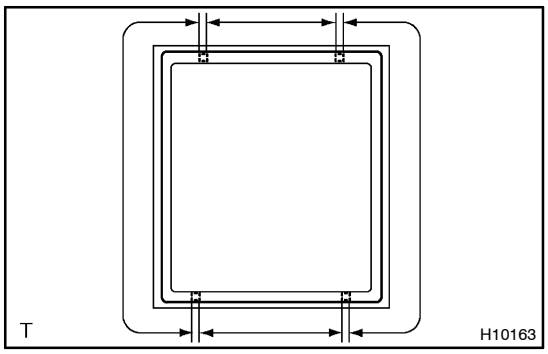

(c) Cut the adhesive by pulling the piano wire around it.

HINT:

Cut the adhesive areas as shown in the illustration, leaving the adhesive where the spacers are.

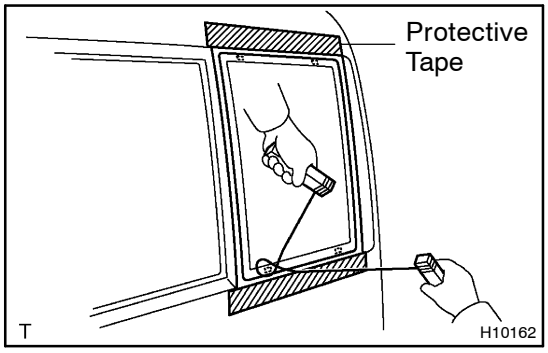

(d) Push the piano wire through as shown in the illustration, cut off the adhered part to the pins.
(e) Remove the glass.

NOTICE:

Leave as much of the adhesive on the body as possible when cutting off the glass.