
SEAT


COMPONENTS

BO2MZ–01


Drivers seat:

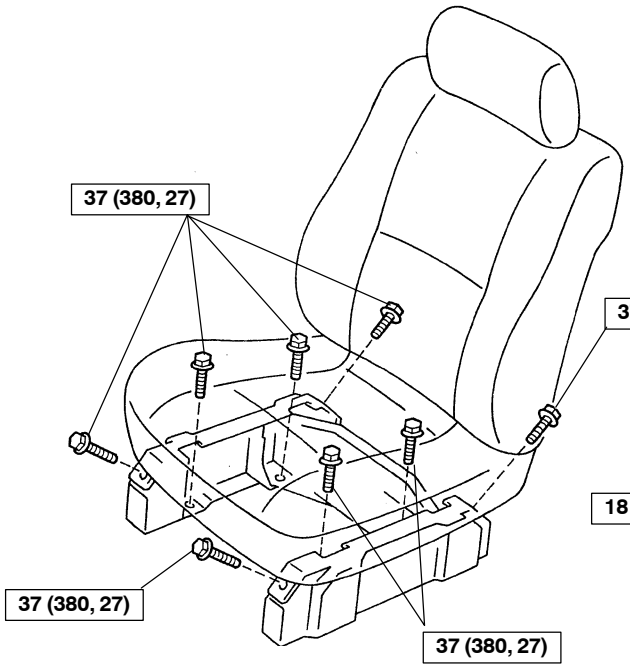


Front passenger seat:

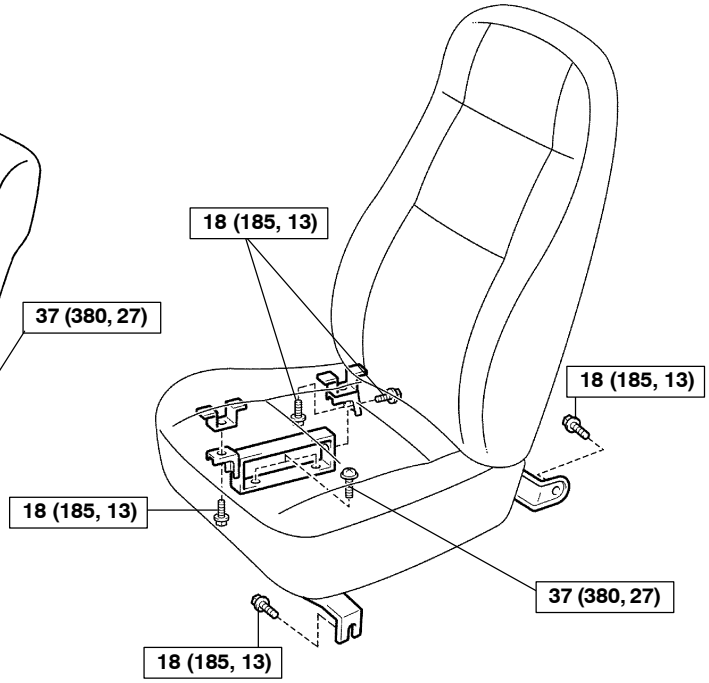

Single rear passenger seat:
(Type A)

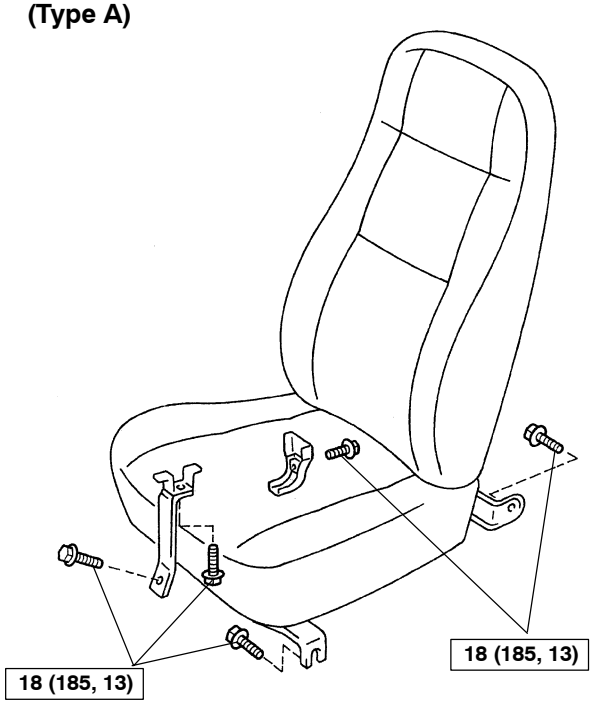

Single rear passenger seat:
(Type B)

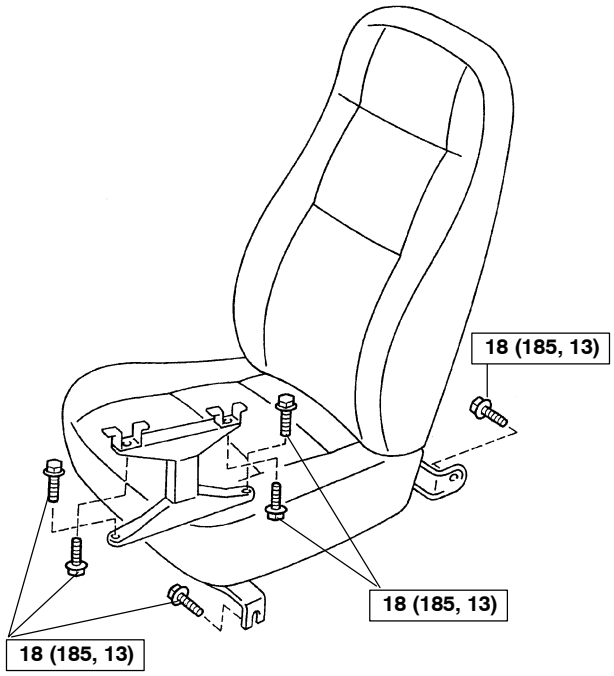


N07550 H12676
N07552 N07553


N·m (kgf·cm, ft·lbf) : Specified torque

H12248


Sub seat:

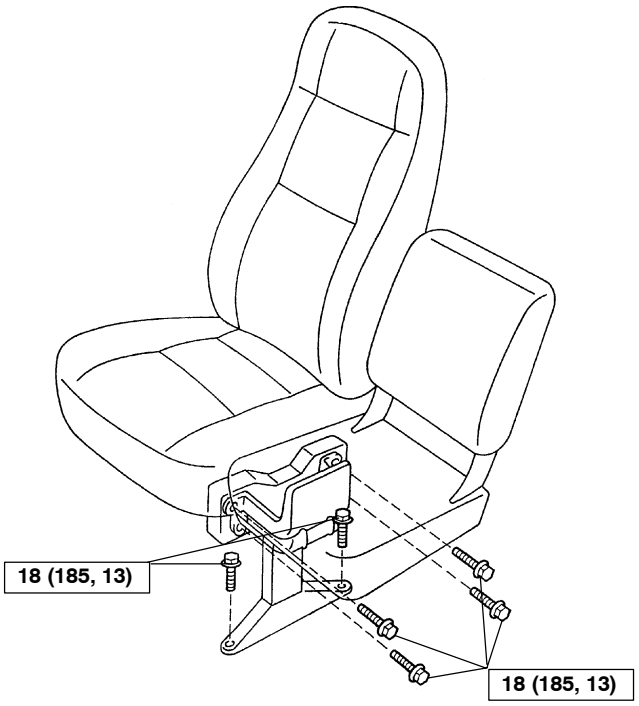

Rear passener seat for 2 persons:

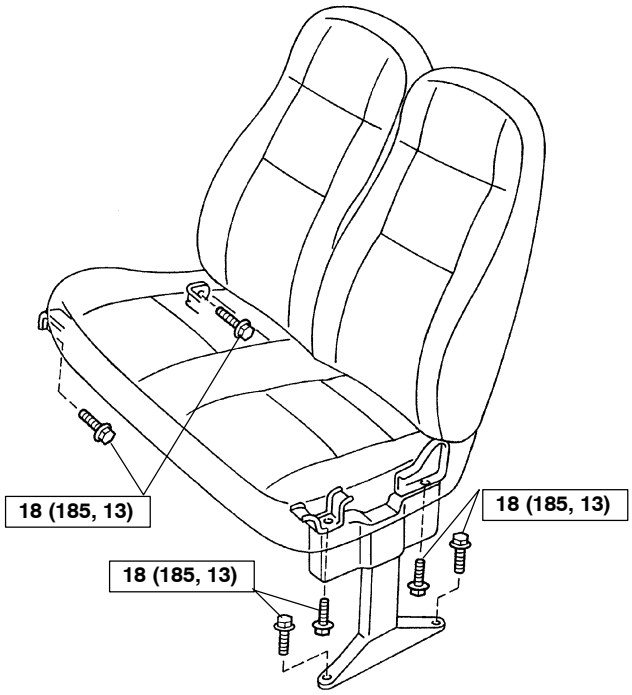

Rearmost passenger seat for 4 persons:
(Type A)

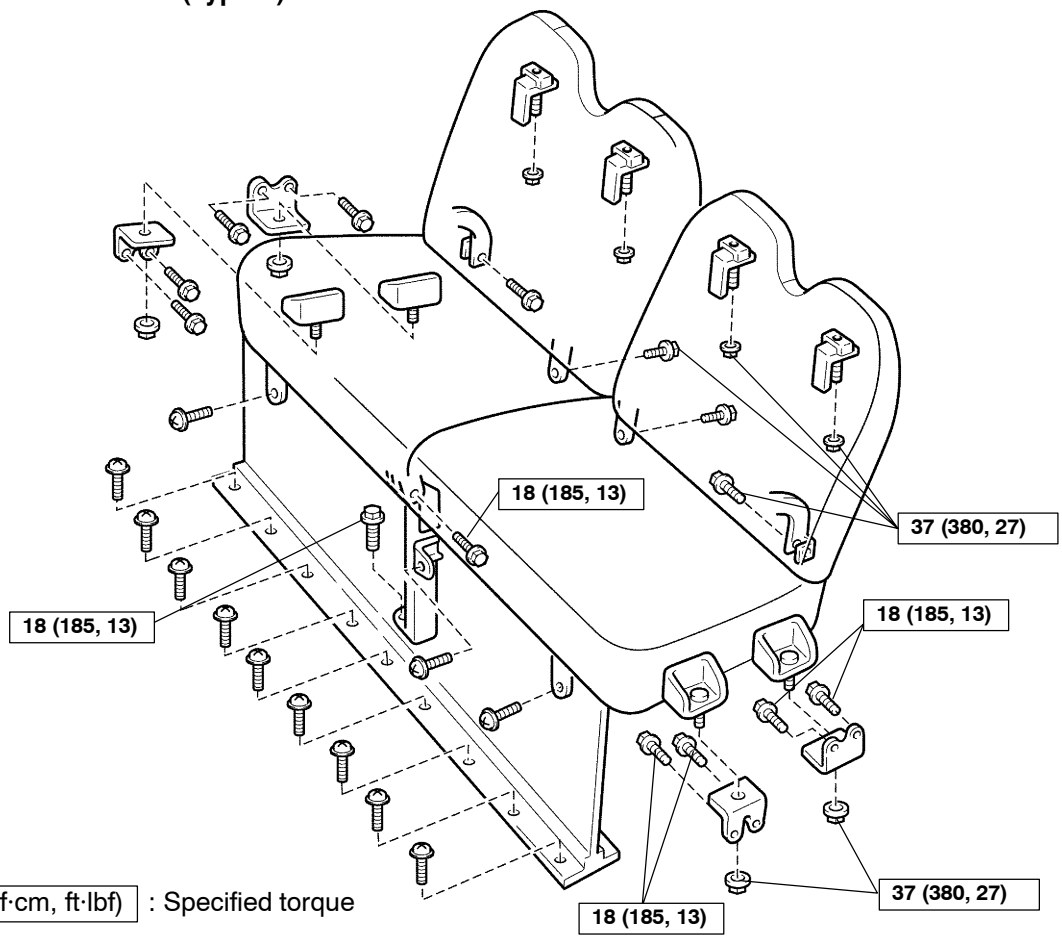


N07554 N07555
H12677

P N·m (kgf·cm, ft·lbf) : Specified torque

H12247


Rearmost passenger seat for 4 persons:
(Type B)

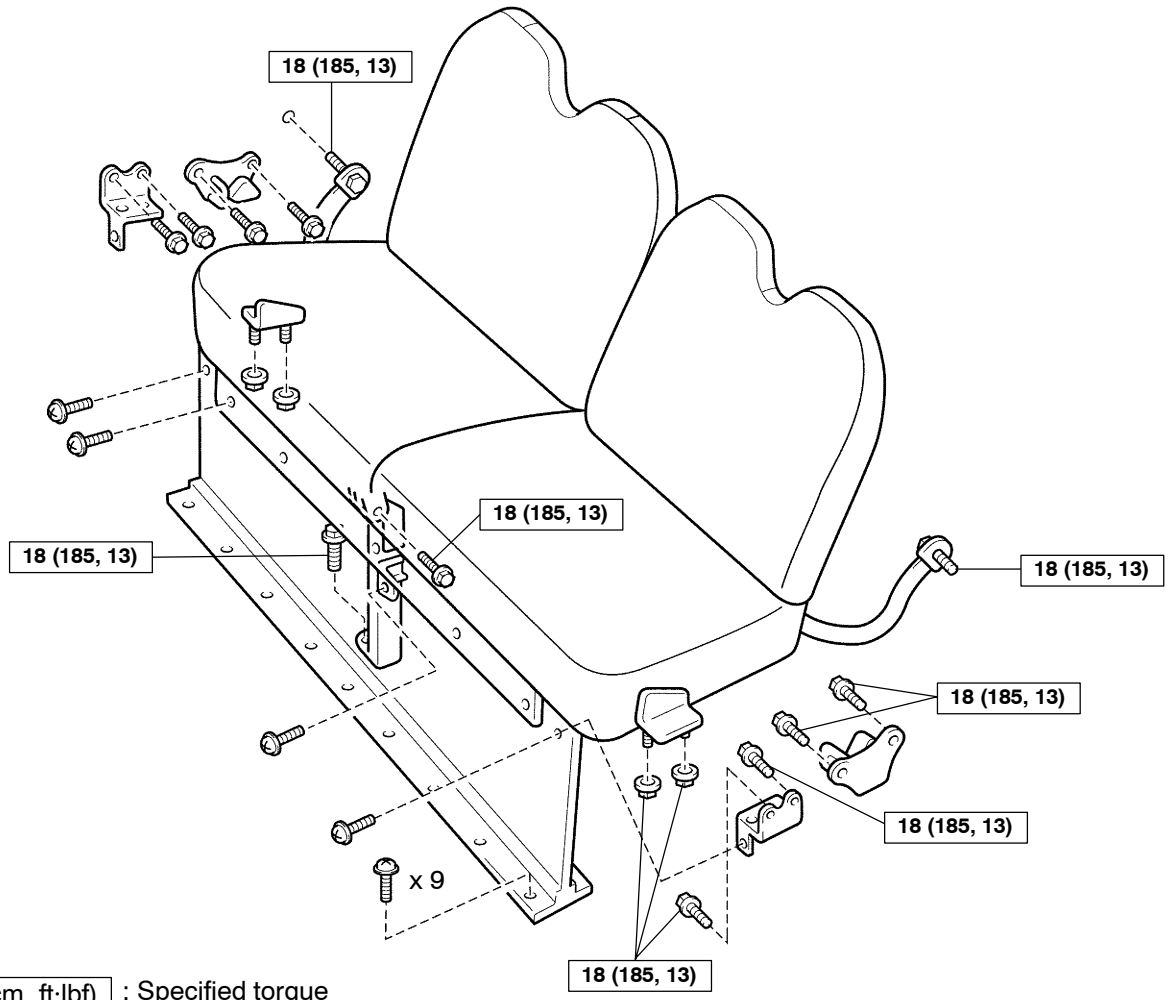


N·m (kgf·cm, ft·lbf) : Specified torque

P

H12678

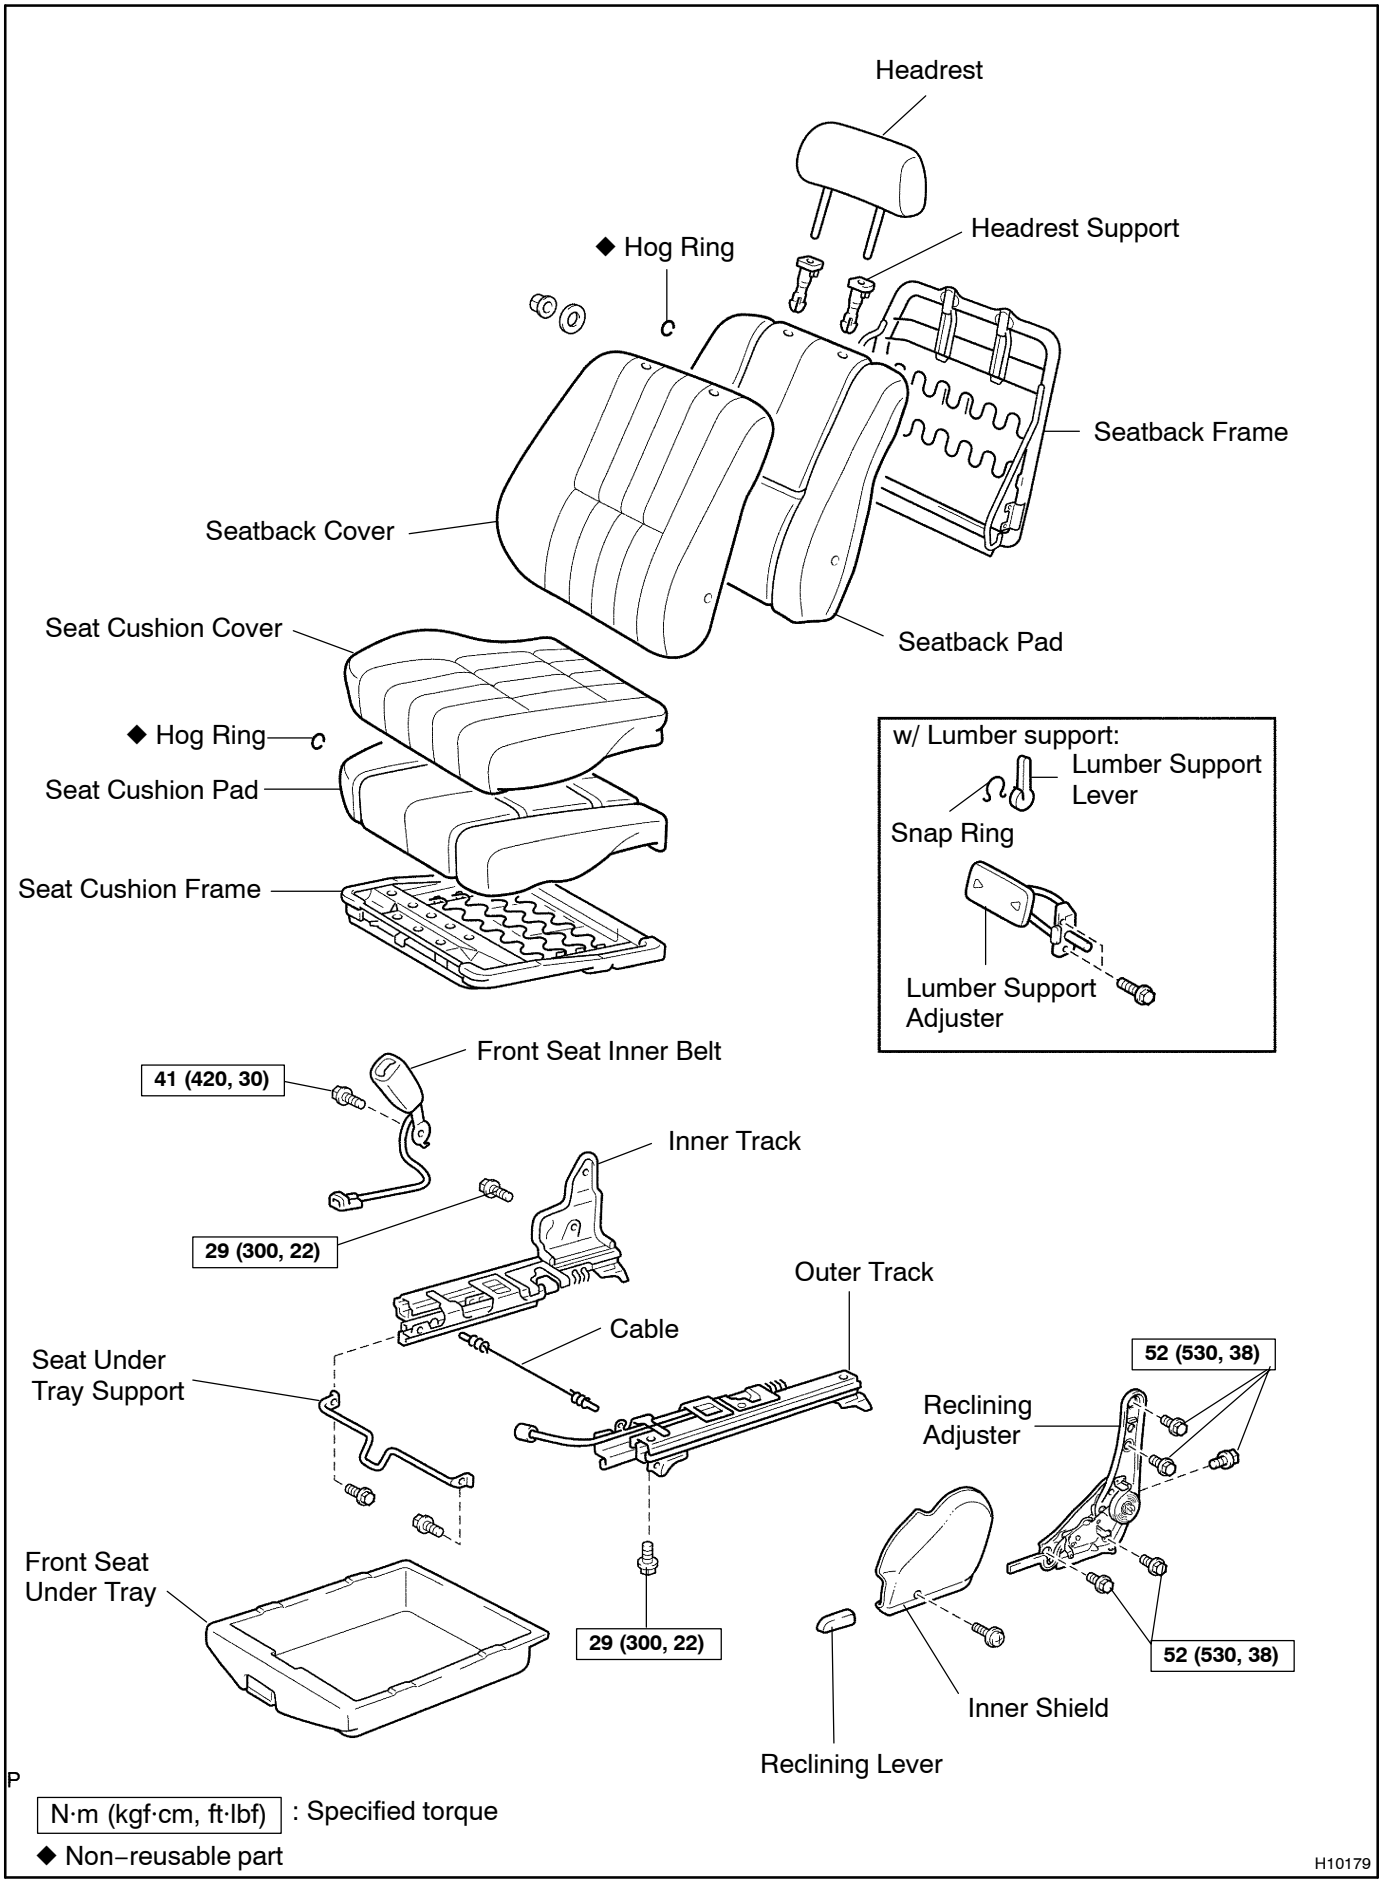

Headrest
Headrest Support
◆ Hog Ring
Seatback Frame
Seatback Cover
Seatback Pad
Seat Cushion Cover
◆ Hog Ring
Seat Cushion Pad
Seat Cushion Frame
w/ Lumber support:
Lumber Support Lever
Snap Ring
Lumber Support Adjuster
Front Seat Inner Belt
41 (420, 30)
Inner Track
29 (300, 22)
Outer Track
Cable
Seat Under Tray Support
52 (530, 38)
Reclining Adjuster
Front Seat Under Tray
29 (300, 22)
52 (530, 38)
Inner Shield
Reclining Lever
P
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
H10179

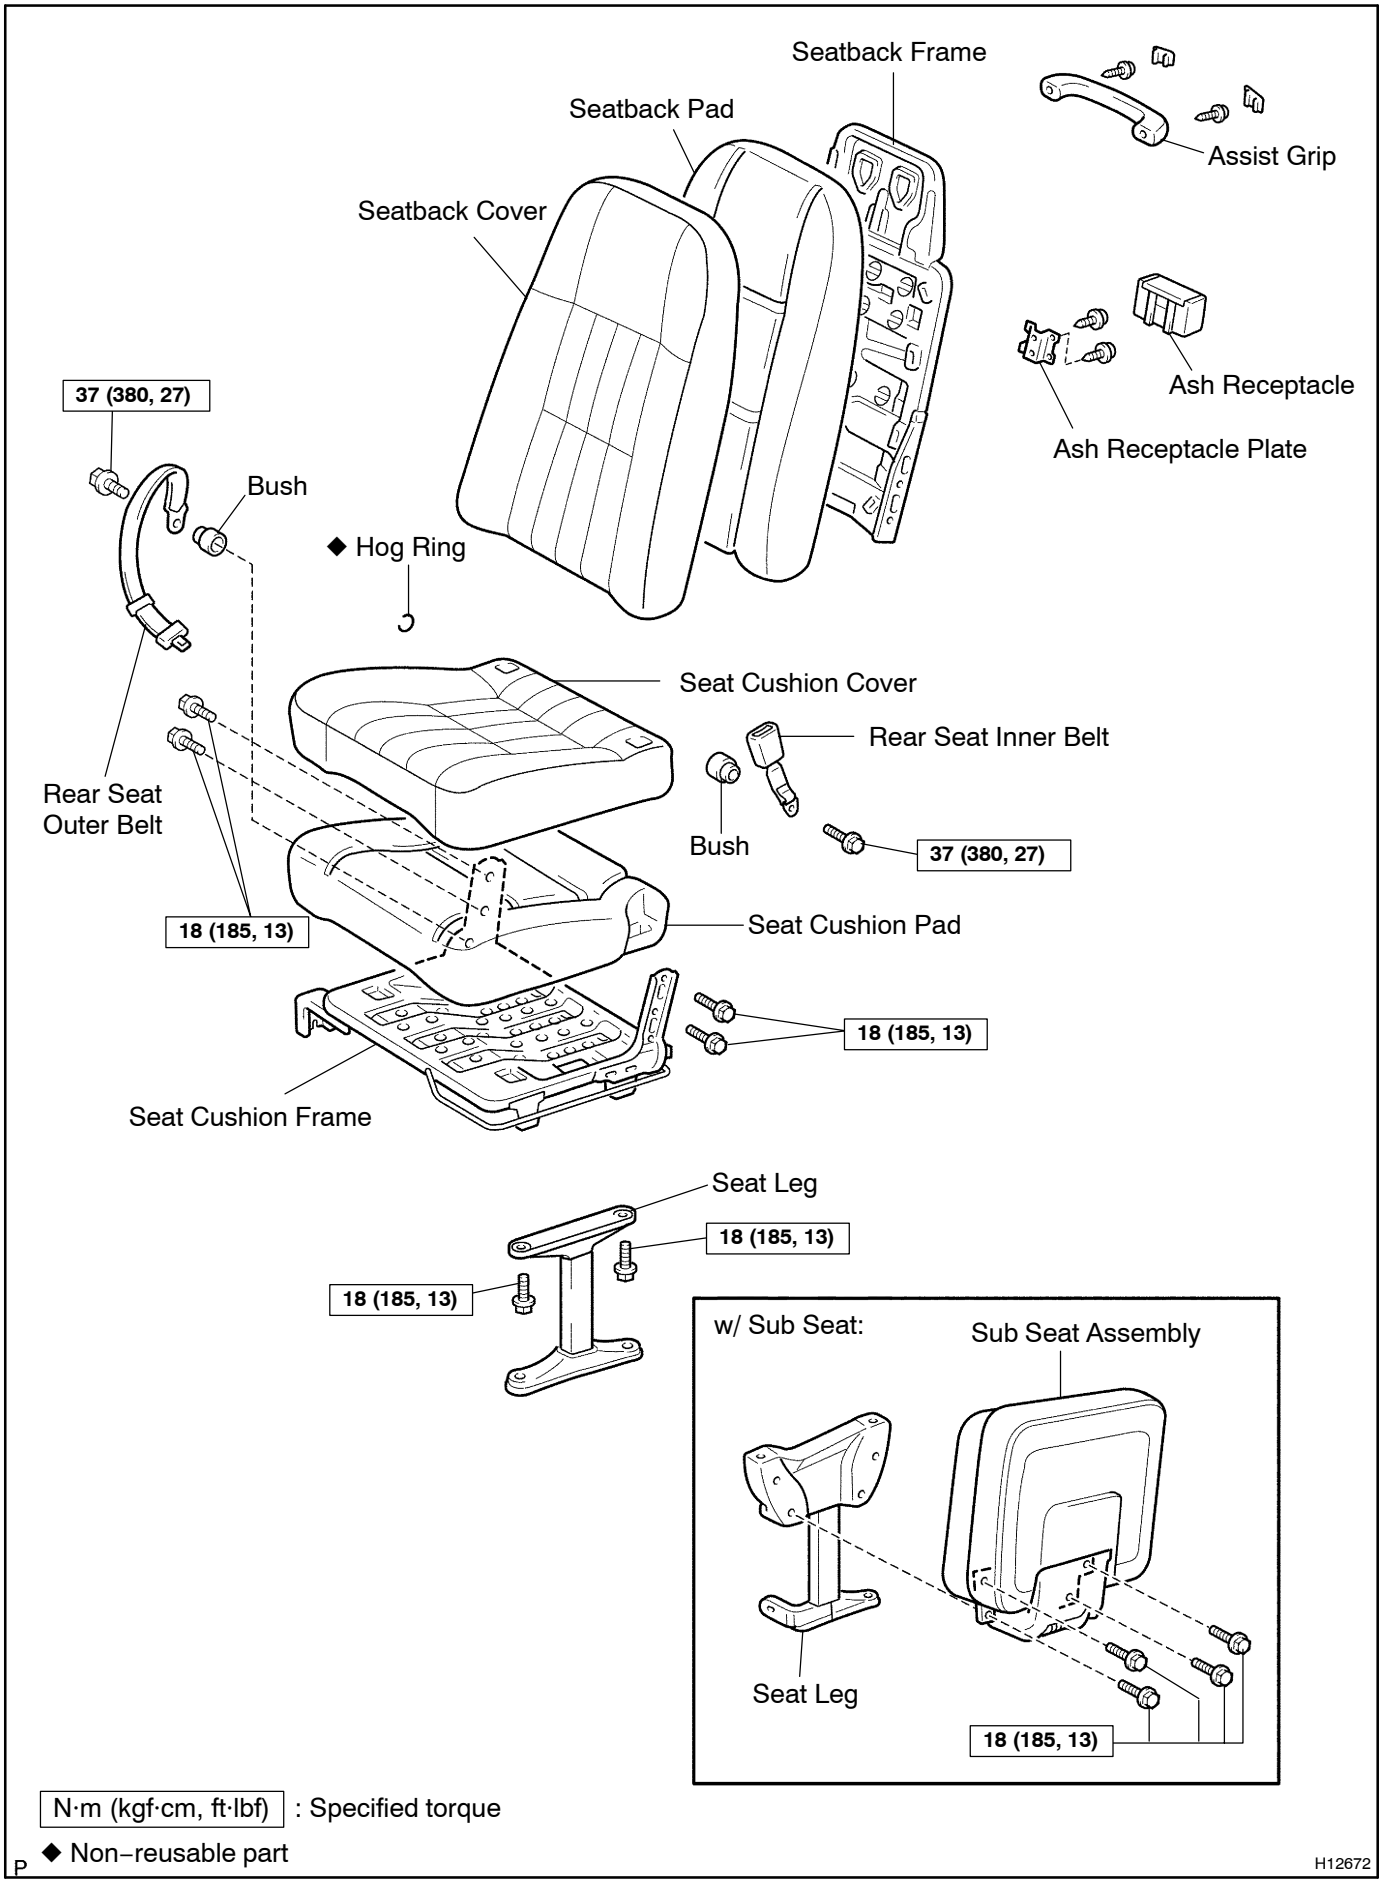

N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

H12672

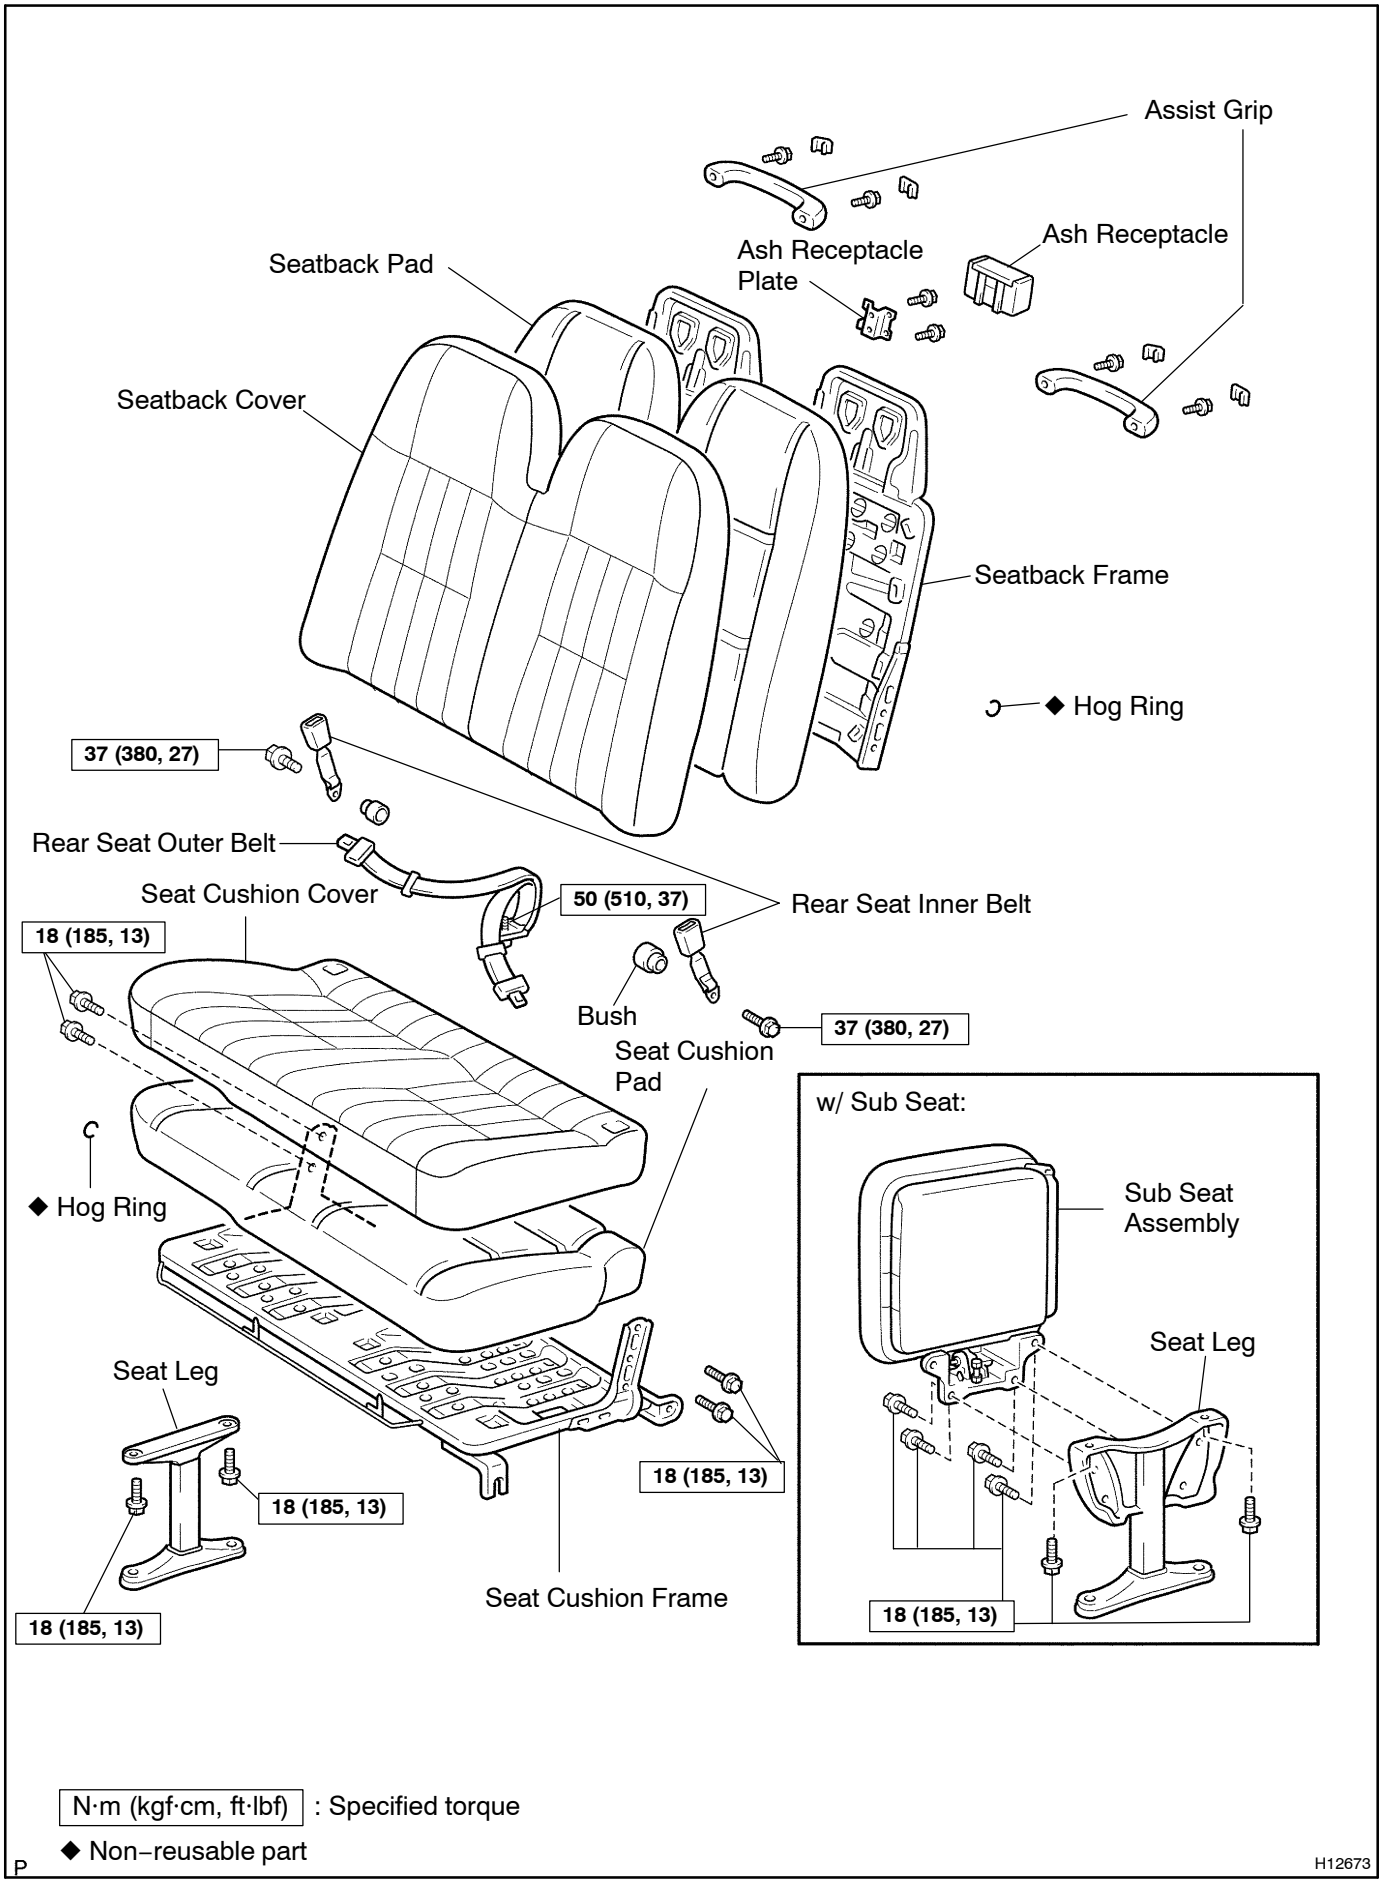


N·m (kgf·cm, ft·lbf) : Specified torque

◆ Non–reusable part

P

H12673

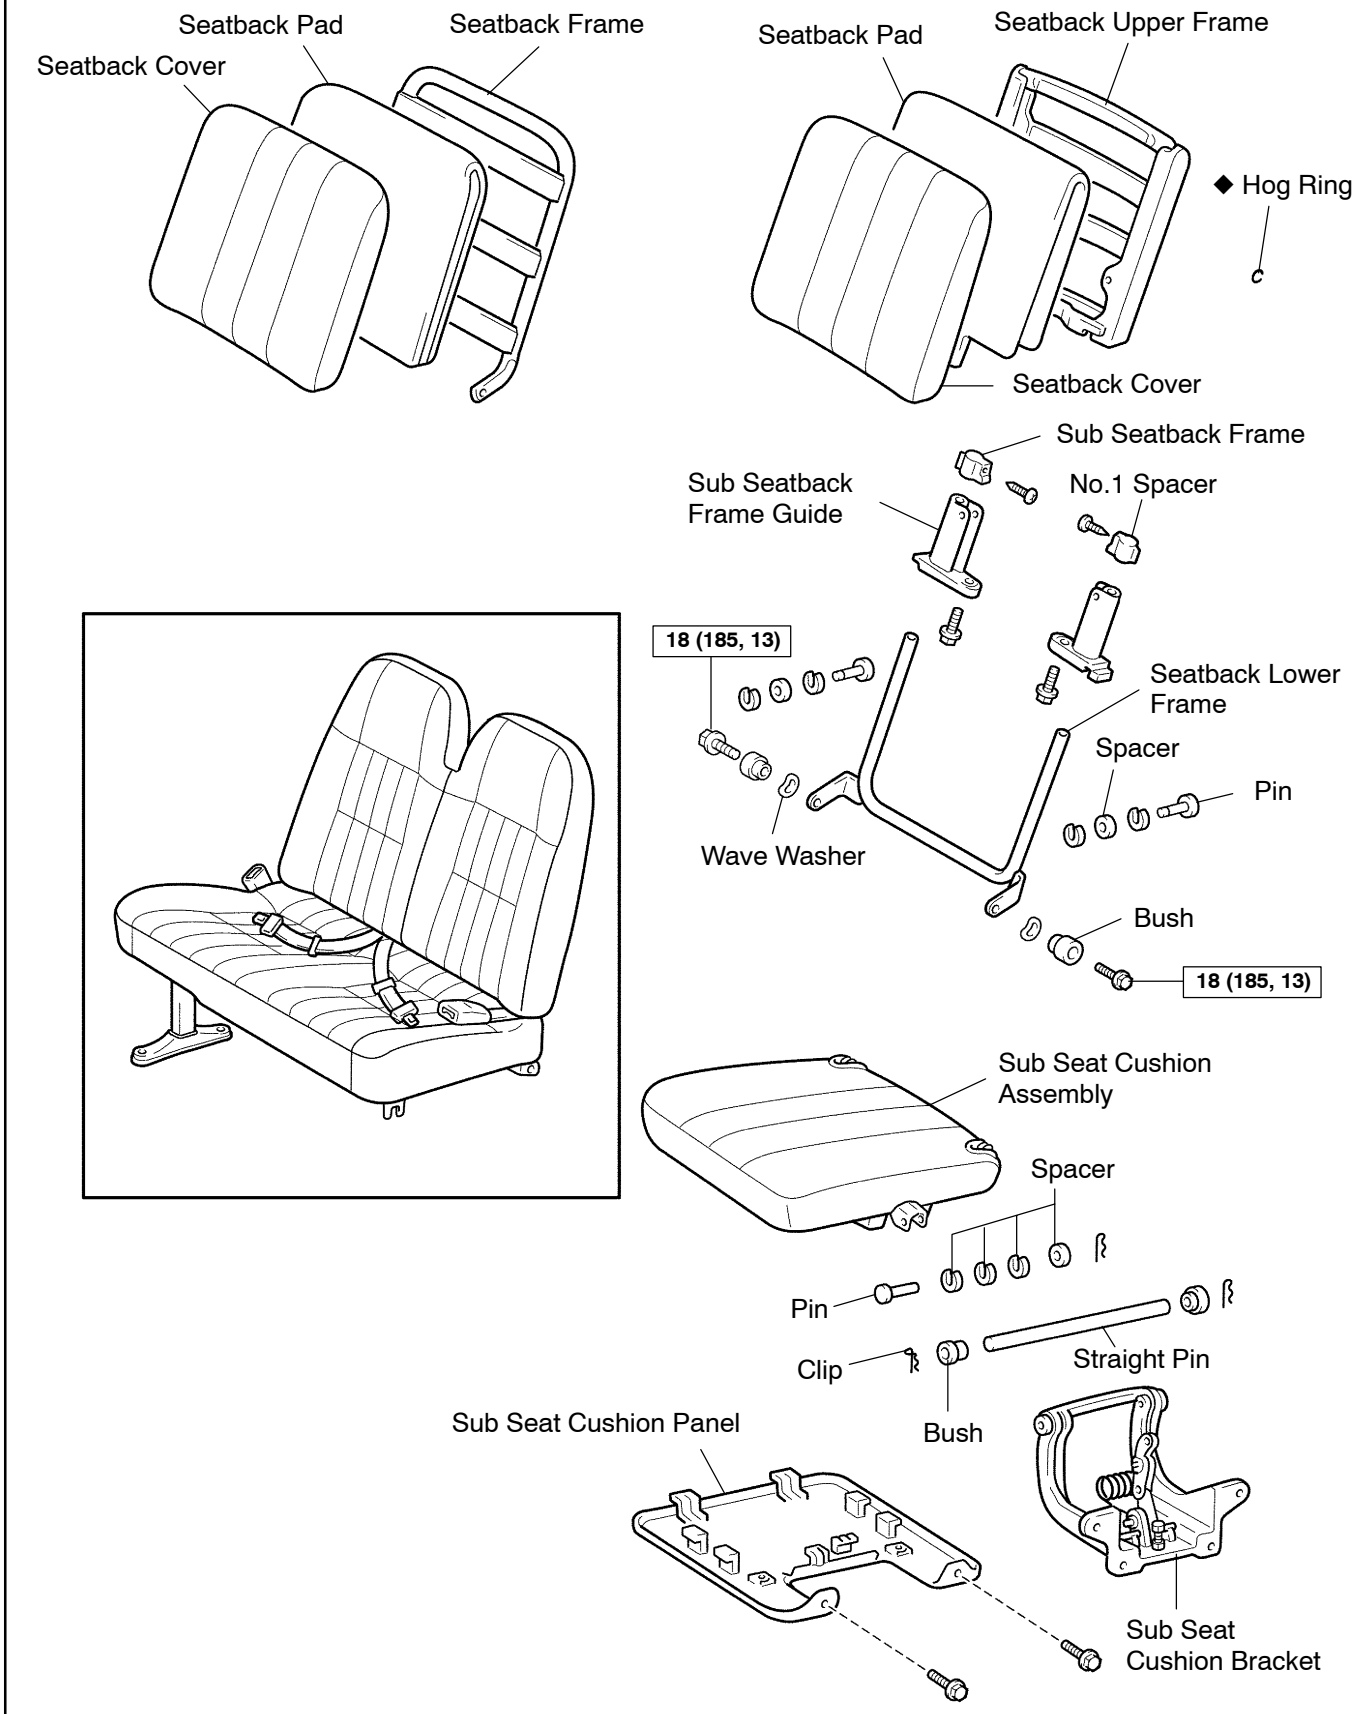



N·m (kgf·cm, ft·lbf) : Specified torque


◆ Non–reusable part

P

H12679

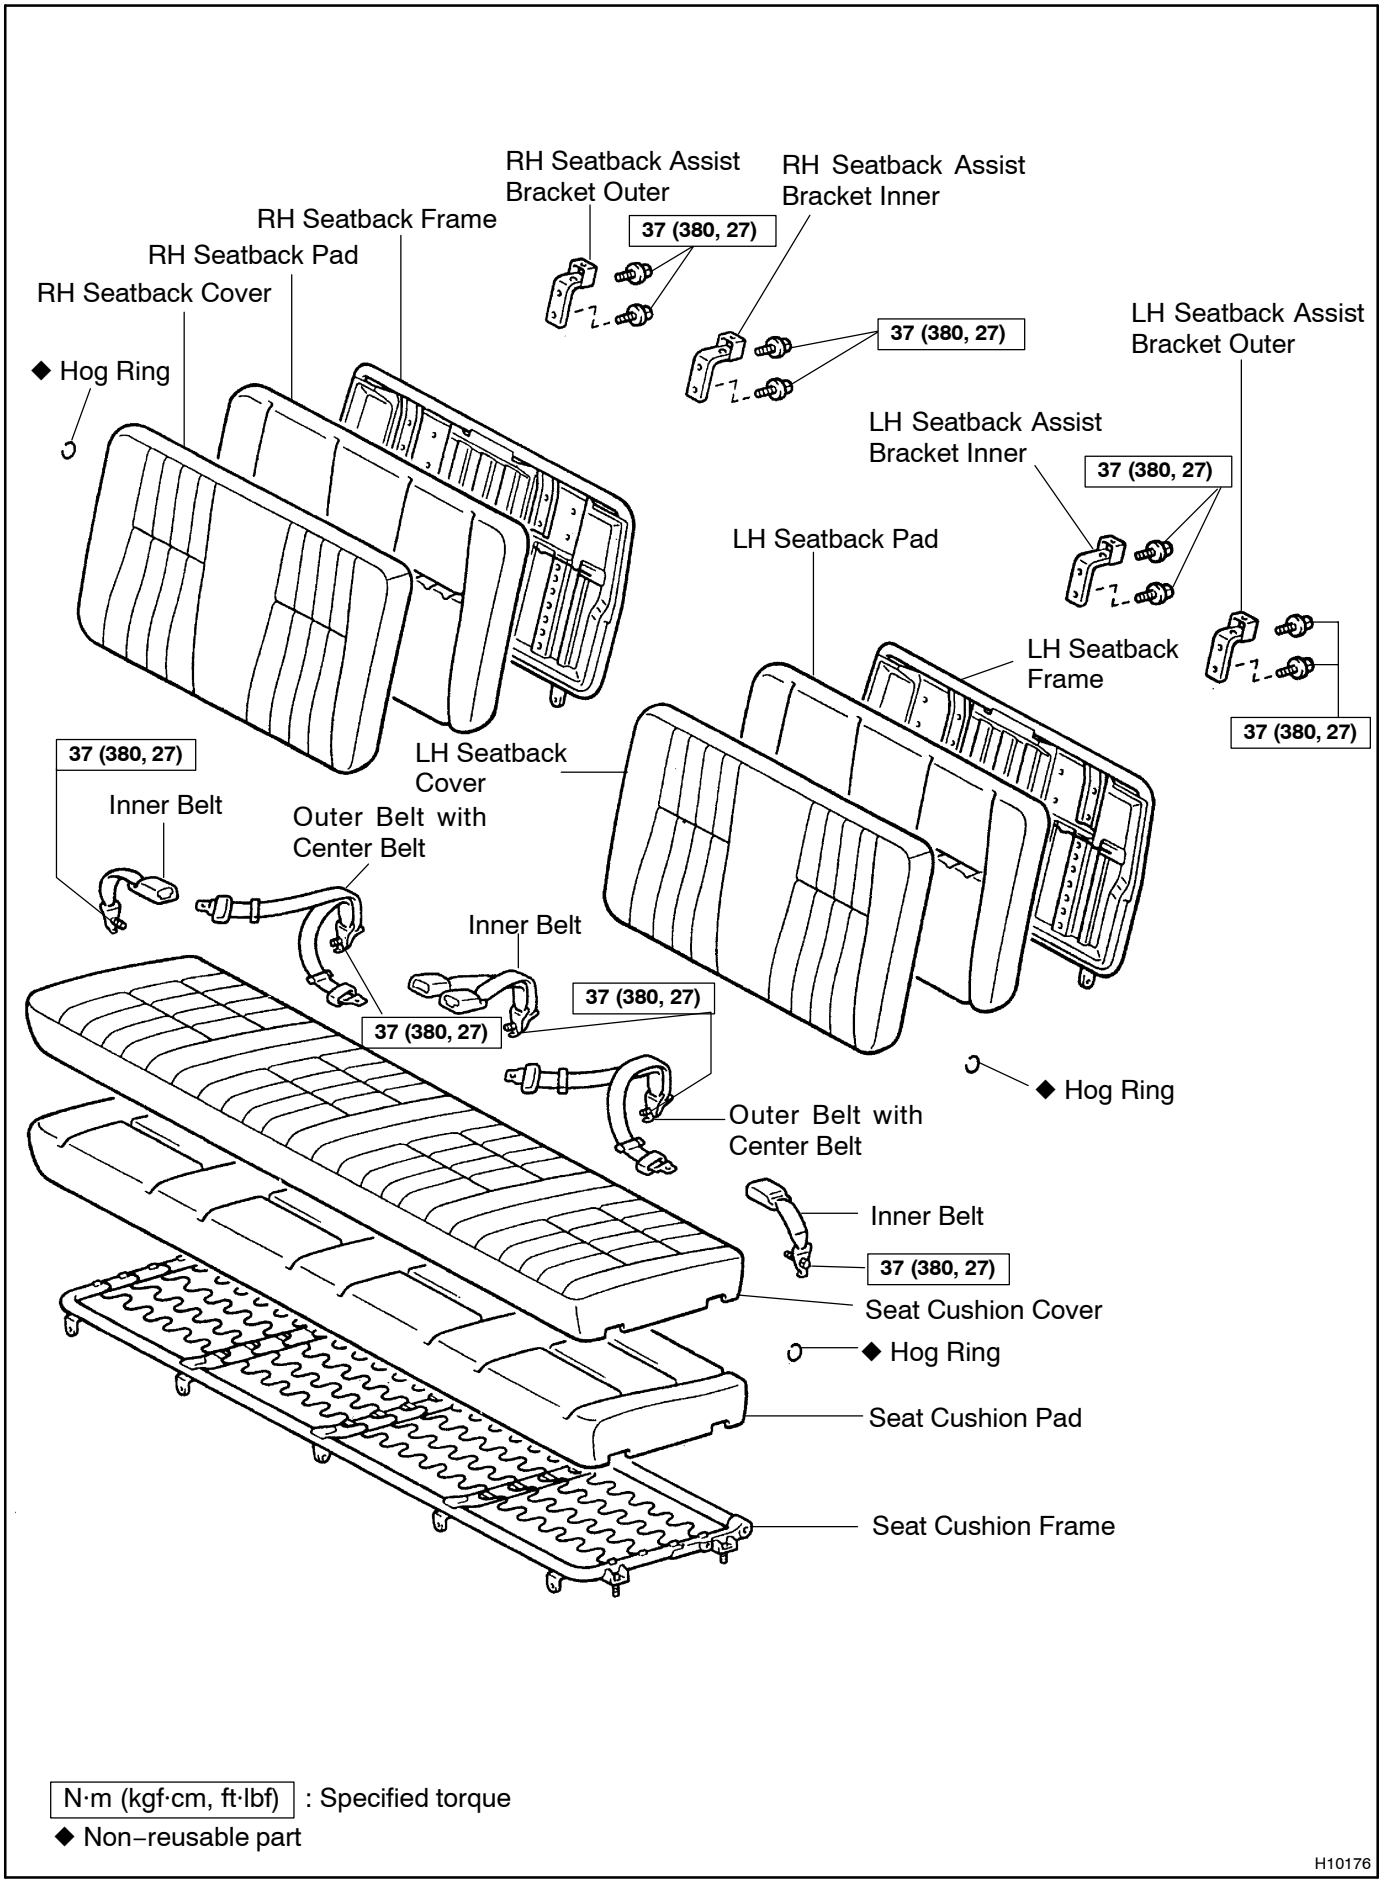
RH Seatback Assist Bracket Outer
RH Seatback Assist Bracket Inner
RH Seatback Frame
RH Seatback Pad
RH Seatback Cover
37 (380, 27)
37 (380, 27)
◆ Hog Ring
LH Seatback Assist Bracket Outer
LH Seatback Assist Bracket Inner
37 (380, 27)
LH Seatback Pad
LH Seatback Frame
37 (380, 27)
37 (380, 27)
LH Seatback Cover
Inner Belt
Outer Belt with Center Belt
Inner Belt
37 (380, 27)
37 (380, 27)
◆ Hog Ring
Outer Belt with Center Belt
Inner Belt
37 (380, 27)
Seat Cushion Cover
◆ Hog Ring
Seat Cushion Pad
Seat Cushion Frame
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
H10176

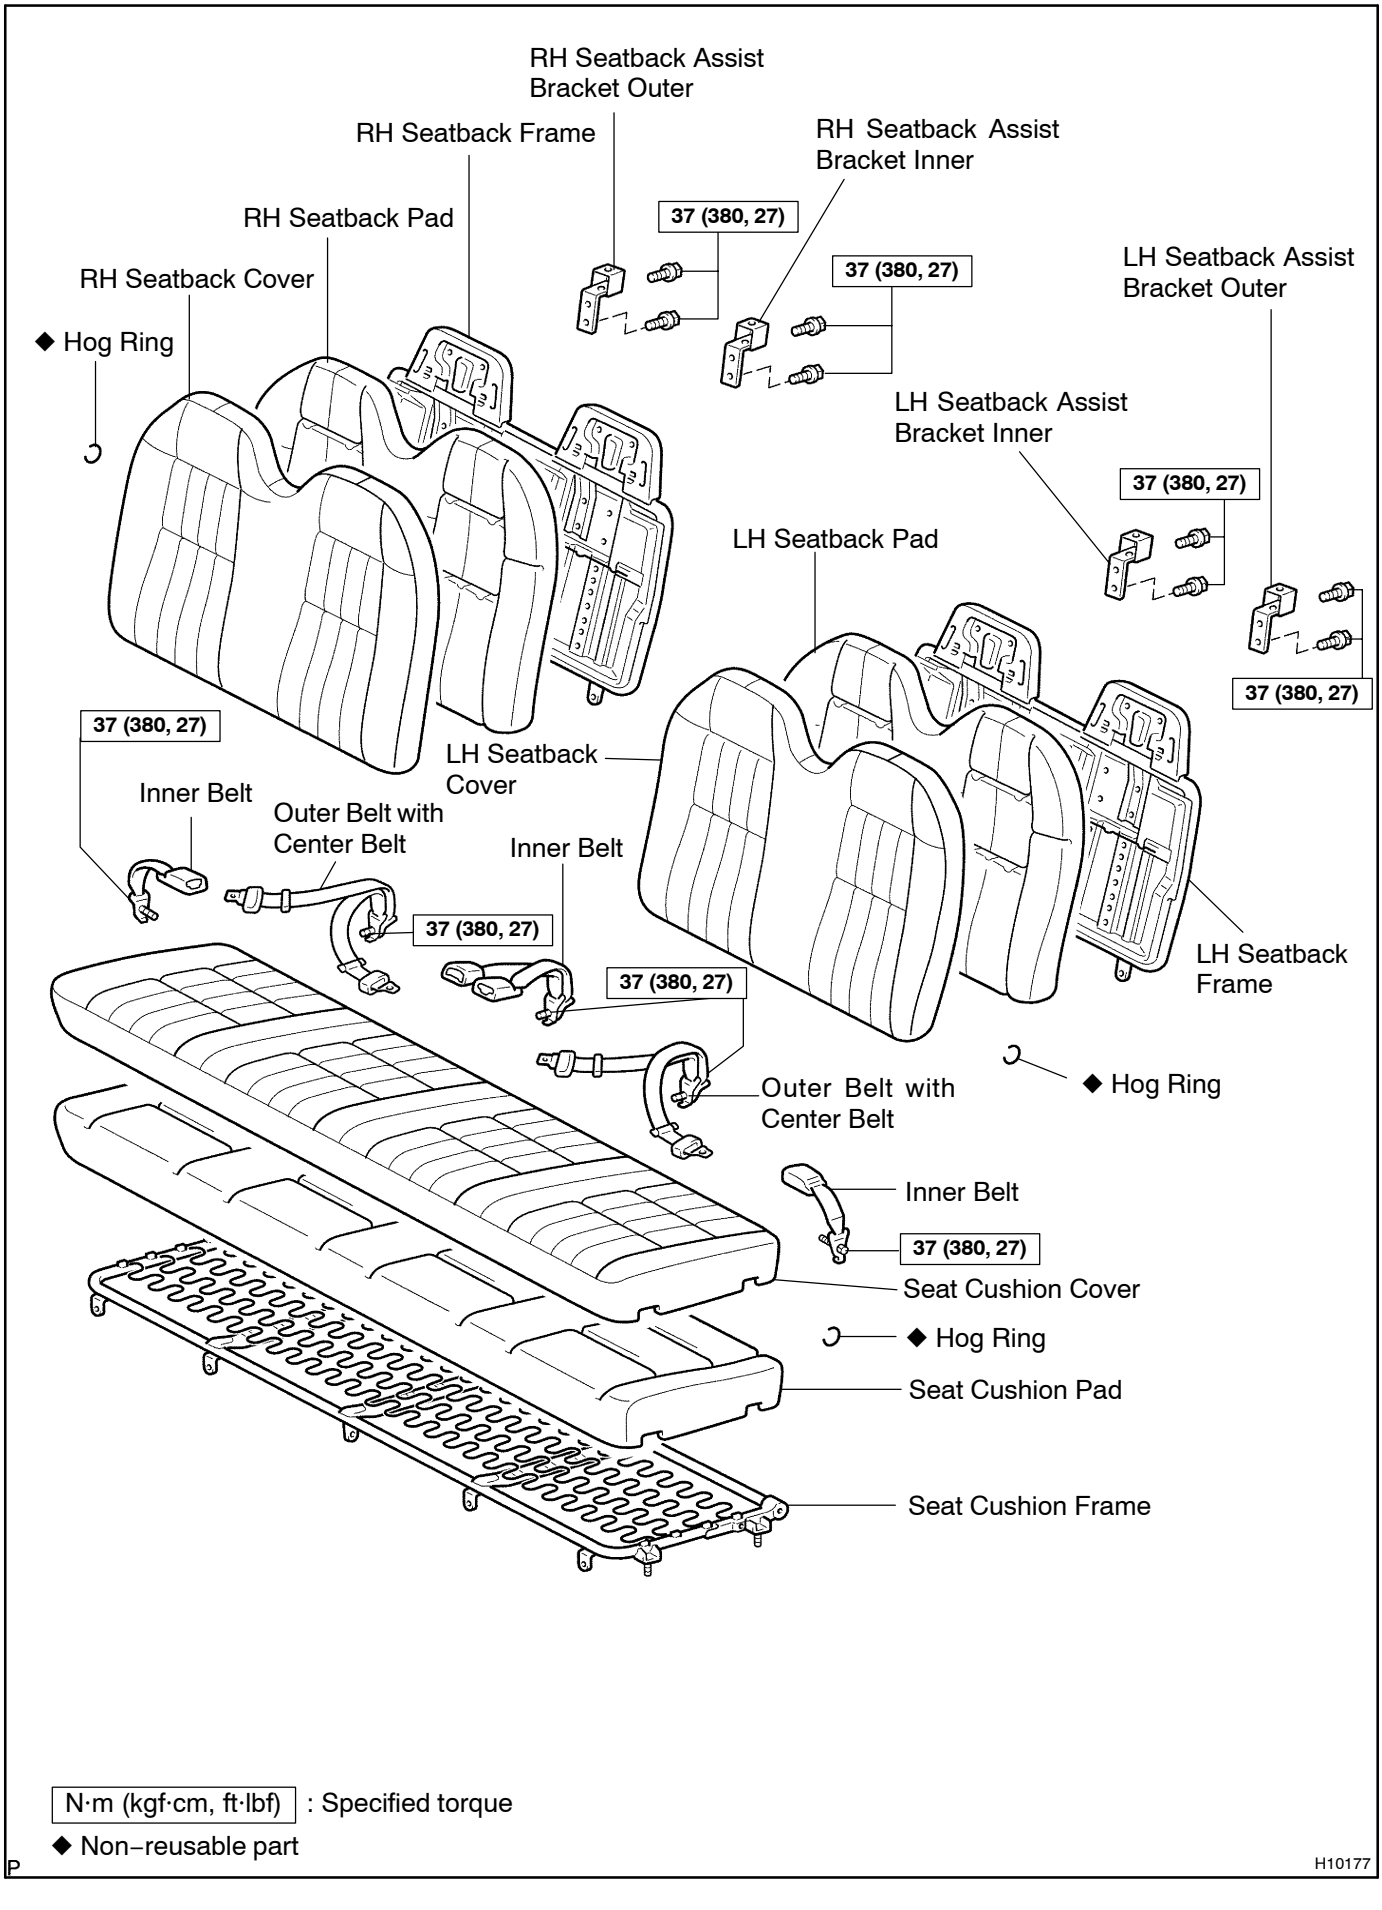
RH Seatback Assist Bracket Outer
RH Seatback Frame
RH Seatback Assist Bracket Inner
RH Seatback Pad
37 (380, 27)
37 (380, 27)
RH Seatback Cover
LH Seatback Assist Bracket Outer
◆ Hog Ring
LH Seatback Assist Bracket Inner
37 (380, 27)
LH Seatback Pad
37 (380, 27)
37 (380, 27)
LH Seatback Cover
Inner Belt
Outer Belt with Center Belt
Inner Belt
37 (380, 27)
37 (380, 27)
LH Seatback Frame
◆ Hog Ring
Outer Belt with Center Belt
Inner Belt
37 (380, 27)
Seat Cushion Cover
◆ Hog Ring
Seat Cushion Pad
Seat Cushion Frame
N·m (kgf·cm, ft·lbf) : Specified torque
◆ Non–reusable part
P
H10177

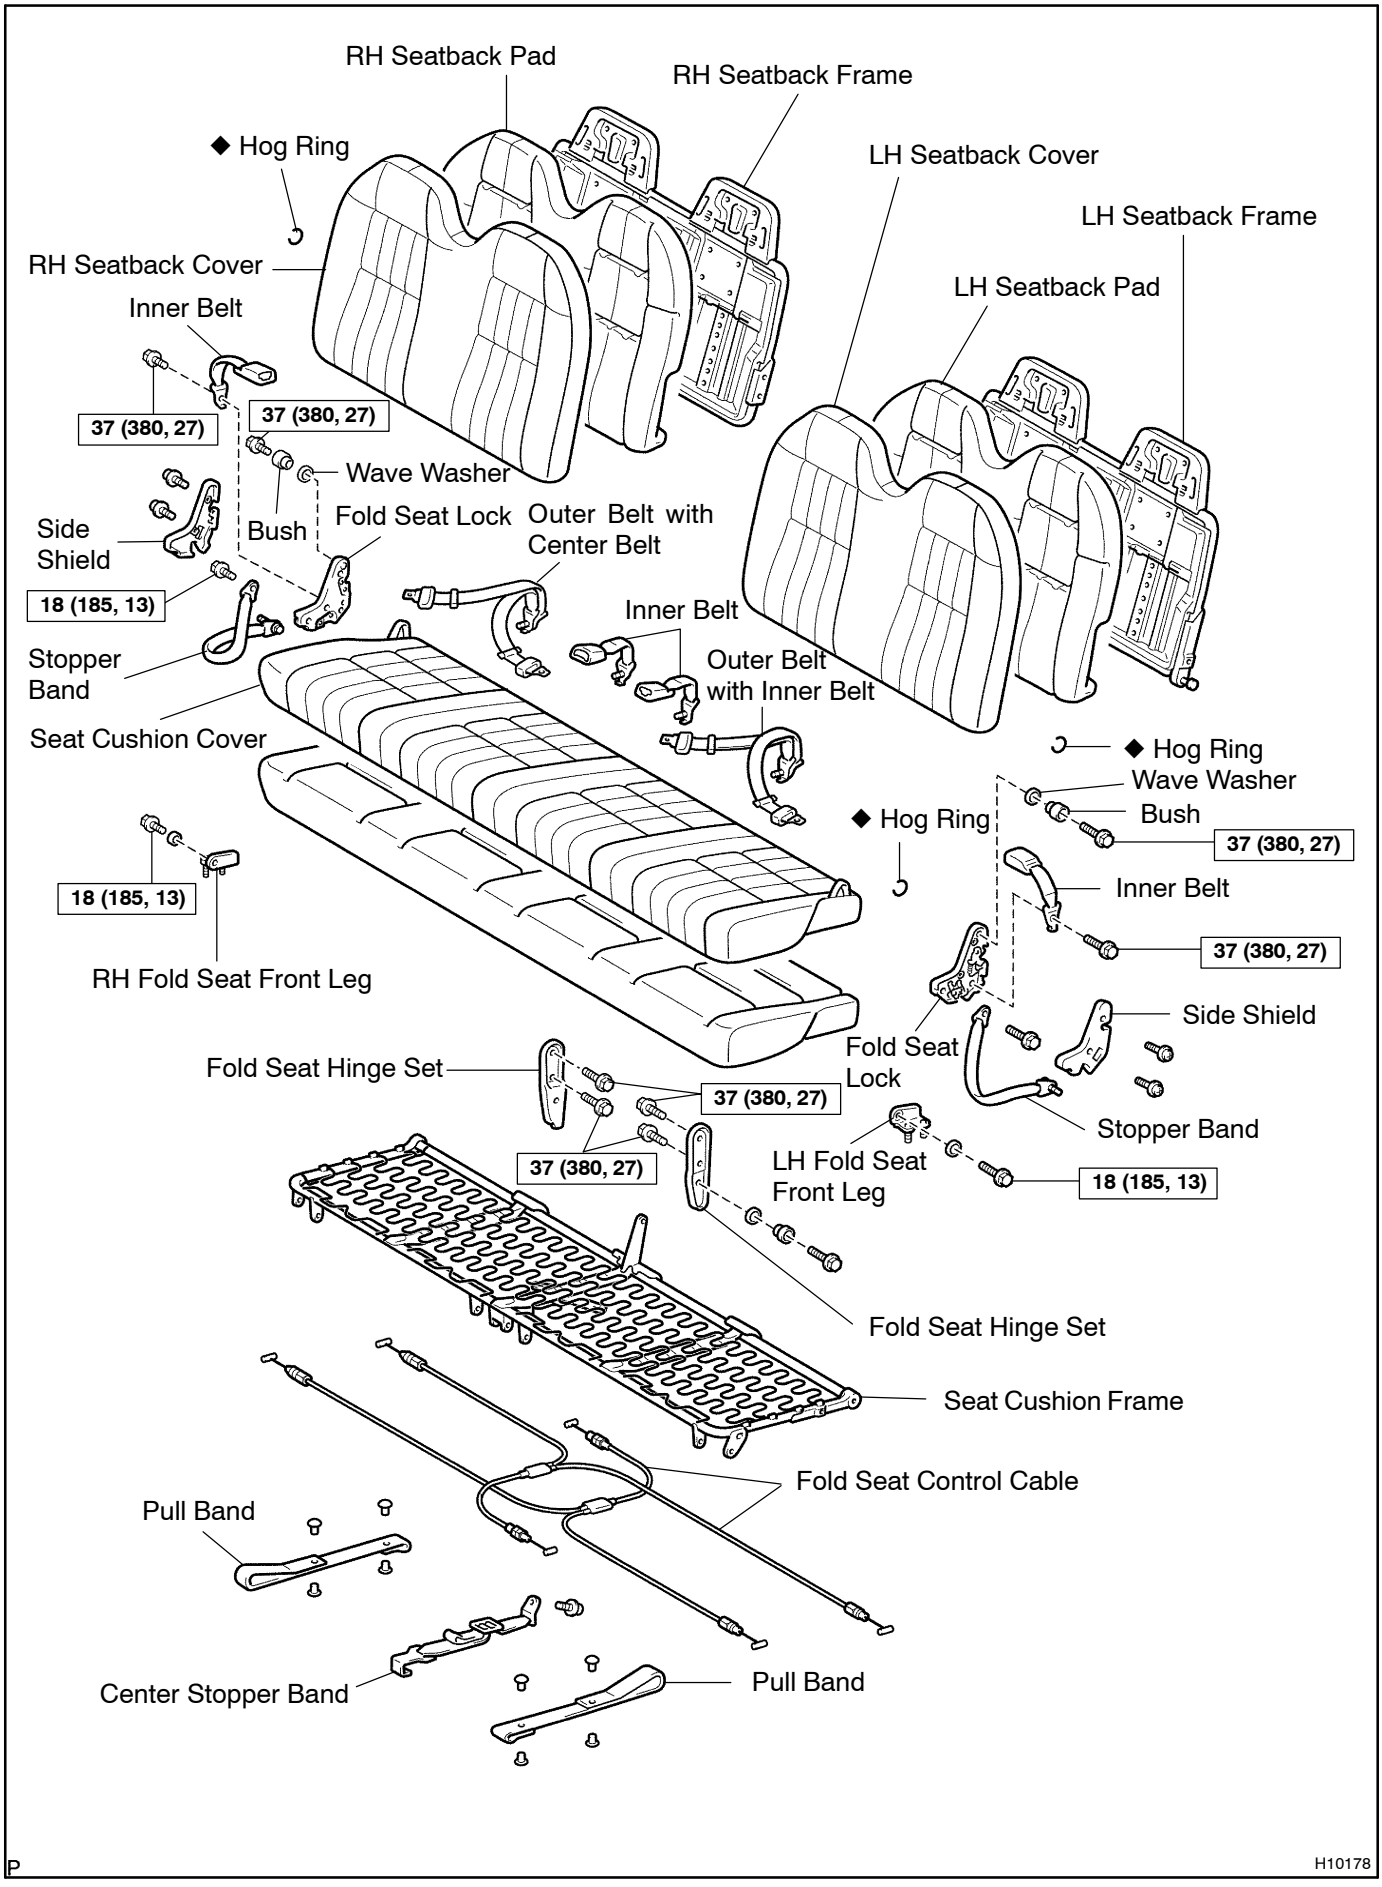
RH Seatback Pad
RH Seatback Frame
◆ Hog Ring
LH Seatback Cover
LH Seatback Frame
RH Seatback Cover
LH Seatback Pad
Inner Belt
37 (380, 27)
37 (380, 27)
Wave Washer
Side Shield
Bush
Fold Seat Lock
Outer Belt with Center Belt
18 (185, 13)
Inner Belt
Stopper Band
Outer Belt with Inner Belt
Seat Cushion Cover
◆ Hog Ring
Wave Washer
◆ Hog Ring
Bush
37 (380, 27)
18 (185, 13)
Inner Belt
37 (380, 27)
RH Fold Seat Front Leg
Side Shield
Fold Seat Lock
Fold Seat Hinge Set
37 (380, 27)
Stopper Band
37 (380, 27)
LH Fold Seat Front Leg
18 (185, 13)
Fold Seat Hinge Set
Seat Cushion Frame
Fold Seat Control Cable
Pull Band
Center Stopper Band
Pull Band
P
H10178