

BR13X–01

REMOVAL

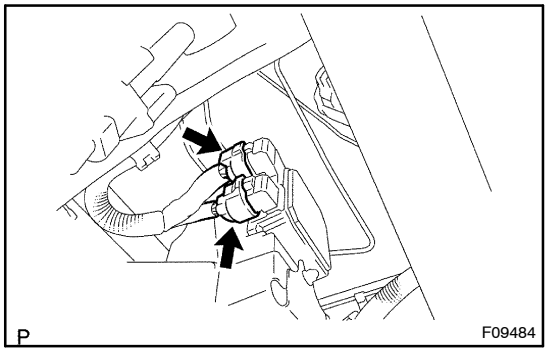

1. DISCONNECT 2 CONNECTORS FROM ABS ACTUATOR

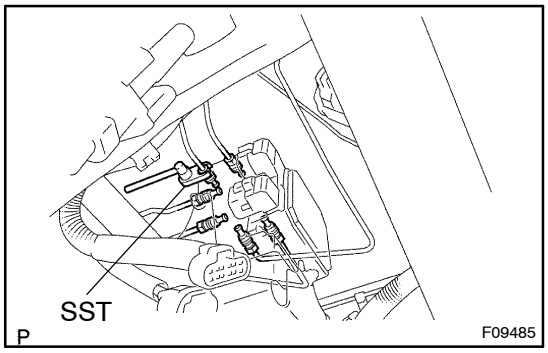


2. DISCONNECT BRAKE LINES

Using SST, disconnect the 6 brake lines from the ABS actuator.

SST 09023–00100

Torque: 15 N·m (155 kgf·cm, 11 ft·lbf)

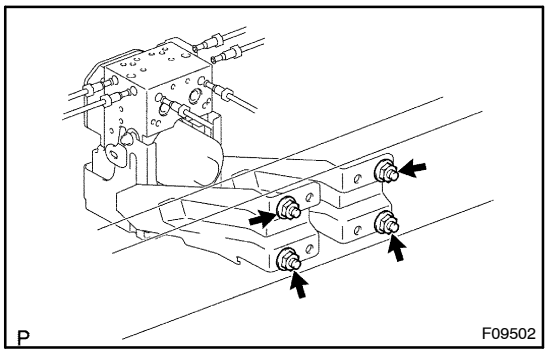

3. REMOVE ABS ACTUATOR ASSEMBLY

Remove the 4 nuts and ABS actuator assembly.

Torque: 39 N·m (400 kgf·cm, 29 ft·lbf)

4. REMOVE ABS ACTUATOR

(a) Remove the 3 nuts and ABS actuator from actuator bracket.

Torque: 5.4 N·m (55 kgf·cm, 48 in.·lbf)

(b) Remove the 3 holders, 3 cushions and 2 rubber caps.