
BR13Z–01

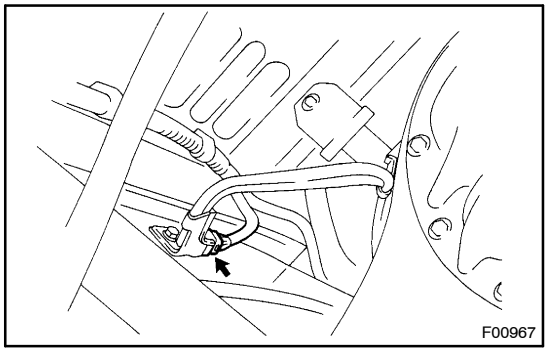

REMOVAL

REMOVE SPEED SENSOR

(a) Disconnect the speed sensor connector.

(b) Remove the 3 resin clips and 5 clamp bolts holding the sensor wire harness to the frame, upper control arm and axle housing.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)

(c) Remove the mounting bolt and speed sensor.
Torque: 18 N·m (185 kgf·cm, 13 ft·lbf)