
CL099–01


REMOVAL

REMOVE CLUTCH ACCUMULATOR WITH BRACKET

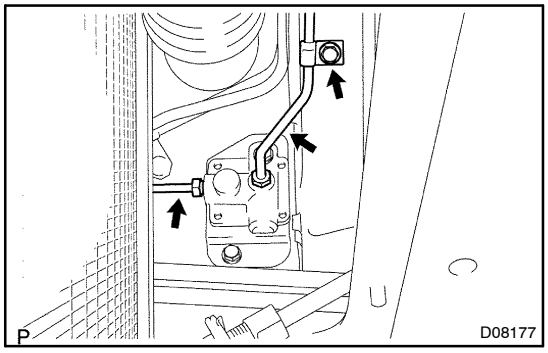

(a) Using SST, disconnect the clutch lines from clutch accumulator.
Torque: 24 N·m (245 kgf·cm, 18 ft·lbf)
SST 09751–36011

(b) Remove the bolt from the clutch line.

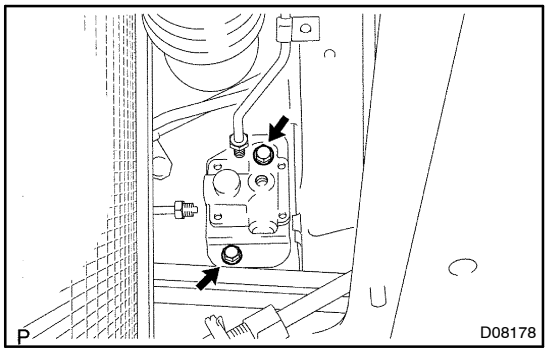

(c) Remove the 2 bolts and clutch accumulator with bracket.
Torque: 18 N·m (180 kgf·cm, 13 ft·lbf)