
DI0QS–04

Check for fluid Leakage

Check for fluid leakage from actuator or hydraulic lines.

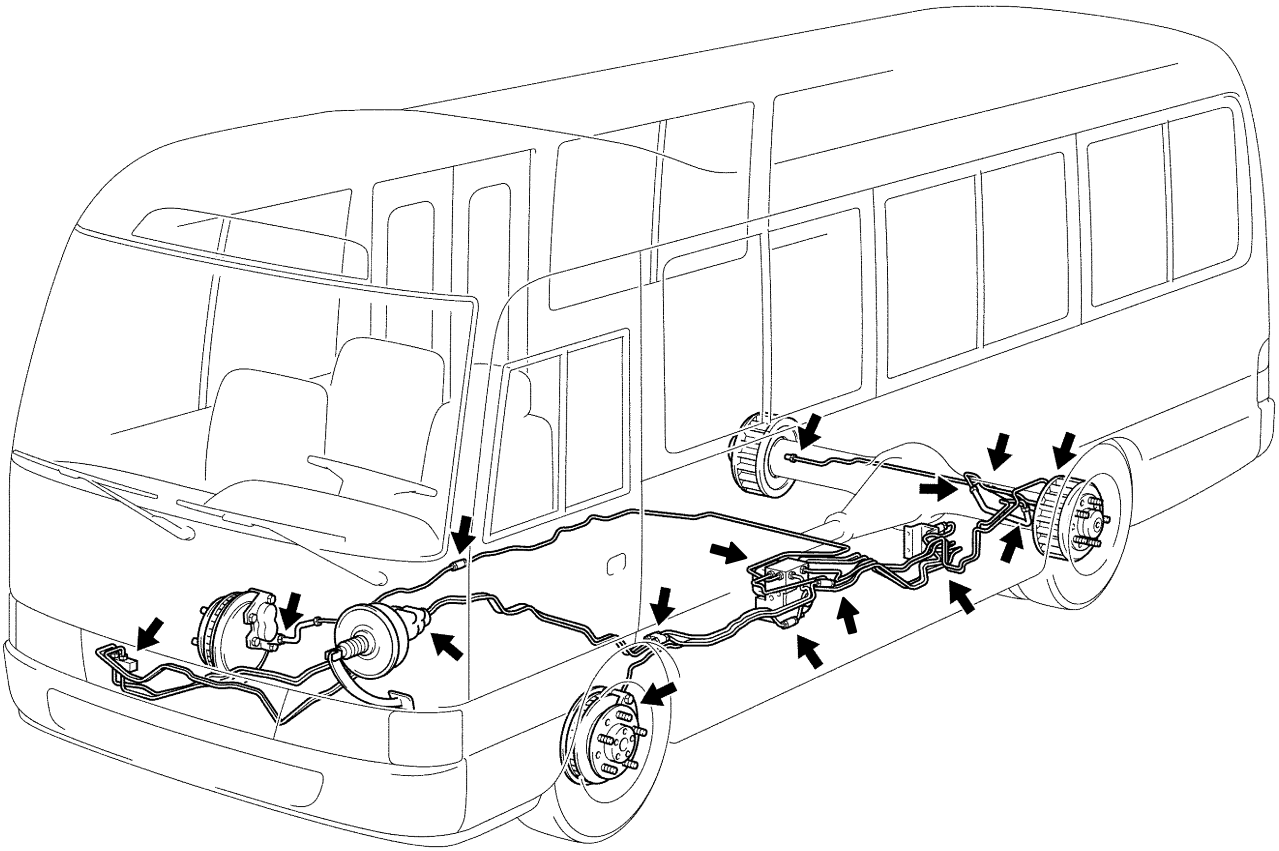

P

F09505