

MT0B5–01

REPLACEMENT

IF NECESSARY REPLACE FRONT BEARING RETAINER OIL SEAL

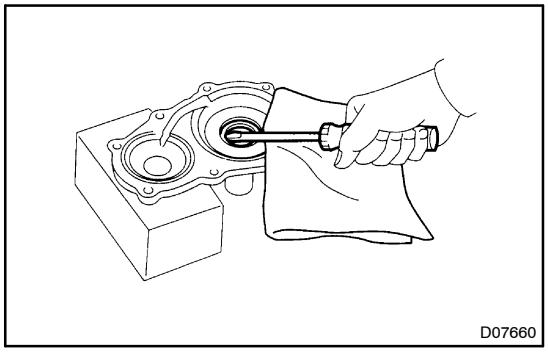

(a) Using a screwdriver, pry out the oil seal.

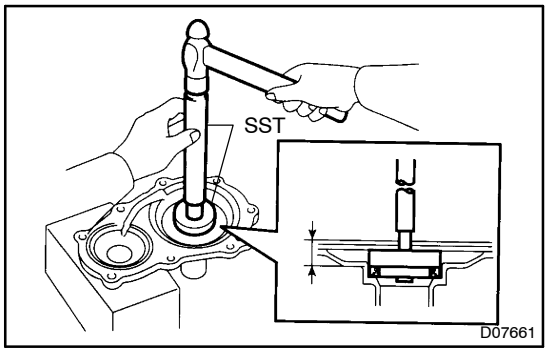

(b) Using SST and a hammer, drive in a new oil seal.
SST 09950–60010 (09951–00330, 09951–00480, 09952–06010) 09950–70010 (09951–07150)