

MT0BB–01

DISASSEMBLY

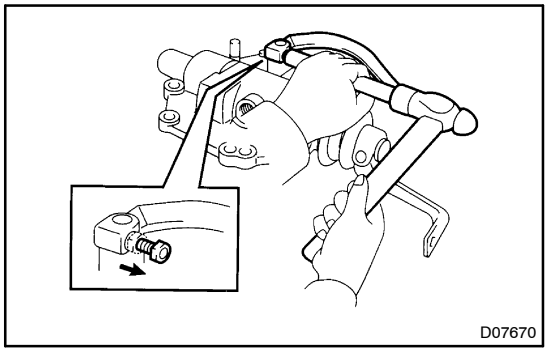


1. REMOVE SELECT OUTER LEVER AND LEVER SHAFT

(a) Remove the nut and washer.
Torque: 7.8 N·m (80 kgf·cm, 69 in.·lbf)
(b) Using a brass bar and hammer, remove the lever lock pin.
(c) Remove the select outer lever, plate washer and lever shaft from the shift lever housing.

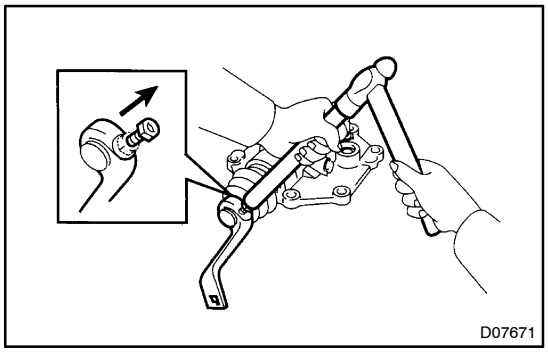


2. REMOVE SHIFT OUTER LEVER

(a) Remove the nut and washer.
Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)
(b) Using a brass bar and hammer, drive out the lever lock pin.
(c) Pull out the shift outer lever and boot from the shift lever shaft.

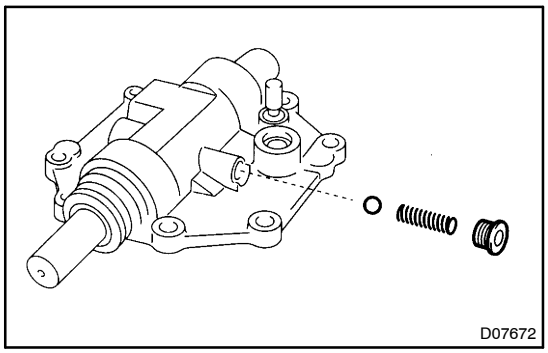


3. REMOVE SHIFT AND SELECT LEVER AND SHAFT


(a) Using a torx wrench (T40), remove the plug.
Torque: 19 N·m (190 kgf·cm, 14 ft·lbf)
(b) Using a magnetic finger, remove the spring and ball.

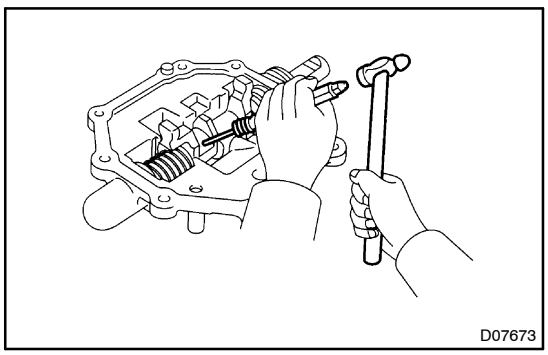

(c) Using a pin punch and hammer, drive out the slotted spring pin.

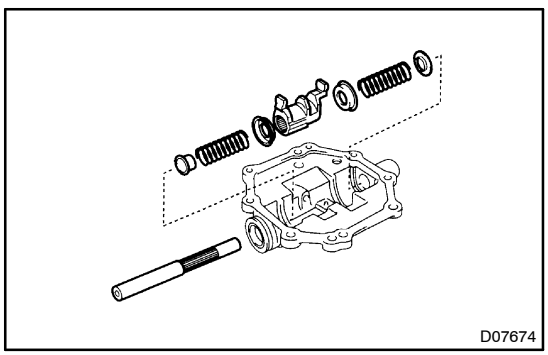


(d) Remove the shift lever shaft.
(e) Remove the shift and select lever, 4 spring seats and 2 springs.

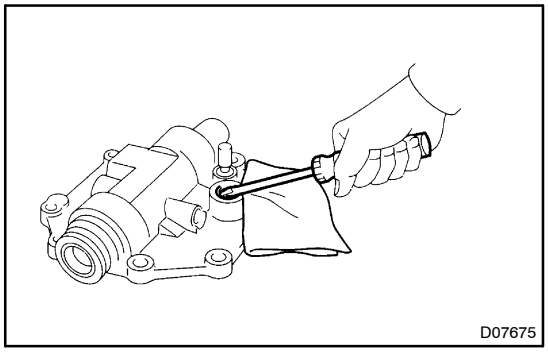


4. REPLACE SELECT OUTER LEVER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

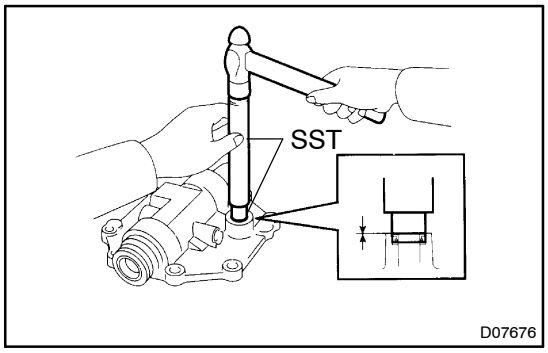


(b) Using SST and a hammer, drive in a new oil seal.
SST 09950–60010 (09951–00200) 09950–70010 (09951–07150)
Drive in depth:
0 – 1.0 mm (0 – 0.039 in.)

(c) Apply MP grease to the oil seal.

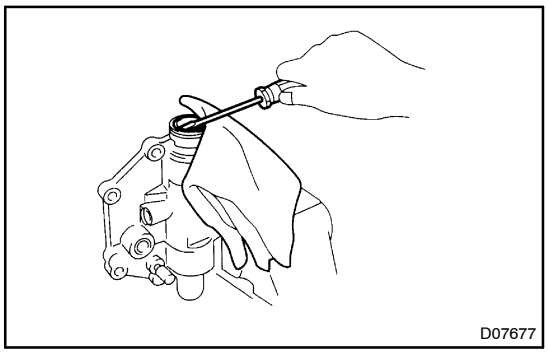

5. REPLACE SHIFT OUTER LEVER OIL SEAL

(a) Using a screwdriver, pry out the oil seal.

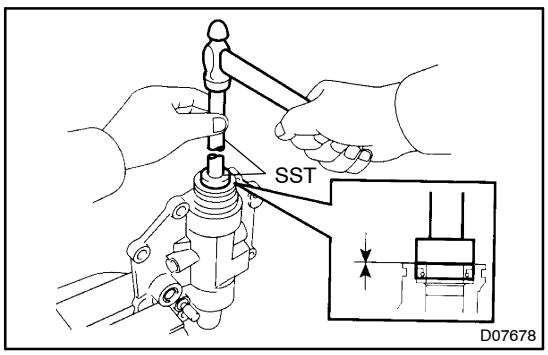

(b) Using SST and a hammer, drive in a new oil seal.
SST 09950–60010 (09951–00220, 09951–00320) 09950–60020 (09952–06010) 09950–70010 (09951–07150)
Drive in depth:
–0.2 – 0.6 mm (–0.008 – 0.024 in.)

(c) Apply MP grease to the oil seal.