
SA1OI–01


# REMOVAL

**1. REMOVE FRONT WHEEL**

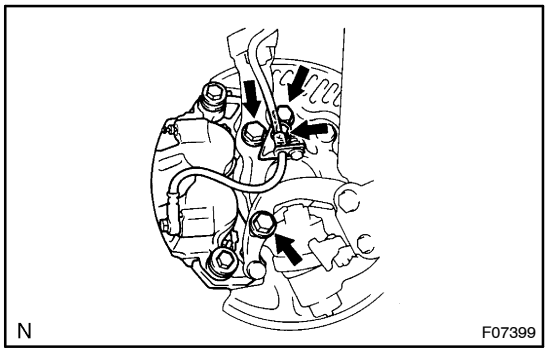



**2. w/ Disc brake:**
**REMOVE BRAKE CALIPER**

(a) Remove the bolt and disconnect the flexible hose from the steering knuckle.
(b) Remove the 3 bolts and brake caliper.
(c) Support the brake caliper securely.

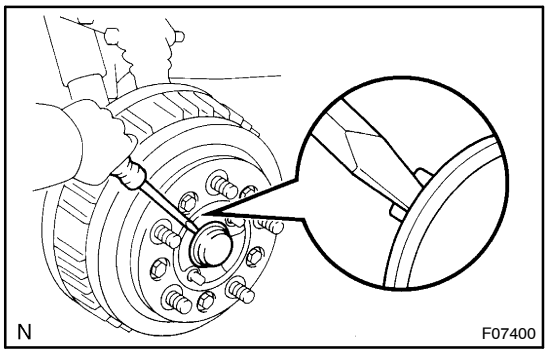


**3. REMOVE GREASE CAP**

Using a screwdriver, remove the grease cap.

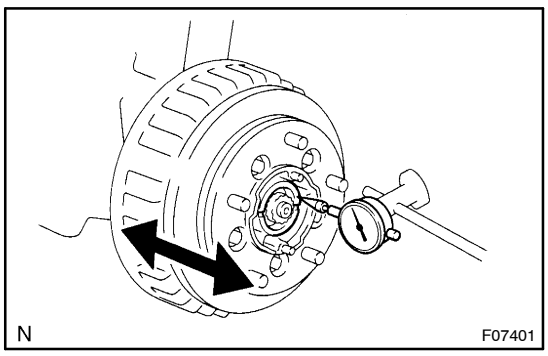



**4. CHECK AXLE HUB AXIAL PLAY**

Using a dial indicator, check the axial play near the center of the axle hub.


**Maximum: 0.05 mm (0.0020 in.)**

If the axial play exceeds the maximum, check the hub bearing preload or replace the hub bearings.

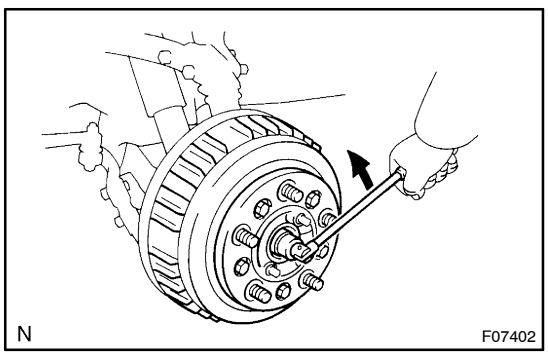


**5. REMOVE AXLE HUB**


(a) Remove the cotter pin and lock cap.
(b) Using socket wrench (35 mm), remove the adjusting nut.

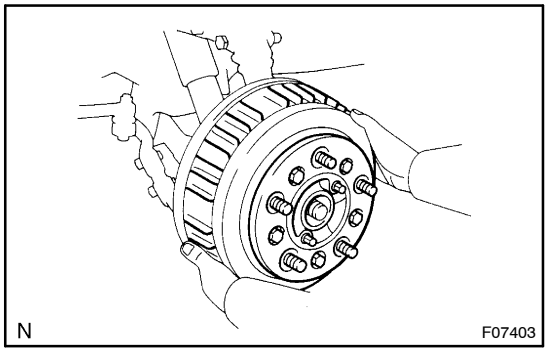


(c) Remove the claw washer, outer bearing and axle hub with drum/disc.

**NOTICE:**

**Be careful not to drop the outer bearing.**

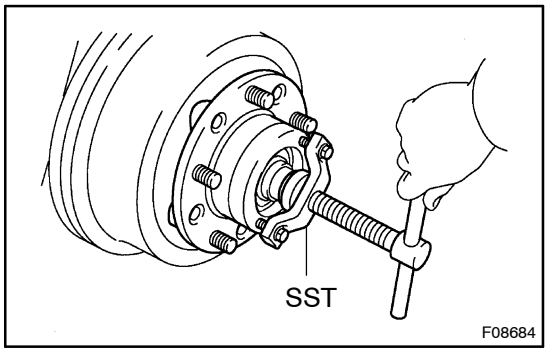


If the axle hub with drum/disc can not be removed by hand, use SST to remove it.

SST 09510–36010