
SA1OJ–01


DISASSEMBLY

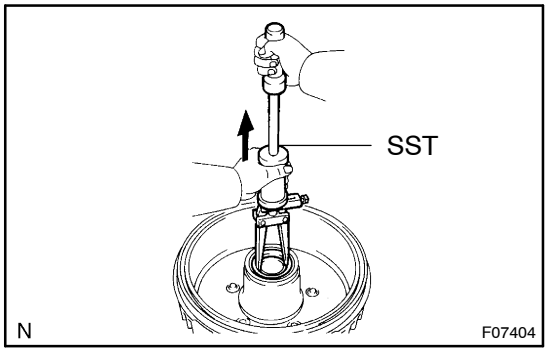

1. REMOVE OIL SEAL AND BEARING

(a) Using SST, remove the oil seal.
SST 09308–00010

(b) Remove the bearing from the axle hub.

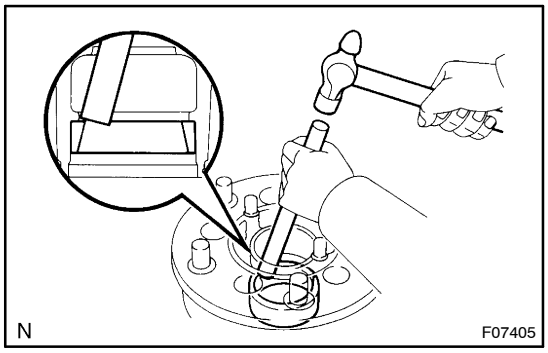

2. REMOVE BEARING OUTER RACES


(a) Using a brass bar and hammer, remove the inside bearing outer race.

NOTICE:

w/ ABS:

Be careful not to damage the ABS speed sensor rotor.

(b) Employ the same manner described above to the outer side.

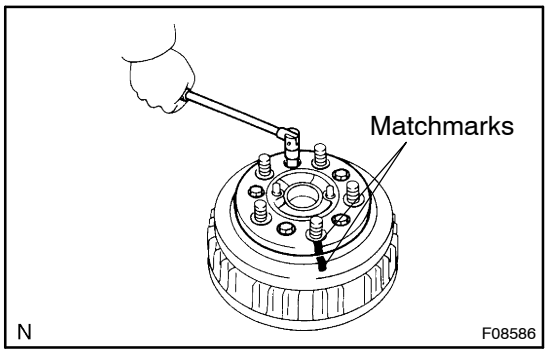

3. REMOVE BRAKE DRUM OR DISC

(a) Place the matchmarks on the drum/disc and axle hub.

(b) Remove the 5 bolts and drum/disc.