
SA1OD–01

REMOVAL

1. REMOVE REAR WHEEL

2. REMOVE REAR AXLE SHAFT (See Pub. No. RM339E on page SA–43)

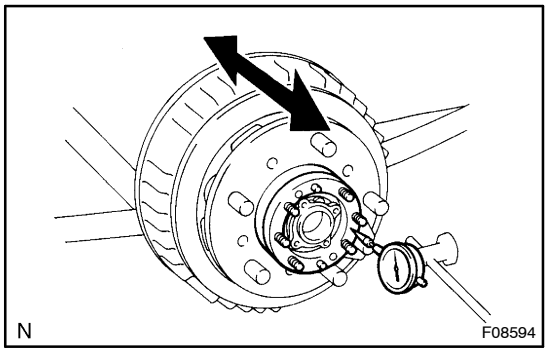

3. CHECK AXLE HUB AXIAL PLAY


Using a dial indicator, check the axle hub axial play.

Maximum: 0.10 mm (0.0039 in.)


If the axial play exceeds the maximum, check the hub bearing preload or replace the hub bearings.

4. REMOVE BEARING LOCK NUT

(a) Remove the 2 screws and lock nut plate.

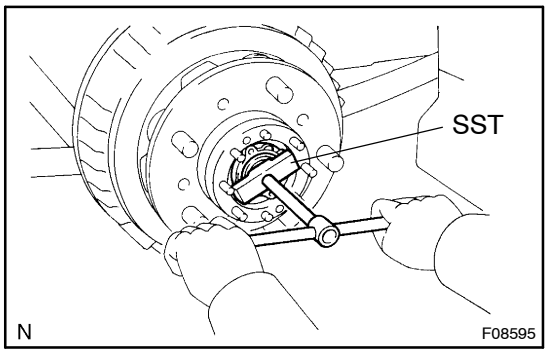

(b) Using SST, remove the bearing lock nut.
SST 09513–36020

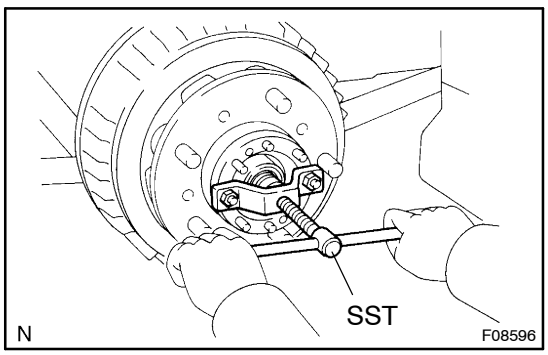

5. REMOVE AXLE HUB

Using SST, remove the axle hub with drum and outer bearing.
SST 09510–36010

NOTICE:

Be careful not to drop the outer bearing.