
SA1OE–01


DISASSEMBLY

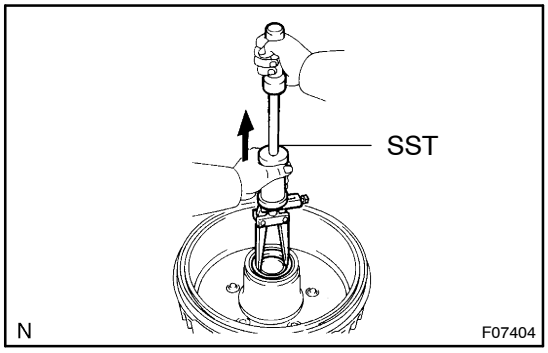

1. REMOVE OIL SEAL AND BEARING

(a) Using SST, remove the oil seal.
SST 09308–00010

(b) Remove the plate and inner bearing.

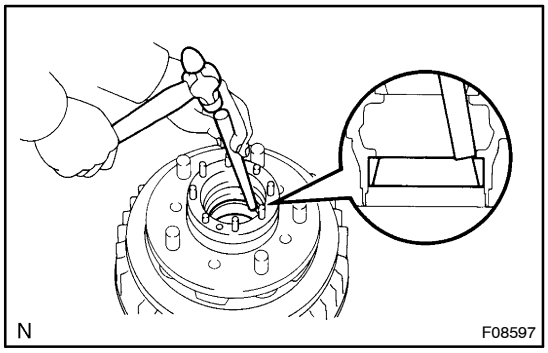

2. REMOVE BEARING OUTER RACES


(a) Using a brass bar and hammer, remove the inside bearing outer race.

NOTICE:

w/ ABS:

Be careful not to damage the ABS speed sensor rotor.

(b) Employ the same manner described above to the outer side.

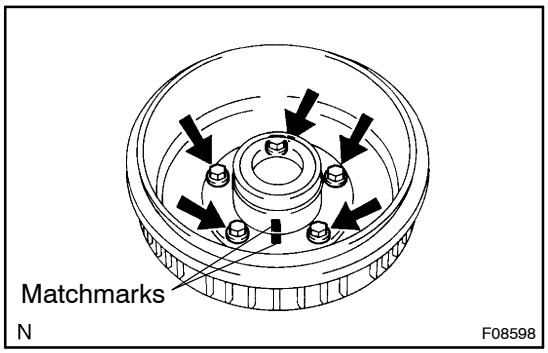

3. REMOVE BRAKE DRUM

(a) Place the matchmarks on the brake drum and axle hub.

(b) Remove the 5 bolts and drum.