
SR0XX–01

REMOVAL

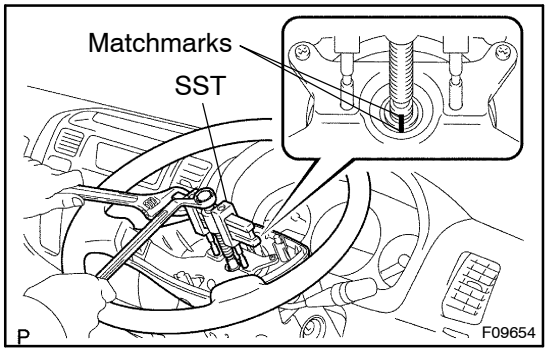

1. REMOVE STEERING WHEEL PAD

Remove the screw and steering wheel pad.

2. REMOVE STEERING WHEEL

(a) Remove the steering wheel set nut.

(b) Place matchmarks on the steering wheel and main shaft assembly.

(c) Using SST, remove the steering wheel.

SST 09950–50012 (09951–05010, 09952–05010, 09953–05020, 09954–05020)

3. REMOVE UPPER AND LOWER COLUMN COVERS

Remove the 4 screws, upper and lower column covers.


4. REMOVE COMBINATION SWITCH

(a) Disconnect the combination switch connectors.

(b) Remove the 4 screws and combination switch.


5. REMOVE STEERING COLUMN ASSEMBLY

(a) Disconnect the ignition switch connector.

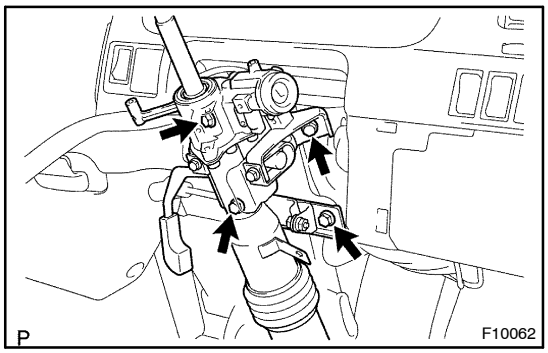

(b) Remove the 4 column assembly set bolts.

(c) Remove the 4 steering column lower tube set bolts.

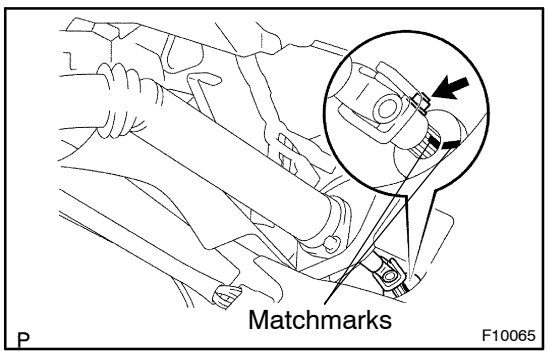

(d) Place the matchmarks on the main shaft assembly and worm shaft after lifting main shaft assembly.

(e) Remove the bolt and steering column assembly.