SR0XZ–01


INSPECTION


NOTICE:

When using vise, do not over tighten it.

1. INSPECT STEERING LOCK OPERATION

Check that the steering lock mechanism operates properly.

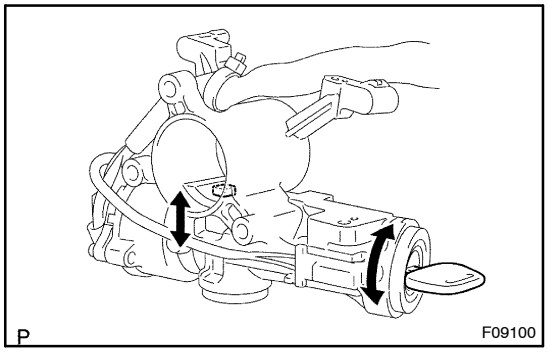

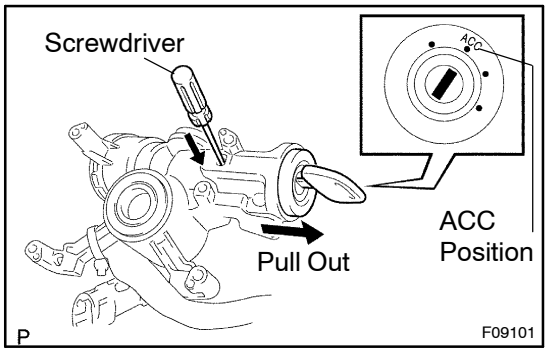

2. IF NECESSARY, REPLACE KEY CYLINDER

(a) Place the ignition key at the ACC position.

(b) Using a screwdriver, push down the stop pin of the cylinder, and pull out the key cylinder.

(c) Install a new cylinder.

HINT:


Make sure the key is at the ACC position.

3. INSPECT IGNITION SWITCH (See Pub. No. RM339E on page BE–13)

4. IF NECESSARY, REPLACE IGNITION SWITCH

(a) Remove the 2 screws and ignition switch.

(b) Install a new switch with the 2 screws.

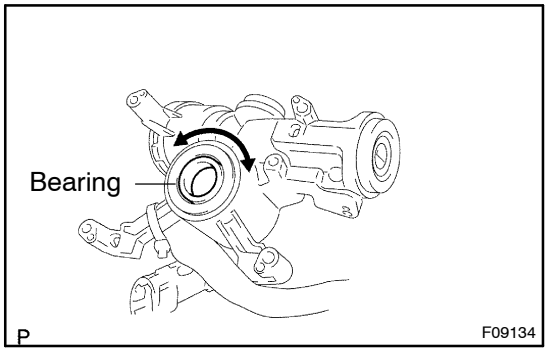


5. INSPECT BEARING

(a) Check the bearing rotation condition and check for abnormal noise.

If the bearing is worn or damaged, replace the column upper bracket.

(b) Coat the bearing with molybdenum disulfide lithium base grease.

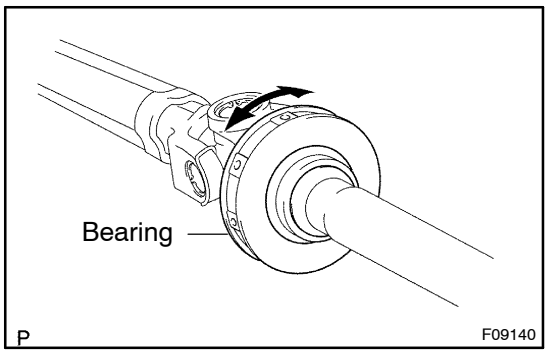

6. INSPECT BEARING BLOCK

(a) Check the bearing block rotation conditions of the main shaft assembly and check for abnormal noise.

If necessary, replace bearing.

(b) Coat the bearing block with molybdenum disulfide lithium base grease.