
SR0Y1–01

INSTALLATION

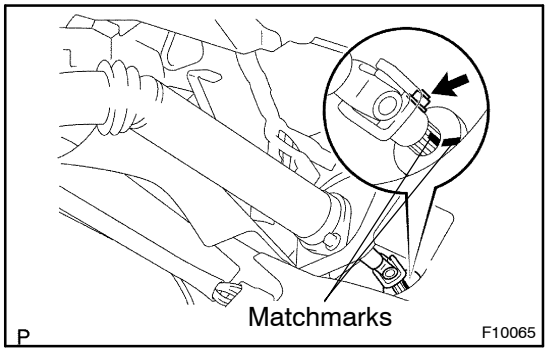


1. INSTALL STEERING COLUMN ASSEMBLY

(a) Align the matchmarks on the steering column assembly and worm shaft.

(b) Install the bolt.
Torque: 36 N·m (360 kgf·cm, 26 ft·lbf)

(c) Install the 4 steering column lower tube set bolts.
Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

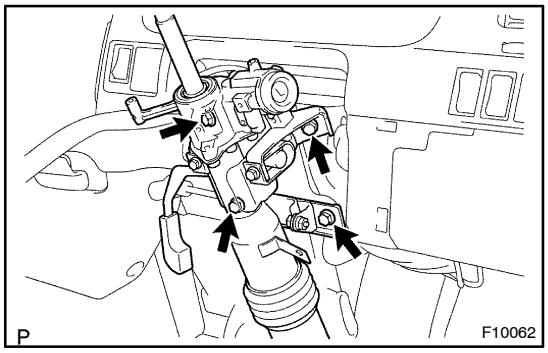

(d) Install the 4 column assembly set bolts.
Torque: 12 N·m (120 kgf·cm, 9 ft·lbf)

(e) Connect the ignition switch connector.

2. INSTALL COMBINATION SWITCH

(a) Install the combination switch with the 4 screws.

(b) Connect the combination switch connectors.

3. INSTALL UPPER AND LOWER COLUMN COVERS

Install the upper and lower column covers with the 4 screws.

4. INSTALL STEERING WHEEL

(a) Align the matchmarks on the steering wheel and main shaft assembly.

(b) Install the steering wheel set nut.
Torque: 34 N·m (350 kgf·cm, 25 ft·lbf)

5. INSTALL STEERING WHEEL PAD

Install the steering wheel pad with the screw.