
SR0Y3–01

REMOVAL

1. REMOVE ENGINE UNDER COVER

Remove the 6 bolts and engine under cover.

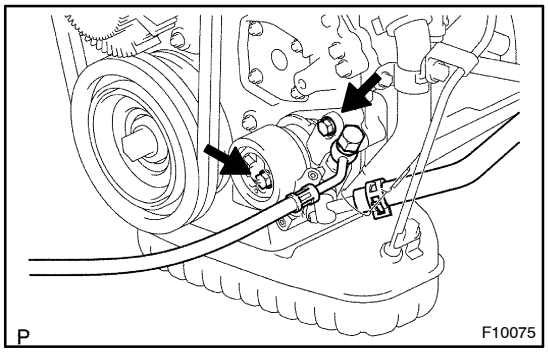

2. DISCONNECT RETURN HOSE

Remove the clip and disconnect the return hose.

3. DISCONNECT PRESSURE FEED TUBE

Remove the union bolt and 2 gaskets.

4. REMOVE PS VANE PUMP ASSEMBLY

(a) Remove the 2 bolts and PS vane pump assembly.

(b) Remove the O–ring from the vane pump assembly.