
SR0YA–01

REMOVAL

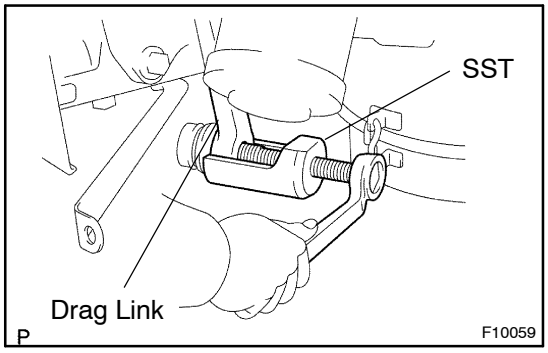

1. DISCONNECT DRAG LINK


(a) Remove the cotter pin and nut.

(b) Using SST, disconnect the drag link from the pitman arm.
SST 09610–20012

2. DISCONNECT STEERING MAIN SHAFT ASSEMBLY (See page SR–3)

3. DISCONNECT TUBE CLAMP

Remove the bolt.

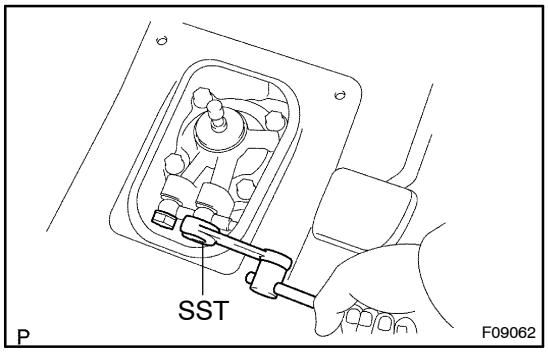

4. DISCONNECT PRESSURE FEED TUBE AND RETURN TUBE

(a) Using SST, disconnect the pressure feed tube.
SST 09631–22020

(b) Using SST, disconnect the return tube.
SST 09631–22020

5. REMOVE PS GEAR ASSEMBLY

Remove the 4 bolts, nuts and washers.