
ENGINE

DI4DW–03

HOW TO PROCEED WITH TROUBLESHOOTING

Troubleshoot in accordance with the procedure on the following page.

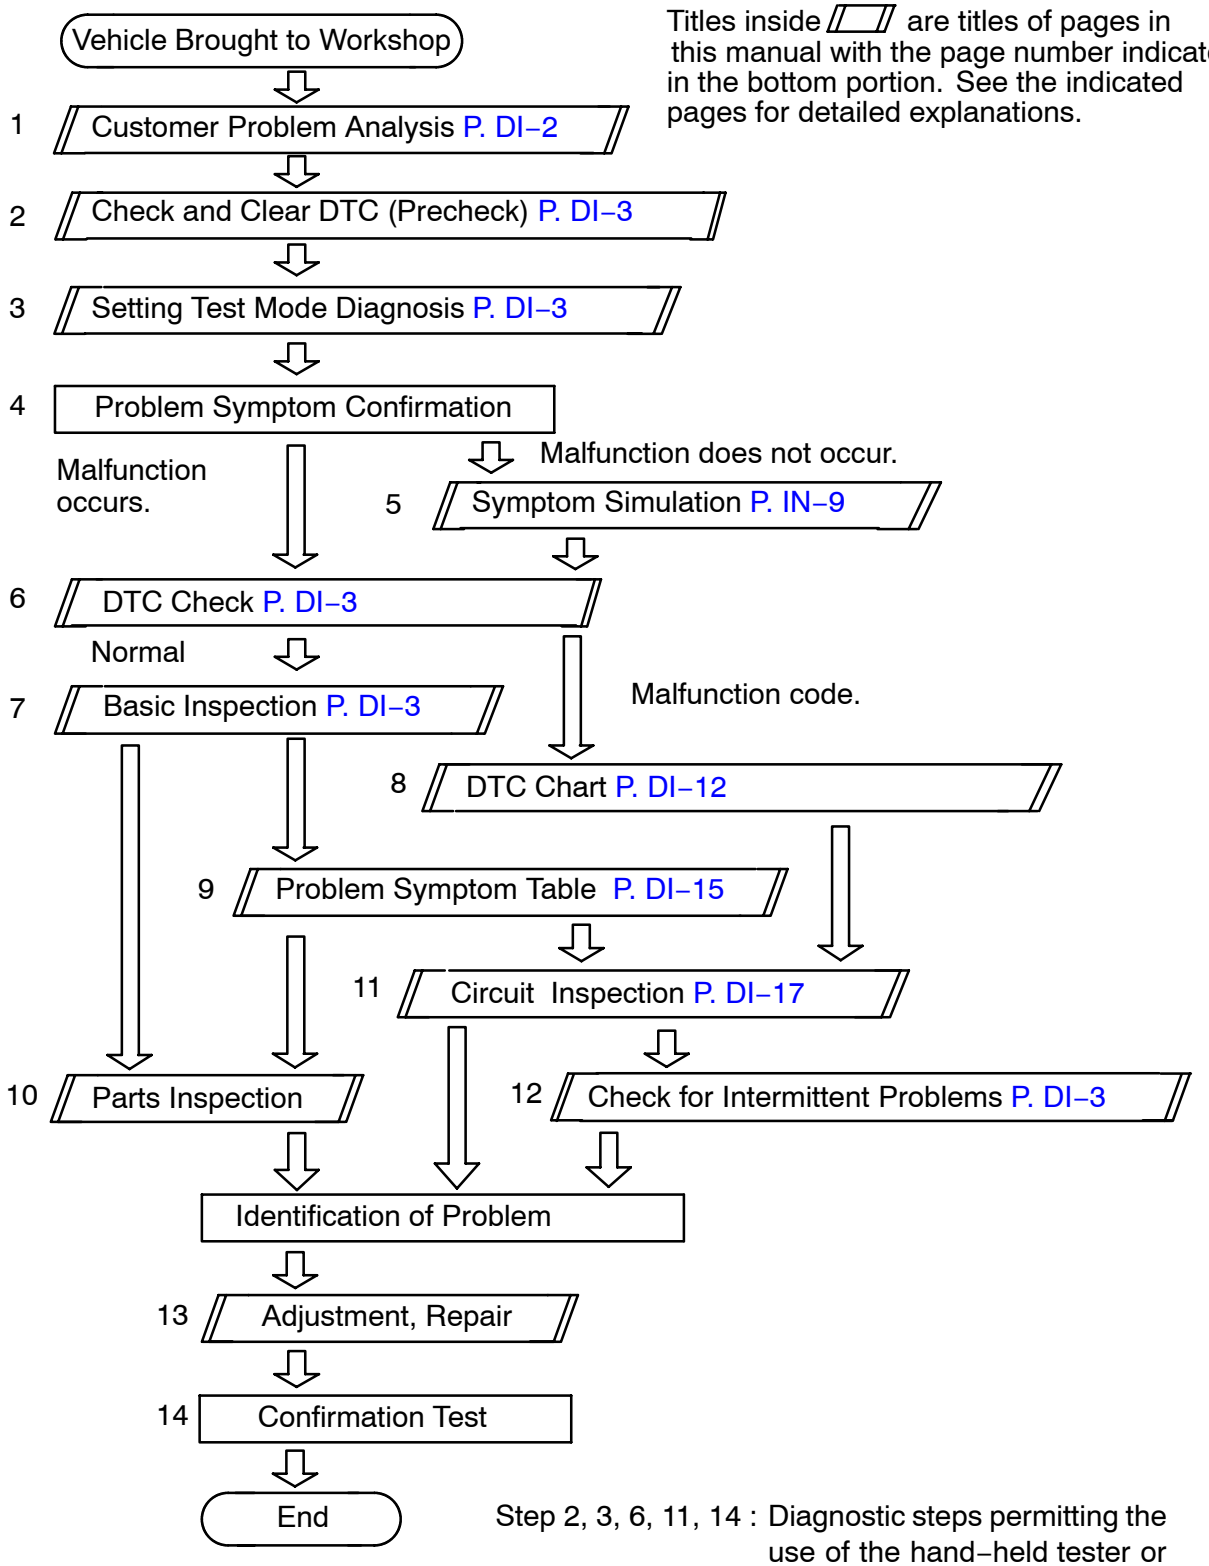

Titles inside ▱ are titles of pages in this manual with the page number indicated in the bottom portion. See the indicated pages for detailed explanations.

Step 2, 3, 6, 11, 14 : Diagnostic steps permitting the use of the hand–held tester or break–out box.