
SF00O–03

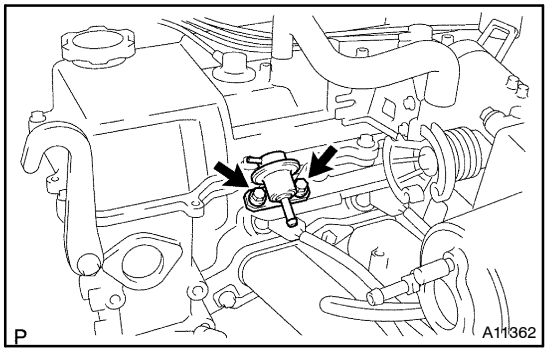

REMOVAL

1. DISCONNECT VACUUM SENSING HOSE FROM FUEL PRESSURE REGULATOR

2. DISCONNECT FUEL RETURN HOSE FROM FUEL PRESSURE REGULATOR

HINT:

Put a suitable container or shop towel under the pressure regulator.

3. REMOVE FUEL PRESSURE REGULATOR

(a) Remove the 2 bolts and fuel pressure regulator.
Torque: 8.0 N·m (80 kgf·cm, 71 in.·lbf)

(b) Remove the O–ring.

HINT:

At the time of installation please refer to the following item.
Install the pressure regulator with a new gasket.