
SF15L–01

REMOVAL

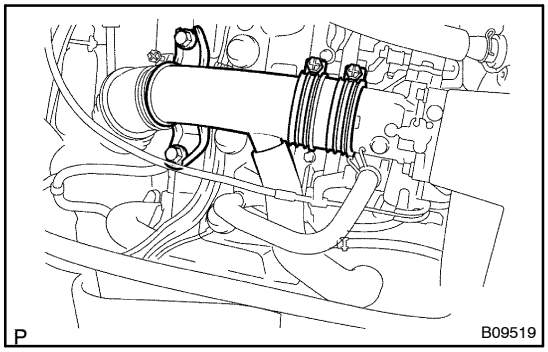


1. DRAIN ENGINE COOLANT

2. DISCONNECT ACCELERATOR CABLE FROM THROTTLE BODY

3. REMOVE INTAKE AIR CONNECTOR

Remove the 2 bolts, hose clamp and intake air connector.

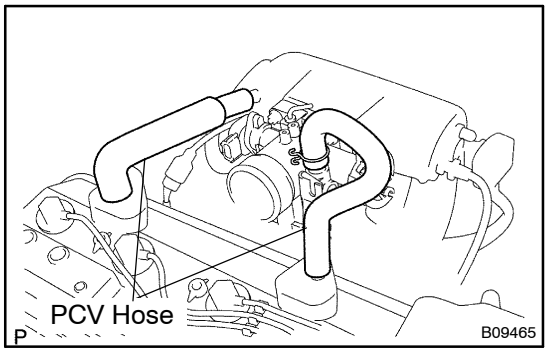


4. REMOVE PCV HOSES

5. REMOVE THROTTLE BODY

(a) Disconnect the throttle position sensor connector.

(b) Disconnect the ISC valve connector.

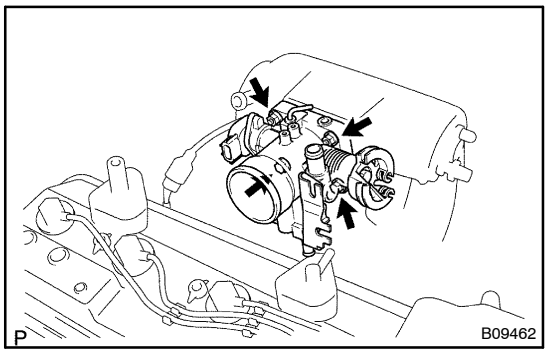

(c) Remove the 2 bolts, 2 nuts, and disconnect the throttle body from the air intake chamber.


Torque: 20 N·m (200 kgf·cm, 14 ft·lbf)

(d) Remove the throttle body gasket.

HINT:

At the time of installation please to the following item.

Install the throttle body with a new gasket.

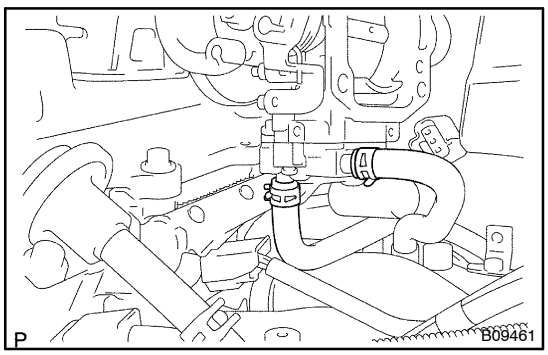

(e) Disconnect the water bypass hoses from the throttle body, and remove the throttle body.