
IDLE SPEED CONTROL (ISC) VALVE

FI0P2–01

ON–VEHICLE INSPECTION

INSPECT ISC VALVE OPERATION

(a) Initial conditions:
- Engine at normal operating temperature
- Idle speed set correctly
- Transmission in neutral position

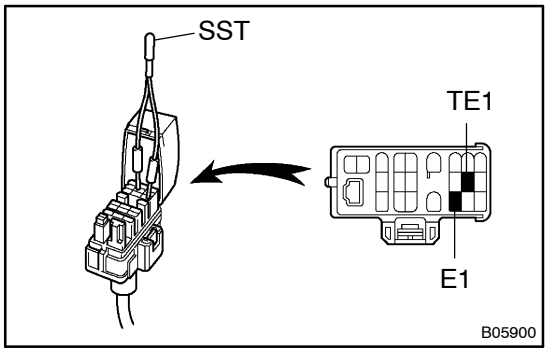

(b) Using SST, connect terminals TE1 and E1 of the check connector.
SST 09843–18020

(c) After engine speed are kept at 1,000 – 1,500 rpm for 5 seconds, check that they return to idle speed.

If the engine speed operation is not as specified, check the ISC valve, wiring and ECU.

(d) Remove the SST from the check connector.
SST 09843–18020