
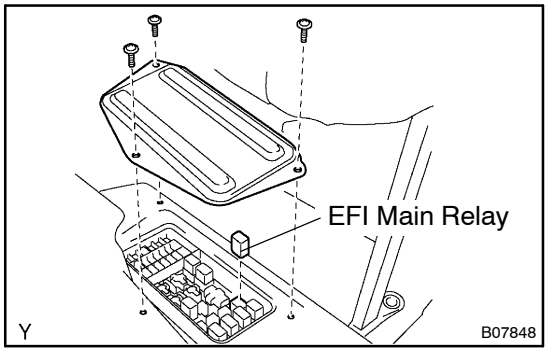


EFI MAIN RELAY

FI0KR–02

INSPECTION

1. **REMOVE RELAY BOX COVER**
2. **REMOVE EFI MAIN RELAY (Marking: EFI)**

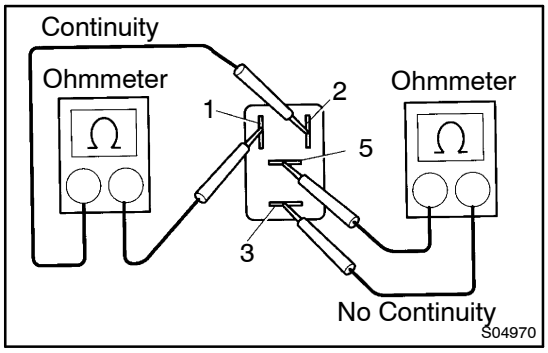


3. **INSPECT EFI MAIN RELAY CONTINUITY**

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

(b) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

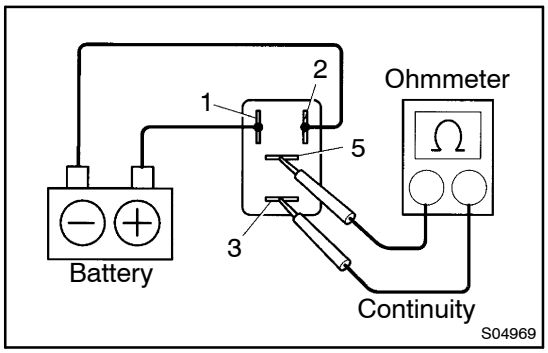

4. **INSPECT EFI MAIN RELAY OPERATION**

(a) Apply battery voltage across terminals 1 and 2.

(b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

5. **REINSTALL EFI MAIN RELAY**
6. **REINSTALL RELAY BOX COVER**