
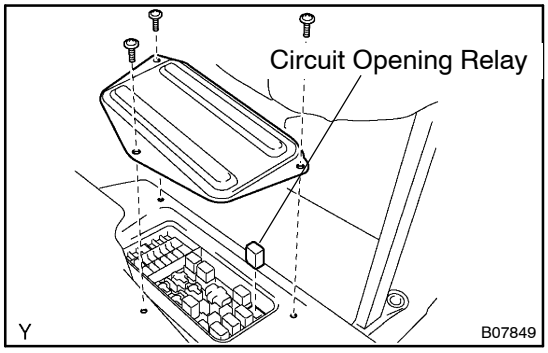


CIRCUIT OPENING RELAY

FI0KS–02

INSPECTION

1. **REMOVE RELAY BOX COVER**
2. **REMOVE CIRCUIT OPENING RELAY (Marking: C/OPN)**

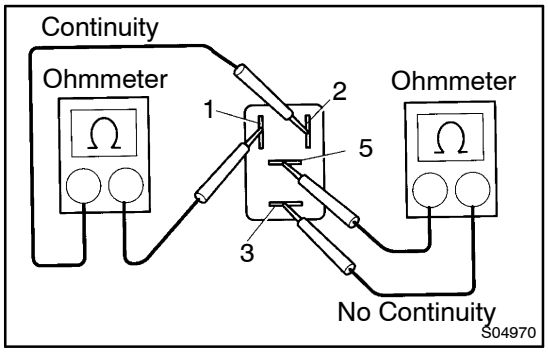


3. **INSPECT CIRCUIT OPENIG RELAY CONTINUITY**

(a) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

(b) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

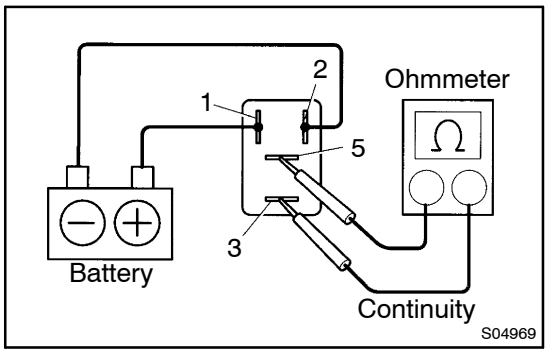

4. **INSPECT CIRCUIT OPENING RELAY OPERATION**

(a) Apply battery voltage across terminals 1and 2.

(b) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

5. **REINSTALL CIRCUIT OPENING RELAY**
6. **REINSTALL RELAY BOX COVER**