
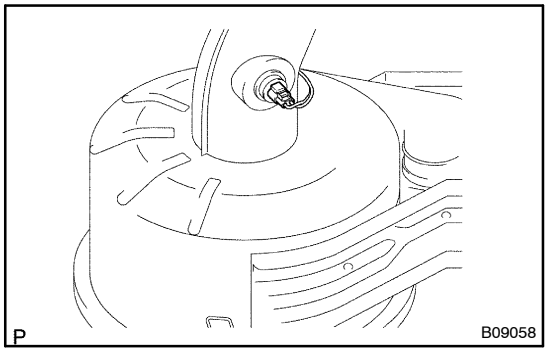


INTAKE AIR TEMPERATURE SENSOR

INSPECTION

FI0KT–02

1. REMOVE INTAKE AIR TEMP. SENSOR

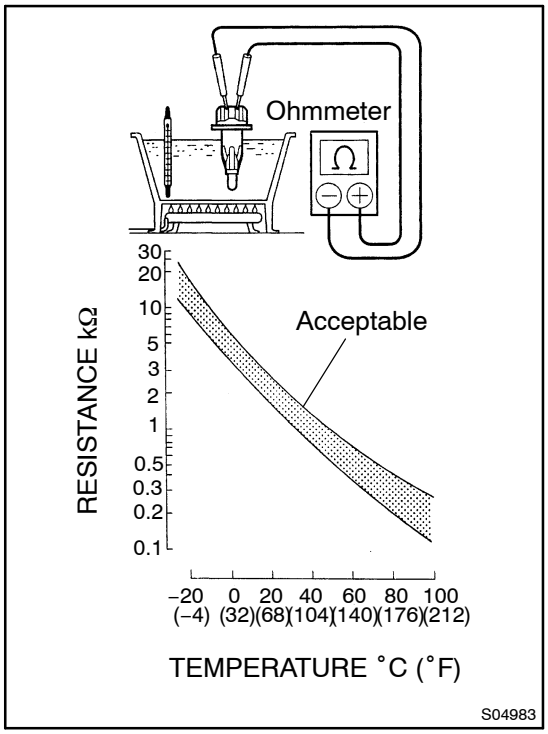

2. INSPECT INTAKE AIR TEMP. SENSOR

Using an ohmmeter, measure the resistance between the terminals.

Resistance: Refer to the chart graph

If the resistance is not as specified, replace the intake air temp. sensor.

3. REINSTALL INTAKE AIR TEMP. SENSOR