
STARTER RELAY

ST0HF–01

INSPECTION

1. REMOVE STARTER RELAY

LOCATION: Inside wall adjacent to center door.

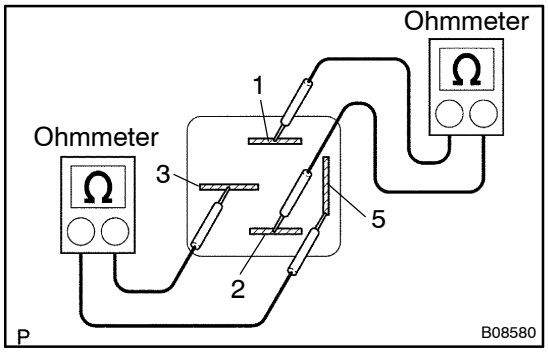

2. INSPECT STARTER RELAY


(a) Inspect the relay continuity.

(1) Using an ohmmeter, check that there is continuity between terminals 1 and 2.

If there is no continuity, replace the relay.

(2) Check that there is no continuity between terminals 3 and 5.

If there is continuity, replace the relay.

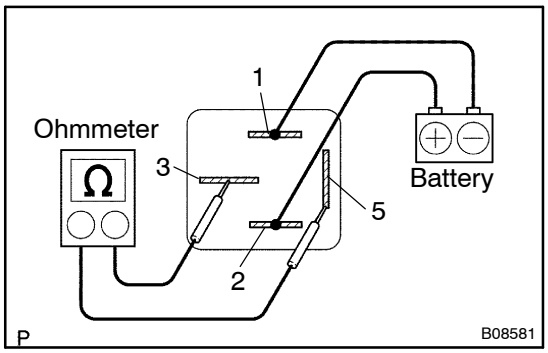

(b) Inspect the the relay operation.

(1) Apply battery voltage across the terminals 1 and 2.

(2) Using an ohmmeter, check that there is continuity between terminals 3 and 5.

If there is no continuity, replace the relay.

3. REINSTALL STARTER RELAY