AC3MI–01


REMOVAL

1. RUN ENGINE AT IDLE SPEED WITH A/C ON FOR APPROX. 10 MINUTES

2. STOP ENGINE

3. DISCONNECT NEGATIVE (–) TERMINAL CABLE FROM BATTERY


4. DISCHARGE REFRIGERANT FROM REFRIGERATION SYSTEM

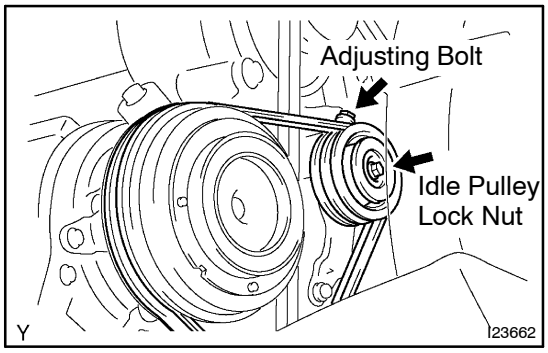

5. REMOVE DRIVE BELTS

(a) Loosen the idle pulley lock nut.

(b) Loosen the drive belt tension by the adjusting bolt, and remove the drive belts.

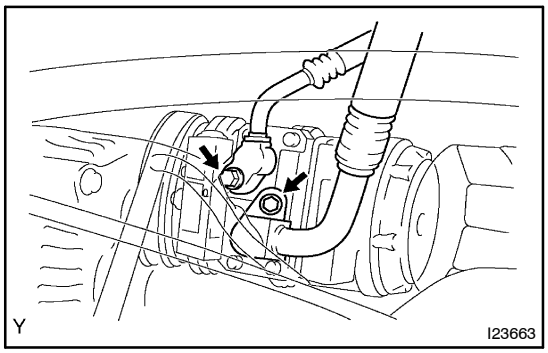


6. DISCONNECT DISCHARGE AND SUCTION HOSES

Remove the 2 bolts and disconnect the both hoses from the compressor.

NOTICE:

Cap the open fittings immediately to keep moisture or dirt out of the system.

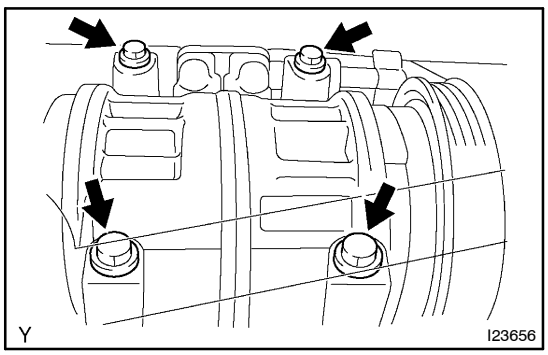

7. REMOVE COMPRESSOR

(a) Disconnect the connector.

(b) Remove the 4 bolts, (discharge and suction hoses – 15B–FTE) and compressor.