
AC3MN–01

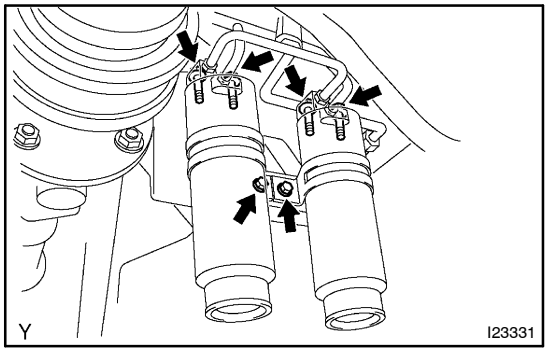

INSTALLATION

1. INSTALL RECEIVERS

Install the 2 receivers to the receiver holder.

NOTICE:

Do not remove the blind plugs before connecting.

2. CONNECT LIQUID TUBES

(a) Remove the caps.

(b) Lubricate 4 new O–rings with compressor oil and install them to the liquid tubes.

(c) Connect the 4 liquid tubes to the 2 receivers.
Torque: 4.6 N·m (47 kgf·cm 40 in.·lbf)

3. IF RECEIVER IS REPLACED, ADD COMPRESSOR OIL TO COMPRESSOR
Add: 20 cc (0.71 fl.oz.)
Compressor oil: ND–OIL 8 or equivalent

4. EVACUATE AIR IN REFRIGERATION SYSTEM AND CHARGE WITH REFRIGERANT
Specified amount:
1,950 ± 50 g (68.78 ± 1.76 oz.) for LHD
2,000 ± 50 g (70.54 ± 1.76 oz.) for RHD

5. INSPECT FOR LEAKAGE OF REFRIGERANT

Using a gas leak detector, check leakage of refrigerant.
If there is leakage, check the tightening torque at the joints.